
Kinetis SDK v.1.3 Demo Applications User's Guide

Freescal Semiconductor, Inc.

Document Number: KSDK13DEMOUG

Rev. 0

Sept 2015





Contents

Chapter 1 Introduction

Chapter 2 ADC Hardware Trigger Demo

2.1	Overview	3
2.1.1	Trigger by PIT	3
2.1.2	Trigger by PDB	3
2.1.3	Trigger by LPTMR	3
2.1.4	Input signal for ADC	4
2.2	Supported Platforms	4
2.3	System Requirement	6
2.3.1	Hardware requirements	6
2.3.2	Software requirements	6
2.4	Getting Started	6
2.4.1	Hardware configuration	6
2.4.2	Prepare the Demo	7
2.5	Run the demo	7
2.6	Customization Options	7
2.6.1	Default configurations	7
2.6.1.1	ADC configurations	7
2.6.1.2	Sample frequency	8
2.6.2	Configure the number of samples	8
2.6.3	Configure the signal frequency	8
2.6.4	Configure the ADC instance	8
2.6.5	Configure the ADC input pin	8

Section number	Title	Page
Chapter 3		
ADC Low Power Demo		
3.1	Overview	9
3.2	Supported Platforms	9
3.3	System Requirement	10
3.3.1	Hardware requirements	10
3.3.2	Software requirements	10
3.4	Getting Started	10
3.4.1	Prepare the Demo	10
3.4.2	Run the demo	10
Chapter 4		
AFE Qtimer Demo		
4.1	Overview	13
4.2	Supported Platforms	13
4.3	Getting Started	13
4.3.1	Hardware Settings	13
4.3.2	Prepare the Demo	14
4.3.3	Run the demo	14
Chapter 5		
BLDC Sensorless Demo		
5.1	Overview	17
5.2	Supported Platforms	17
5.3	System Requirement	17
5.3.1	Hardware requirements	17
5.3.2	Software requirements	17
5.4	Getting Started	18
5.4.1	Prepare the Demo	19
5.4.2	Run the demo	19

Section number	Title	Page
Chapter 6		
Bubble Level FTM Demo		

6.1	Overview	21
6.2	Supported Platforms	21
6.3	System Requirement	21
6.3.1	Hardware requirements	21
6.3.2	Software requirements	21
6.4	Getting Started	21
6.4.1	Hardware Settings	21
6.4.2	Prepare the Demo	22
6.5	Run the demo	22

Chapter 7

Bubble Level TPM Demo

7.1	Overview	23
7.2	Supported Platforms	23
7.3	System Requirement	23
7.3.1	Hardware requirements	23
7.3.2	Software requirements	23
7.4	Getting Started	24
7.4.1	Hardware Settings	24
7.4.2	Prepare the Demo	24
7.5	Run the demo	24

Chapter 8

DAC ADC Demo

8.1	Overview	25
8.2	Supported Platforms	25
8.3	System Requirement	25
8.3.1	Hardware requirements	25

Section number	Title	Page
8.3.2	Software requirements	26
8.4	Getting Started	26
8.4.1	Hardware configuration	26
8.4.2	Hardware Settings	26
8.4.3	Prepare the Demo	27
8.5	Run the demo	27
8.6	Key Functions	28

Chapter 10 Flash Demo

10.1	Overview	35
10.2	Supported Platforms	35
10.3	System Requirement	36
10.3.1	Hardware requirements	36
10.3.2	Software requirements	36
10.4	Getting Started	37
10.4.1	Prepare the Demo	37
10.5	Commands/Directions	37

Section number	Title	Page
Chapter 11		
FreeMASTER Demo		
11.1	Overview	39
11.2	FreeMASTER Demo Introduction	40
11.2.1	System Requirement	41
11.2.1.1	Hardware requirements	41
11.3	FreeMASTER Demo User's Guide	42
Chapter 12		
FTM PDB ADC Demo		
12.1	Overview	45
12.2	Supported Platforms	45
12.3	System Requirement	45
12.3.1	Hardware requirements	45
12.3.2	Software requirements	45
12.4	Getting Started	45
12.4.1	Hardware Settings	45
12.4.2	Prepare the Demo	46
12.4.3	Run the demo	46
Chapter 13		
Hello World Demo		
13.1	Overview	47
13.2	Supported Platforms	47
13.3	System Requirement	48
13.3.1	Hardware requirements	48
13.3.2	Software requirements	48
13.4	Getting Started	48
13.4.1	Hardware Settings	48
13.4.2	Prepare the Demo	48
13.5	Run the demo	48

Section number	Title	Page
13.6	Communication Interface Settings:	49

Chapter 14 Hello World QSPI Demo

14.1	Overview	51
14.2	Supported Platforms	51
14.3	System Requirement	51
14.3.1	Hardware requirements	51
14.3.2	Software requirements	51
14.4	Getting Started	52
14.4.1	Hardware settings	52
14.4.2	Prepare the example	52
14.4.3	Run the example	53

Chapter 15 Hardware Timer Demo

15.1	Overview	55
15.2	Supported Platforms	55
15.3	System Requirement	56
15.3.1	Hardware requirements	56
15.3.2	Software requirements	56
15.4	Getting Started	56
15.4.1	Prepare the Demo	56
15.4.2	Run the demo	56
15.5	Customization Options	57
15.5.1	Configure the Hardware Timer Used	57
15.5.2	Configure which clock is used by the hardware timer	57
15.5.3	Configure which instance of the module is used	57
15.5.4	Hardware Timer Period	57

Section number	Title	Page
Chapter 16		
I2C Communication Demo		
16.1	Overview	59
16.2	Supported Platforms	59
16.3	System Requirement	60
16.3.1	Hardware requirements	60
16.3.2	Software requirements	60
16.4	Getting Started	60
16.4.1	Hardware configuration	60
16.4.2	Terminal configuration	67
16.4.3	Run the demo	67
Chapter 17		
I2C Demo with RTOS		
17.1	Overview	69
17.2	Supported RTOS	69
17.3	Supported Platforms	69
17.4	System Requirement	71
17.4.1	Hardware requirements	71
17.4.2	Software requirements	71
17.5	Getting Started	71
17.5.1	Build with different RTOS support	71
17.5.2	Hardware configuration	72
17.5.3	Prepare the Demo	83
17.6	Run the demo	83
Chapter 18		
iRTC Comp 1 Hz Demo		
18.1	Overview	85
18.2	Supported Platforms	85

Section number	Title	Page
18.3	System Requirement	85
18.3.1	Hardware requirements	85
18.4	Getting Started	85
18.4.1	Hardware Settings	85
18.4.2	Prepare the Demo	86
18.5	Run the demo	86

Chapter 19

HTTP Server Demo on lwIP TCP/IP Stack

19.1	Overview	87
19.2	Supported RTOS	87
19.3	Supported Hardware	87
19.4	System Requirement	87
19.4.1	Hardware requirements	87
19.4.2	Software requirements	88
19.5	Getting Started	88
19.5.1	Prepare the Demo	88
19.5.2	Network Configuration	88
19.5.3	Run the demo	88

Chapter 20

Ping Demo on lwIP TCP/IP Stack

20.1	Overview	91
20.2	Supported RTOS	91
20.3	Supported Hardware	91
20.4	System Requirement	91
20.4.1	Hardware requirements	91
20.4.2	Software requirements	92
20.5	Getting Started	92
20.5.1	Prepare the Demo	92
20.5.2	Network Configuration	92

Section number	Title	Page
20.6	Run the demo	92

Chapter 21

TCP Echo Demo on lwIP TCP/IP Stack

21.1	Overview	93
21.2	Supported RTOS	93
21.3	Supported Hardware	93
21.4	System Requirement	93
21.4.1	Hardware requirements	93
21.4.2	Software requirements	94
21.5	Getting Started	94
21.5.1	Prepare the Demo	94
21.5.2	Network Configuration	94
21.6	Run the demo	94

Chapter 22

UDP Echo Demo on lwIP TCP/IP Stack

22.1	Overview	97
22.2	Supported RTOS	97
22.3	Supported Hardware	97
22.4	System Requirement	97
22.4.1	Hardware requirements	97
22.4.2	Software requirements	98
22.5	Getting Started	98
22.5.1	Prepare the Demo	98
22.5.2	Network Configuration	98
22.6	Run the demo	98

Section number	Title	Page
Chapter 23		
MMAU Filter Demo		
23.1	Overview	101
23.2	Supported Platforms	101
23.3	System Requirement	101
23.3.1	Hardware requirements	101
23.4	Getting Started	101
23.4.1	Hardware settings	101
23.4.2	Prepare the example	101
23.4.3	Run the example	102

Chapter 24

MMDVSQ Demo

24.1	Overview	105
24.2	Supported Platforms	105
24.3	System Requirement	105
24.3.1	Hardware requirements	105
24.3.2	Software requirements	105
24.4	Getting Started	105
24.4.1	Prepare the Demo	105
24.5	Run the demo	106

Chapter 25

Power Manager HAL Demo

25.1	Overview	107
25.2	Supported Hardware	107
25.3	System Requirement	108
25.3.1	Hardware requirements	108
25.3.2	Software requirements	108
25.4	Getting Started	108

Section number	Title	Page
25.4.1	Hardware Settings	108
25.4.2	Prepare the Demo	108
25.4.3	Run the demo	108
25.4.4	Supported Low Power Modes By Platform	110

Chapter 26 Power Manager RTOS Demo

26.1	Overview	113
26.2	Supported RTOS	113
26.3	Supported Hardware	113
26.4	System Requirements	114
26.4.1	Hardware requirements	114
26.4.2	Software requirements	114
26.5	Getting Started	115
26.5.1	Hardware Settings	115
26.5.2	Prepare the Demo	115
26.5.3	Run the demo	115
26.5.4	Supported Low Power Modes By Platform	116

Chapter 27 RTC Function Demo

27.1	Overview	119
27.2	Supported Hardware	119
27.3	System Requirement	120
27.3.1	Hardware requirements	120
27.3.2	Software requirements	120
27.4	Getting Started	120
27.4.1	Prepare the Demo	120
27.5	Run the demo	121

Section number	Title	Page
	Chapter 28 SAI Demo	
28.1	Overview	123
28.2	Supported Hardware	123
28.3	System Requirement	123
28.3.1	Hardware requirements	123
28.3.2	Software requirements	123
28.4	Getting Started	124
28.4.1	GCC Compiler notes	124
28.4.2	Hardware Settings	124
28.4.3	Prepare the Demo	124
28.5	Run the demo	124
28.6	Key Functions	127

Chapter 29

SLCD basic testing and an Guess Number game

29.1	Overview	131
29.2	Supported Platforms	131
29.3	Getting Started	131
29.3.1	Hardware Settings	131
29.3.2	Prepare the Demo	131
29.4	Run the demo	132
29.5	Communication Interface Settings:	132

Chapter 30

SLCD Low Power Demo

30.1	Overview	133
30.2	Supported Hardware	133
30.3	System Requirement	133

Section number	Title	Page
30.3.1	Hardware requirements	133
30.4	Getting Started	133
30.4.1	Prepare the Demo	133
30.5	Run the demo	134

Chapter 31 Thermistor Lab Demo

31.1	Overview	135
31.2	Supported Hardware	135
31.3	System Requirement	135
31.3.1	Hardware requirements	135
31.3.2	Software requirements	135
31.4	Getting Started	135
31.4.1	Prepare the Demo	135
31.4.2	Demo Code Overview	136
31.4.2.1	ADC Differential Mode of Operation	137

Chapter 32 Heating, Ventilating, and Air Conditioning on lwIP TCP/IP Stack

32.1	Overview	139
32.2	Supported RTOS	139
32.3	Supported Hardware	139
32.4	System Requirement	139
32.4.1	Hardware requirements	139
32.4.2	Software requirements	140
32.4.3	Software requirements	140
32.5	Getting Started	140
32.5.1	Prepare the Demo	140
32.5.2	Network Configuration	140
32.5.3	Run the demo	140

Section number	Title	Page
Chapter 33 ADC16 Example		
33.1	Overview	143
33.2	Supported Platforms	143
33.3	System Requirement	144
33.3.1	Hardware requirements	144
33.3.2	Software requirements	144
33.4	Getting Started	144
33.4.1	Hardware settings	144
33.4.2	Prepare the example	144
33.4.3	Run the example	144

Chapter 34 AFE Example

34.1	Overview	147
34.2	Supported Platforms	147
34.3	System Requirement	147
34.3.1	Hardware requirements	147
34.4	Getting Started	147
34.4.1	Hardware settings	147
34.4.2	Prepare the example	148
34.4.3	Run the example	148

Chapter 35 CMP Example

35.1	Overview	149
35.2	Supported Platforms	149
35.3	System Requirement	149
35.3.1	Hardware requirements	149
35.3.2	Software requirements	149
35.4	Getting Started	150

Section number	Title	Page
35.4.1	Hardware configuration	150
35.4.2	Hardware settings	150
35.4.3	Prepare the example	150
35.4.4	Run the example	150

Chapter 36 CMT Example

36.1	Overview	153
36.2	Supported Platforms	153
36.3	System Requirement	153
36.3.1	Hardware requirements	153
36.3.2	Software requirements	153
36.4	Getting Started	153
36.4.1	Hardware settings	153
36.4.2	Prepare the example	154
36.4.3	Run the example	154

Chapter 37 COP Example

37.1	Overview	155
37.2	Supported Platforms	155
37.3	System Requirement	155
37.3.1	Hardware requirements	155
37.3.2	Software requirements	155
37.4	Getting Started	156
37.4.1	Hardware settings	156
37.4.2	Prepare the example	156
37.4.3	Run the example	156

Chapter 38 DAC Example

38.1	Overview	157
-------------	---------------------------	------------

Section number	Title	Page
38.2	Supported Platforms	157
38.3	System Requirement	157
38.3.1	Hardware requirements	157
38.3.2	Software requirements	158
38.4	Getting Started	158
38.4.1	Hardware settings	158
38.4.2	Prepare the example	158
38.4.3	Run the example	158

Chapter 39 DMA Example

39.1	Overview	159
39.2	Supported Platforms	159
39.3	System Requirement	159
39.3.1	Hardware requirements	159
39.3.2	Software requirements	160
39.4	Getting Started	160
39.4.1	Hardware settings	160
39.4.2	Prepare the example	160
39.4.3	Run the example	160

Chapter 40 DSPI Example with other methods

40.1	Overview	163
40.2	Supported Platforms	163
40.3	System Requirement	164
40.3.1	Hardware requirements	164
40.3.2	Software requirements	164
40.4	Getting Started	164
40.4.1	Hardware settings	164
40.4.2	Prepare the example	168
40.4.3	Run the example	168

Section number	Title	Page
	Chapter 41 EDMA Example	
41.1	Overview	173
41.2	Supported Platforms	173
41.3	System Requirement	173
41.3.1	Hardware requirements	173
41.3.2	Software requirements	174
41.4	Getting Started	174
41.4.1	Hardware settings	174
41.4.2	Prepare the example	174
41.4.3	Run the example	174

Chapter 42 EWM Example

42.1	Overview	177
42.2	Supported Platforms	177
42.3	System Requirement	177
42.3.1	Hardware requirements	177
42.3.2	Software requirements	178
42.4	Getting Started	178
42.4.1	Hardware settings	178
42.4.2	Prepare the example	178
42.4.3	Run the example	178

Chapter 43 FLASH Example

43.1	Overview	179
43.2	Supported Platforms	179
43.3	System Requirement	180
43.3.1	Hardware requirements	180
43.3.2	Software requirements	180

Section number	Title	Page
43.4	Getting Started	180
43.4.1	Hardware settings	180
43.4.2	Prepare the example	180
43.4.3	Run the example	181

Chapter 44 FlexCAN Example

44.1	Overview	183
44.2	Supported Platforms	183
44.3	System Requirement	183
44.3.1	Hardware requirements	183
44.3.2	Software requirements	183
44.4	Getting Started	184
44.4.1	Hardware settings	184
44.4.2	Prepare the example	184
44.4.3	Run the example	184
44.4.3.1	FlexCAN loopback	184
44.4.3.2	FlexCAN network	185

Chapter 45 FlexIO simulated I2C Example with other methods

45.1	Overview	187
45.2	Supported Platforms	187
45.3	System Requirement	187
45.3.1	Hardware requirements	187
45.3.2	Software requirements	187
45.4	Getting Started	187
45.4.1	Hardware settings	187
45.4.2	Prepare the example	189
45.4.3	Run the example	189

Section number	Title	Page
Chapter 46		
Flexio I2S Example with other methods		
46.1	Overview	191
46.2	Supported Platforms	191
46.3	System Requirement	191
46.3.1	Hardware requirements	191
46.3.2	Software requirements	191
46.4	Getting Started	191
46.4.1	Hardware settings	191
46.4.2	Prepare the example	193
46.4.3	Run the example	193

Chapter 47

FlexIO IRDA Example

47.1	Overview	195
47.2	Supported Platforms	195
47.3	System Requirement	195
47.3.1	Hardware requirements	195
47.4	Getting Started	195
47.4.1	Hardware Settings	195
47.4.2	Prepare the Demo	196
47.5	Run the demo	197
47.5.1	Customization Options	197

Chapter 48

FlexIO-simulated SPI Example with other methods

48.1	Overview	199
48.2	Supported Platforms	199
48.3	System Requirement	199
48.3.1	Hardware requirements	199
48.3.2	Software requirements	199

Section number	Title	Page
48.4	Getting Started	200
48.4.1	Hardware settings	200
48.4.2	Prepare the example	202
48.4.3	Run the example	202

Chapter 49 FlexIO-simulated UART Example with other methods

49.1	Overview	205
49.2	Supported Platforms	205
49.3	System Requirement	205
49.3.1	Hardware requirements	205
49.3.2	Software requirements	205
49.4	Getting Started	206
49.4.1	Hardware settings	206
49.4.2	Prepare the example	207
49.4.3	Run the example	207
49.4.3.1	FLEXIO_UART interrupt way	207
49.4.3.2	FLEXIO_UART interrupt way	208

Chapter 50 FTM Example

50.1	Overview	209
50.2	Supported Platforms	209
50.3	System Requirement	209
50.3.1	Hardware requirements	209
50.3.2	Software requirements	210
50.4	Getting Started	210
50.4.1	Hardware settings	210
50.4.2	Prepare the example	210
50.4.3	Run the example	210

Section number	Title	Page
	Chapter 51	
	GPIO Example	
51.1	Overview	211
51.2	Supported Platforms	211
51.3	System Requirement	212
51.3.1	Hardware requirements	212
51.3.2	Software requirements	212
51.4	Getting Started	212
51.4.1	Hardware settings	212
51.4.2	Prepare the example	212
51.4.3	Run the example	212

Chapter 52

I2C Example with other methods

52.1	Overview	215
52.2	Supported Platforms	215
52.3	System Requirement	216
52.3.1	Hardware requirements	216
52.3.2	Software requirements	216
52.4	Getting Started	216
52.4.1	Hardware settings	216
52.4.2	Prepare the example	222
52.4.3	Run the example	223
52.4.3.1	I2C blocking	223
52.4.3.2	I2C non-blocking	223
52.4.3.3	I2C callback	224
52.4.3.4	I2C polling	224

Chapter 53

iRTC Example

53.1	Overview	225
53.2	Supported Platforms	225

Section number	Title	Page
53.3	System Requirement	225
53.3.1	Hardware requirements	225
53.4	Getting Started	225
53.4.1	Hardware settings	225
53.4.2	Prepare the example	225
53.4.3	Run the example	226

Chapter 54

Low Power Serial Communication Interface (LPSCI) Example with Other Methods

54.1	Overview	227
54.2	Supported Platforms	227
54.3	System Requirement	227
54.3.1	Hardware requirements	227
54.3.2	Software requirements	228
54.4	Getting Started	228
54.4.1	Hardware settings	228
54.4.2	Prepare the example	228
54.4.3	Run the example	228
54.4.3.1	LPSCI blocking	228
54.4.3.2	LPSCI non-blocking	228
54.4.3.3	LPSCI DMA blocking	229
54.4.3.4	LPSCI DMA non-blocking	229
54.4.3.5	LPSCI polling	229

Chapter 55

LPTMR Example

55.1	Overview	231
55.2	Supported Platforms	231
55.3	System Requirement	232
55.3.1	Hardware requirements	232
55.3.2	Software requirements	232
55.4	Getting Started	232
55.4.1	Hardware settings	232

Section number	Title	Page
55.4.2	Prepare the example	232
55.4.3	Run the example	232

Chapter 56

Low Power Universal Asynchronous Receiver/Transmitter (LPUART) Example with other methods

56.1	Overview	235
56.2	Supported Platforms	235
56.3	System Requirement	235
56.3.1	Hardware requirements	235
56.3.2	Software requirements	236
56.4	Getting Started	236
56.4.1	Hardware settings	236
56.4.2	Hardware settings	236
56.4.3	Prepare the example	237
56.4.4	Run the example	237
56.4.5	Run the example	237
56.4.5.1	FLEXIO_UART interrupt way	237
56.4.5.2	LPUART non-blocking	238
56.4.5.3	LPUART DMA blocking	238
56.4.5.4	LPUART DMA non-blocking	238
56.4.5.5	LPUART polling	238

Chapter 57

LTC AES Example

57.1	Overview	239
57.2	Supported Platforms	239
57.3	System Requirement	239
57.3.1	Hardware requirements	239
57.3.2	Software requirements	239
57.4	Getting Started	239
57.4.1	Hardware settings	239
57.4.2	Prepare the example	239
57.4.3	Run the example	240

Section number	Title	Page
Chapter 58 MMAU Example		
58.1	Overview	243
58.2	Supported Platforms	243
58.3	System Requirement	243
58.3.1	Hardware requirements	243
58.4	Getting Started	243
58.4.1	Hardware settings	243
58.4.2	Prepare the example	243
58.4.3	Run the example	244

Chapter 59 MPU Example

59.1	Overview	245
59.2	Supported Platforms	245
59.3	System Requirement	245
59.3.1	Hardware requirements	245
59.3.2	Software requirements	245
59.4	Getting Started	246
59.4.1	Hardware settings	246
59.4.2	Prepare the example	246
59.4.3	Run the example	246

Chapter 60 PDB Example

60.1	Overview	247
60.2	Supported Platforms	247
60.3	System Requirement	247
60.3.1	Hardware requirements	247
60.3.2	Software requirements	248
60.4	Getting Started	248

Section number	Title	Page
60.4.1	Hardware settings	248
60.4.2	Prepare the example	248
60.4.3	Run the example	248

Chapter 61 PIT Example

61.1	Overview	249
61.2	Supported Platforms	249
61.3	System Requirement	250
61.3.1	Hardware requirements	250
61.3.2	Software requirements	250
61.4	Getting Started	250
61.4.1	Hardware settings	250
61.4.2	Prepare the example	250
61.4.3	Run the example	250

Chapter 62 QSPI Example with other methods

62.1	Overview	253
62.2	Supported Platforms	253
62.3	System Requirement	253
62.3.1	Hardware requirements	253
62.3.2	Software requirements	253
62.4	Getting Started	253
62.4.1	Hardware settings	253
62.4.2	Prepare the example	254
62.4.3	Run the example	254

Chapter 63 QuadTmr Example

63.1	Overview	255
63.2	Supported Platforms	255

Section number	Title	Page
63.3	System Requirement	255
63.3.1	Hardware requirements	255
63.4	Getting Started	255
63.4.1	Hardware settings	255
63.4.2	Prepare the example	256
63.4.3	Run the example	256

Chapter 64 RNGA Example

64.1	Overview	257
64.2	Supported Platforms	257
64.3	System Requirement	257
64.3.1	Hardware requirements	257
64.3.2	Software requirements	258
64.4	Getting Started	258
64.4.1	Hardware settings	258
64.4.2	Prepare the example	258
64.4.3	Run the example	258

Chapter 65 RTC Example

65.1	Overview	259
65.2	Supported Platforms	259
65.3	System Requirement	260
65.3.1	Hardware requirements	260
65.3.2	Software requirements	260
65.4	Getting Started	260
65.4.1	Hardware settings	260
65.4.2	Prepare the example	260
65.4.3	Run the example	260

Section number	Title	Page
Chapter 66 SDHC SDCard Example		
66.1	Overview	263
66.2	Supported Platforms	263
66.3	System Requirement	263
66.3.1	Hardware requirements	263
66.3.2	Software requirements	263
66.4	Getting Started	264
66.4.1	Hardware settings	264
66.4.2	Prepare the example	264
66.4.3	Run the example	264

Chapter 67 SDRAMC Example

67.1	Overview	267
67.2	Supported Platforms	267
67.3	System Requirement	267
67.3.1	Hardware requirements	267
67.3.2	Software requirements	267
67.4	Getting Started	267
67.4.1	Hardware settings	267
67.4.2	Prepare the example	268
67.4.3	Run the example	268

Chapter 68 SLCD Example

68.1	Overview	269
68.2	Supported Platforms	269
68.3	System Requirement	269
68.3.1	Hardware requirements	269
68.3.2	Software requirements	269

Section number	Title	Page
68.4	Getting Started	269
68.4.1	Hardware settings	269
68.4.2	Prepare the example	269
68.4.3	Run the example	270

Chapter 69 Smart Card Example

69.1	Overview	271
69.2	Supported Platforms	271
69.3	System Requirement	271
69.3.1	Hardware requirements	271
69.3.2	Software requirements	271
69.4	Getting Started	272
69.4.1	Hardware settings	272
69.4.2	Prepare the example	272
69.4.3	Run the example	272

Chapter 70 SPI Example with other methods

70.1	Overview	275
70.2	Supported Platforms	275
70.3	System Requirement	275
70.3.1	Hardware requirements	275
70.3.2	Software requirements	276
70.4	Getting Started	276
70.4.1	Hardware settings	276
70.4.2	Prepare the example	279
70.4.3	Run the example	280
70.4.3.1	SPI blocking Master - Slave	280
70.4.3.2	SPI non-blocking Master - Slave	280
70.4.3.3	SPI DMA blocking Master - Slave	281
70.4.3.4	SPI DMA non-blocking Master - Slave	282
70.4.3.5	SPI polling Master - Slave	283
70.4.3.6	SPI loopback	283

Section number	Title	Page
Chapter 71 SPI SDCard Example		
71.1	Overview	285
71.2	Supported Platforms	285
71.3	System Requirement	285
71.3.1	Hardware requirements	285
71.3.2	Software requirements	285
71.4	Getting Started	285
71.4.1	Hardware settings	285
71.4.2	Prepare the example	286
71.4.3	Run the example	286

Chapter 72 TPM Example

72.1	Overview	289
72.2	Supported Platforms	289
72.3	System Requirement	289
72.3.1	Hardware requirements	289
72.3.2	Software requirements	289
72.4	Getting Started	290
72.4.1	Hardware settings	290
72.4.2	Prepare the example	290
72.4.3	Run the example	290

Chapter 73 TSI Example

73.1	Overview	291
73.2	Supported Platforms	291
73.3	System Requirement	291
73.3.1	Hardware requirements	291
73.3.2	Software requirements	291

Section number	Title	Page
73.4	Getting Started	291
73.4.1	Hardware settings	291
73.4.2	Prepare the example	292
73.4.3	Run the example	292

Chapter 74

Universal Asynchronous Receiver/Transmitter (UART) Example with other methods

74.1	Overview	293
74.2	Supported Platforms	293
74.3	System Requirement	294
74.3.1	Hardware requirements	294
74.3.2	Software requirements	294
74.4	Getting Started	294
74.4.1	Hardware settings	294
74.4.2	Prepare the example	294
74.4.3	Run the example	295
74.4.3.1	UART blocking	295
74.4.3.2	UART non-blocking	295
74.4.3.3	UART DMA blocking	295
74.4.3.4	UART DMA non-blocking	295
74.4.3.5	UART polling	296

Chapter 75

WDOG Example

75.1	Overview	297
75.2	Supported Platforms	297
75.3	System Requirement	297
75.3.1	Hardware requirements	297
75.3.2	Software requirements	298
75.4	Getting Started	298
75.4.1	Hardware settings	298
75.4.2	Prepare the example	298
75.4.3	Run the example	298



Chapter 1

Introduction

Kinetis SDK (KSDK) includes applications which provide examples that show how to use KSDK drivers. This document describes the applications and provides instructions to configure each application (if available). The document also describes the required hardware setup and steps to run the applications.

For the latest version of this and other Kinetis SDK documents, see the Kinetis SDK homepage (www.freescale.com/ksdk).



Chapter 2

ADC Hardware Trigger Demo

This demo application demonstrates how to use the ADC driver with various hardware triggers.

2.1 Overview

This is an ADC demo application which shows how to use different hardware trigger sources to handle the ADC hardware trigger function. These trigger sources are supported:

- PIT (Periodic Interrupt Timer)
- PDB (Programmable Delay Block)
- LPTMR (Low Power Timer)
- TPM (Timer PWM Module)

2.1.1 Trigger by PIT

The Periodic Interrupt Timer (PIT) is a period timer source and the ADC hardware trigger event. Because the PIT trigger event can only be used to trigger one of the ADC channels (mux A or B), this demo uses PIT as a trigger source for the ADCx channel 0. The PIT triggers the ADC in a fixed frequency and the demo gets the ADC conversion result in the ADC Conversion Complete (COCO) interrupt. TWR-KV10Z32 and TWR-KV11Z75M does not support PIT trigger, due to no PIT on the silicon.

2.1.2 Trigger by PDB

The Programmable Delay Block (PDB) is a continuous trigger event for ADC. It uses the software trigger as the first trigger input event and turns on the PDB continuous mode to generate a period trigger source. Because the PDB can trigger different channels inside one ADC instance, this demo shows the Ping-Pong triggering which occurs by sampling the channel 0/1 with the PDB Pre-trigger A/B channel. FRDM-KL26Z and MRB-KW01 does not support PDB trigger, because PDB is not present neither on KL26 nor on KW01 silicon.

2.1.3 Trigger by LPTMR

The Low Power Timer (LPTMR) is a period timer source and the ADC hardware trigger event. Because the LPTMR trigger event can only be used to trigger one of the ADC channels (channel 0 or 1), this demo uses the LPTMR as a trigger source for the ADCx channel 0. The LPTMR triggers the ADC in a fixed frequency and the demo gets the ADC conversion result in the ADC Conversion Complete (COCO) interrupt.

Supported Platforms

2.1.4 Input signal for ADC

Use the DAC module to generate a sine wave as the ADC input on the DAC0_OUT pin. Normally, the DAC0_OUT is internally connected to the ADC0_SE23 (DAC0_OUT is a source of ADC0_SE23), there is no need to connect any external signals for this demo. For TWR-KV11, ADC1_SE4 is used

Boards listed below need external sine wave connected either because of lack of the DAC hardware feature support or lack of the SoC/Board signal connection support. For FRDM-KV10Z, use external generator to generate a sine wave on the ADC0_SE6 pin (J2-1).

- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KW40Z
- MRB-KW01
- TWR-KL43Z48M
- TWR-KM34Z75M
- TWR-KV10Z32

This demo samples the input digital signal from the ADC0_SE23 (ADC0_SE6 on FRDM-KV10Z) pin and records each sample point with the appropriate amplitude. After 2 period samples are complete, it prints out the rough shape of the signal wave on the debug console like a primitive oscilloscope.

2.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the KSDK ADC Hardware Trigger demo.

The `adc_lptmr_trigger` demo Supported Platforms:

- FRDM-K22F
- FRDM-K64F
- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW40Z
- MRB-KW01

- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KM34Z75M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M

The adc_pdb_trigger demo Supported Platforms:

- FRDM-K22F
- FRDM-K64F
- FRDM-KV10Z
- FRDM-KV31F
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KM34Z75M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M

The adc_pit_trigger demo Supported Platforms:

- FRDM-K22F
- FRDM-K64F
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV31F
- FRDM-KW40Z
- MRB-KW01
- TWR-K21D50M
- TWR-K21F120M

Getting Started

- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KM34Z75M
- TWR-KV31F120M

The adc_tpm_trigger demo Supported Platforms:

- FRDM-KL03
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- MRB-KW01
- TWR-KL43Z48M

2.3 System Requirement

2.3.1 Hardware requirements

- J-Link ARM®
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

2.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/adc_hw_trigger/<hw_trigger>/<toolchain>.
- Library dependencies: ksdk_platform_lib

2.4 Getting Started

2.4.1 Hardware configuration

For the MRB-KW01: It is necessary to short jumpers J10 and J11 to connect the ADC references. If the A-DCO_SE23 or internal DAC connection is used it is necessary to disconnect J7 to open PTE30 connection with the RESET of the RADIO part. Also analog function for PTE30 - DAC output is necessary on the mrb-kw01 (default is GPIO for RADIO part reset).

2.4.2 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For more detailed instructions, see a Kinetis SDK User's Guide for your board.

2.5 Run the demo

1. Select and open one project from the four projects available: `adc_pit_trigger`, `adc_lptmr_trigger` and `adc_pdb_trigger`.
2. Open the UART console on a PC and also connect external sine wave generator to ADC input if necessary.
3. Download and run the program on the target.
4. The signal waveform is displayed on the console.

2.6 Customization Options

This demo application is customizable to show different kinds of input signal waves.

2.6.1 Default configurations

The configuration macro is located in the `adc_hw_trigger.h` header file.

2.6.1.1 ADC configurations

1. Use ADC0 instance.
2. Use ADC_SE23 input pin as sample pin. (ADC_SE6 for FRDM-KV10, ADC1_SE4 For TWR-K-V11)
3. Use VREFH/L as reference voltage.

For TWR-KM34Z75M

1. Use ADC0 instance.
2. Use ADC_SE15 input pin as sample pin.
3. Use VREFH/L as reference voltage.

Customization Options

2.6.1.2 Sample frequency

The default sample rate is 1000 Hertz, which enables the demo application to get 100 samples per two periods. To change the sample rate, see the next section.

2.6.2 Configure the number of samples

Printing of the signal wave shape depends on the console size. A console can be 100x40. To get the best printing effect, align the number of samples to the console column numbers and convert the amplitude range to the [0, row - 1] range. The console column number should be same as sample numbers. Configuring the number of samples means configuring the console column size:

```
#define CHART_ROWS 30U // chart row for sampled data
#define CHART_COLS 100U // chart column for sampled data
#define NR_SAMPLES 100U // number of samples in one period
```

2.6.3 Configure the signal frequency

Change the following macro to configure the desired frequency in Hz units.

```
#define INPUT_SIGNAL_FREQ 20U // in Hz
```

2.6.4 Configure the ADC instance

Change the ADC_INST macro to configure the ADC instance you want to use.

```
#define ADC_INST 0U // ADC instance
```

2.6.5 Configure the ADC input pin

If you do not use the DAC0_OUT as a input signal, disable the macro in the project:

```
// #USE_DAC_OUT_AS_SOURCE
```

After disabling the DAC output, configure one ADC input source pin to get the signal:

```
#define ADC_INPUT_CHAN 23U // default input signal channel
#define ADC_INPUT_CHAN 6U // default input signal channel for FRDM-KV10
#define ADC_INPUT_CHAN 4U // default input signal channel for TWR-KV11
```

For TWR-KM34Z75M

```
#define ADC_INPUT_CHAN 15U // default input signal channel
```

Chapter 3

ADC Low Power Demo

This demo application demonstrates how to use the ADC drivers in low power modes.

3.1 Overview

The ADC Low Power Demo project is a demonstration program that uses the KSDK software. The microcontroller is set to a very low power stop (VLPS) mode, and every 500 ms an interrupt wakes up the ADC module and takes the current temperature of the microcontroller. While the temperature remains within boundaries, both LEDs are off. If the temperature is higher than average, a red LED comes on. If it is lower, a blue LED (orange LED for TWR-KV10, TWR-KV11Z75M) comes on. This demo provides an example to show how ADC works during a VLPS mode and a simple debugging, "golden" project.

3.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the Kinetis SDK ADC Low Power demo.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KM34Z75M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M

Getting Started

- TWR-KW24D512
- USB-KW24D512
- USB-KW40Z

3.3 System Requirement

3.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

3.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/adc_low_power/<toolchain>.
- Library dependencies: ksdk_platform_lib

3.4 Getting Started

The ADC Low Power project is designed to work with the Tower System or in a stand alone setting.

3.4.1 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For more detailed instructions, see a Kinetis SDK User's Guide for your board.

3.4.2 Run the demo

1. Set your target board in a place where the temperature is constant.
2. Press the reset button on your development board.

3. "ADC LOW POWER DEMO" message and some instructions should be displayed on the terminal.
4. Wait until the green or white LED light turns on.
5. Increment or decrement the temperature to see the changes.

Chapter 4

AFE Qtimer Demo

This demo application demonstrates two AFE channels sampling external analog signals and one channel can monitor AC signal's frequency.

4.1 Overview

The AFE Qtimer Demo project is a demonstration program that uses the KSDK software. It implements the following features:

- Two AFE channels(channel 2&3) sample external analog signals.
- If the external analog signal is AC signal, with internal CMP1 and Qtimer0, one AFE channel(channel 2) can also monitor the external signal's frequency. This is typical use case to monitor the grid frequency(e.g., 50 Hz) in metering field.
- By default users use debug console to output AFE channel values sampling and frequency monitoring.
- Implement Freemaster interface on this demo, users can use Freemaster GUI to check the result as another option.
- Freemaster download: http://www.freescale.com/webapp/sps/download/license.-jsp?colCode=FMASW&location=null&fsrch=1&sr=6&pageNum=1&Parent-_nodeId=&Parent_pageType=

4.2 Supported Platforms

This Tower System module is supported by the KSDK AFE Qtimer demo.

- TWR-KM34Z75M

4.3 Getting Started

4.3.1 Hardware Settings

- Use external power supply to input DC analog signals to AFE channel 2&3(J31 pin10/12/14/16), AFE sample can support both single-ended or differential mode;

Board	Connects To	DC Power Supply
AFE Channel 2 EXT_SD_ADP2 J31 pin10	->	DC Power source 1 positive end
AFE Channel 2 EXT_SD_ADM2 J31 pin12	->	DC Power source 1 negative end
AFE Channel 3 EXT_SD_ADP3 J31 pin14	->	DC Power source 2 positive end

Getting Started

AFE Channel 3 EXT_SD_ADM3 J31 pin16	->	DC Power source 2 negative end
--	----	--------------------------------

- To monitor frequency, use a signal generator to input the AC sine signal to the AFE channel 2(J31 pin10/12).

Board	Connects To	Signal Generator
AFE Channel 2 EXT_SD_ADP2 J31 pin10	->	Signal Generator positive end
AFE Channel 2 EXT_SD_ADM2 J31 pin12	->	Signal Generator negative end

4.3.2 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

4.3.3 Run the demo

1.AFE two channels voltage sampling

- Use the DC power supply to input the two external signals from 0~500 mV to AFE channel 2&3. The converted values (value_ch2 and value_ch3) change with the external input on the debug console.

2.External AC signal frequency monitoring.

- Use a signal generator to input one sine waveform signal (e.g., Amplitude=500 mV,Offset=0 mV, Frequency=50 Hz) to AFE channel 2. The frequency value is captured by the "freq_tmr" variable on the debug console. The AC signal frequency ranges between about 25 Hz~1000 Hz. The recommended input value is the 50 Hz for the grid frequency simulation.

The printed log is displayed in the terminal window as shown below.

```
value_ch2 = 0xffbe5eb0
value_ch3 = 0x13d28
freq_tmr = 50.0
value_ch2 = 0xffbe56ea
```

```
value_ch3 = 0x15a3e  
freq_tmr = 49.975  
value_ch2 = 0xffbe5567  
value_ch3 = 0x15893  
freq_tmr = 50.1
```


Chapter 5

BLDC Sensorless Demo

This demo application demonstrates the software portion (hardware/chip independent) of the 16-bit implementation of a sensorless three phase brushless DC (BLDC) motor control application. The demo supports both IAR and KEIL versions.

5.1 Overview

The BLDC sensorless Control Demo project is a demonstration program that uses the KSDK software. The application software uses the concept of an isolated algorithm software and hardware. This software approach enables easy porting of an application to other devices or platforms. The application software is divided in two sections:

- BLDC motor control algorithm process input variables to output variables and flags.
- TWR board hardware and microprocessor serves as a bridge between hardware peripheral modules and BLDC motor control software algorithm.

5.2 Supported Platforms

This Tower System module is supported by the Kinetis software development kit.

- TWR-KV10Z32
- TWR-KV11Z75M

5.3 System Requirement

5.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

5.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/bldc_demo/<toolchain>.
- Library dependencies: ksdk_platform_lib

Getting Started

5.4 Getting Started

This table lists the FTM channels and MCU pins and corresponding LEDs for this demo application. This table also lists which connections should be made (if any) to ensure proper demo operation.

1. TWR-MC-LV3PH jumper settings

jumper	position
J2	1-2
J3	1-2
J10	2-3
J11	2-3
J12	2-3
J13	2-3
J14	1-2

2. TWR-KV10Z32 jumper settings

jumper	position	jumper	position	jumper	position
J1	2-3	J10	1-2	J21	3-4
J2	short	J11	open	J22	3-4
J3	2-3	J12	open	J25	open
J4	short	J13	open	J26	short
J5	short	J14	open	J27	short
J7	1-2	J18	2-3	J28	short
J8	1-2	J19	2-3	J29	1-2
J9	1-2	J20	1-2	–	–

1. TWR-KV11Z75M jumper settings

jumper	position	jumper	position	jumper	position
J1	short	J9	1-2, 3-4	J505	3-4
J2	1-2	J10	short	J506	3-4
J4	1-2	J11	1-2	J523	open
J5	5-6, 7-8	J12	short	J512	1-2
J6	1-2, 3-4	J13	1-2	J519	1-2
J7	open	J14	short	J517	2-J518
J8	1-2	J17	2-3	J524	open

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board. Note that, because of board limitations, if the power is not supplied to OpenSDA, the MCU reset pin is in low

level.

5.4.1 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Connect three phases of the BLDC motor to J5 in the TWR-MC-LV3PH board.
5. Supply 24 V digital power to J1 in the TWR-MC-LV3PH board.
6. Either press the reset button on your board or launch the debugger in the IDE to start running the demo.

For detailed instructions, see the appropriate board User's Guide.

5.4.2 Run the demo

The application can be controlled using one interface:

- Up / Down buttons on the TWR board
 1. After the power supply is plugged into the TWR-MC-LV3PH, the motor is ready to run.
 2. Press the reset button on the development board.
 3. Pressing the Up button increases the speed by 500 RPM. The motor starts rotating in the clockwise direction if it is not spinning, or decreases speed if the direction of the rotation is counter-clockwise.
 4. Pressing the Down button decreases the speed by 500 RPM. The motor starts rotating in the counter-clockwise direction if it is not spinning, or decreases speed if the direction of the rotation is clockwise.
 5. Pressing the buttons beyond this point increases or decreases the required speed within the speed limit -5000 to 5000 RPM.
 6. If both buttons are pressed for more than 2 seconds, the demonstration mode is switched on (or demonstration mode is switched off if it is on)

Chapter 6

Bubble Level FTM Demo

This demo application utilizes the on-board accelerometer to implement a bubble level.

6.1 Overview

The bubble level application demonstrates basic usage of the on-board accelerometer to implement a bubble level. A bubble level utilizes two axes to visually show deviation from a level plane (0 degrees) on a given access. This demo uses the FTM to modulate the duty cycle of two onboard LEDs to gradually increase LED intensity as the board deviates from a level state.

Optionally, if you would like to observe the raw accelerometer X-Y data, you can connect to the board's virtual COM port.

This application is loaded onto the board at the factory for supported hardware platforms.

6.2 Supported Platforms

- FRDM-K22F
- FRDM-K64F
- FRDM-KV10Z
- FRDM-KV31F
- TWR-K80F150M

6.3 System Requirement

6.3.1 Hardware requirements

- USB A to micro AB cable
- Personal Computer

6.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/bubble_level_ftm/<toolchain>.
- Library dependencies: ksdk_platform_lib

6.4 Getting Started

6.4.1 Hardware Settings

The bubble level application does not call for any special hardware configuration. Although not required, the recommendation is to leave the development board jumper settings and configurations in default state

Run the demo

when running this demo.

6.4.2 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. (Optional) Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions, see the Getting Started with Kinetis SDK document.

6.5 Run the demo

When the board is programmed, simply tilt the board to see the LED illuminate. One LED color indicates X-axis variation while another indicates Y-axis variation.

Chapter 7

Bubble Level TPM Demo

This demo application utilizes the on-board accelerometer to implement a bubble level.

7.1 Overview

The bubble level application demonstrates basic usage of the on-board accelerometer to implement a bubble level. A bubble level utilizes two axes to visually show deviation from a level plane (0 degrees) on a given access. This demo uses the TPM to modulate the duty cycle of two onboard LEDs to gradually increase LED intensity as the board deviates from a level state.

Optionally, if you would like to observe the raw accelerometer X-Y data, you can connect to the board's virtual COM port.

This application is loaded onto the board at the factory for supported hardware platforms.

7.2 Supported Platforms

- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z

7.3 System Requirement

7.3.1 Hardware requirements

- USB A to micro AB cable
- Personal Computer

7.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/bubble_level_tpm/<toolchain>.
- Library dependencies: ksdk_platform_lib

Run the demo

7.4 Getting Started

7.4.1 Hardware Settings

The bubble level application does not call for any special hardware configuration. Although not required, the recommendation is to leave the development board jumper settings and configurations in default state when running this demo.

7.4.2 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. (Optional) Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions, see the Getting Started with Kinetis SDK document.

7.5 Run the demo

When the board is programmed, simply tilt the board to see the LED illuminate. One LED color indicates X-axis angle while another indicates Y-axis angle.

Chapter 8

DAC ADC Demo

This demo application demonstrates the DAC and ADC demo.

8.1 Overview

This application demonstrates how to configure the DAC and set the output on the DAC using software. It also demonstrates how to configure the ADC in 'Blocking Mode' and read ADC values.

8.2 Supported Platforms

This demo supports these Freescale Freedom development platforms and Tower System modules:

- FRDM-K22F
- FRDM-K64F
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW40Z
- MRB-KW01
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M

8.3 System Requirement

8.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal

Getting Started

- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

8.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/dac_adc_demo/<toolchain>.
- Library dependencies: ksdk_platform_lib

8.4 Getting Started

8.4.1 Hardware configuration

For the MRB-KW01 it is necessary: To short jumpers J10 and J11 to connect the ADC references. To disconnect J7 to open PTE30 connection with the RESET of the RADIO part. Also analog function for PTE30 - DAC output is necessary on the mrb-kw01 (default is GPIO for RADIO part reset). This is done in hardware_init() function.

8.4.2 Hardware Settings

This table shows the connections that are required for each of the supported platforms. Not mentioned platforms use the internal connection.

Platform	DAC Out		ADC In	
	Pin Name	Board Location	Pin Name	Board Location
FRDM-K22F	DAC0_OUT	J24-11	PTB0/ADC0_SE8	J24-2
FRDM-KL25Z	PTE30/DAC0_OUT	J10-11	PTE20/ADC0_SE0	J10-1
FRDM-K64F	DAC0_OUT	J4-11	PTB2/ADC0_SE12	J4-2
FRDM-KL43Z	PTE30/DAC0_OUT	J4-11	PTE30/ADC0_SE23	J4-11
FRDM-KL46Z	PTE30/DAC0_OUT	J4-11	PTE20/DIFF_ADC0_DP	J4-1
FRDM-KW40Z	PTB18/DAC0_OUT	J25-11	PTB18/ADC0_SE4	J25-11
TWR-K21D50M	DAC0_OUT	Primary Elevator - A32	PTB3/ADC0_SE13	Primary Elevator - B30
TWR-K22F120M	DAC0_OUT	Primary Elevator - A32	PTB0/ADC0_SE8	Primary Elevator - B27

TWR-K24F120M	DAC0_OUT	Primary Elevator - A32	ADC0_DP3	Primary Elevator - A29
TWR-K60D100M	DAC0_OUT	Primary Elevator - A32	PTB4/ADC1_SE10	Primary Elevator - B30
TWR-K64F120M	DAC0_OUT	Primary Elevator - A32	PTB4/ADC1_SE10	Primary Elevator - B27
TWR-K65F180M	DAC0_OUT	Primary Elevator - A32	ADC1_SE16	J24-1
TWR-KV10Z32	DAC0_OUT	J16-11	PTE17/ADC0_SE5	J16-6
TWR-KV11Z75M	DAC0_OUT	Primary Elevator - A32	PTE30/ADC1_SE4	Primary Elevator - A32
TWR-KV31F120-M	DAC0_OUT	Primary Elevator - A32	PTE2/ADC1_SE6a	Primary Elevator - B27
TWR-K21F120M	DAC0_OUT	Primary Elevator - A23	PTE2/ADC0_SE23	Primary Elevator - B23
FRDM-KV10Z	PTE30/DAC_OUT	J4-11	ADC0_SE6_RC	J2-1

8.4.3 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For more detailed instructions, see a Kinetis SDK User's Guide for your board.

8.5 Run the demo

This example shows how to run the demo:

```
DAC ADC Demo!
```

```
See Kinetis SDK Demo Applications User's Guide document,
Chapter DAC ADC demo, for pins configuration information.
Press space bar to start demo.
```

The user is prompted to enter a voltage to output on the DAC:

Key Functions

Select DAC output level:

1. 1.0 V
2. 1.5 V
3. 2.0 V
4. 2.5 V
5. 3.0 V

->

After entering a valid input, the ADC captures the voltage set by the DAC and displays the result in the terminal:

Select DAC output level:

1. 1.0 V
2. 1.5 V
3. 2.0 V
4. 2.5 V
5. 3.0 V

->3

ADC Value: 2471

ADC Voltage: 1.99

What next?:

1. Test another DAC output value.
2. Terminate demo.

->

At this point, the user can test another DAC output value or terminate the demo.

This configuration exhibits up to 2% error when reading back voltage.

8.6 Key Functions

uint8_t demo_start(demo_state_t *prevState)

Prints out a welcome message and pins required by the demo.

Parameters

<i>*prevState</i>	Pointer to previous state for state machine.
-------------------	--

Returns

msg Returns the character entered into the terminal by the user.

uint8_t device_config(demo_state_t *prevState)

Configures the DAC and the ADC. The DAC is configured for software updates. The ADC is set in 'Blocking Mode'.

Parameters

<i>*prevState</i>	Pointer to previous state for state machine.
-------------------	--

Returns

msg Returns 0.

uint8_t dac_set(demo_state_t *prevState)

Sets output level on the DAC.

Parameters

<i>*prevState</i>	Pointer to previous state for state machine.
-------------------	--

Returns

msg Returns the character entered into the terminal by user.

uint8_t wait_state(demo_state_t *prevState)

Performs a wait and possible state change based on the *prevState.

Parameters

<i>*prevState</i>	Pointer to previous state for state machine.
-------------------	--

Returns

msg Returns 0.

uint8_t adc_get(demo_state_t *prevState)

Gets ADC values from a channel connected to the DAC output.

Key Functions

Parameters

<i>*prevState</i>	Pointer to previous state for state machine.
-------------------	--

Returns

msg Returns the character entered into the terminal by the user.

uint8_t device_deinit(demo_state_t *prevState)

Deinitializes the DAC and the ADC module following a user command to terminate the demo. Also frees allocated memory.

Parameters

<i>*prevState</i>	Pointer to previous state for the state machine.
-------------------	--

Returns

msg Returns 0.

uint8_t demo_end(demo_state_t *prevState)

Indicates to the user that the demo has been terminated.

Parameters

<i>*prevState</i>	Pointer to previous state for the state machine.
-------------------	--

Returns

msg Returns 0.

Chapter 10

Flash Demo

This demo application demonstrates how to use the Flash drivers.

10.1 Overview

The Flash demo project shows how to erase, program, and perform swap (if available) on the Flash module.

Note:

1. A target exists for the Flash memory space. Because the demo operates with the two last sectors of the lower half and the whole upper half of program flash memory of the platforms with SWAP feature and the six last sector of the program flash of the platforms without the SWAP feature, the user should not store any program code or data in the above locations.
2. The flash swap demo fails if the tested board has already run swap command with the swap indicator address different from the values defined in the demo. To overcome this issue, erase the chip to uninitialized the swap system and rerun the demo.
 - features include:
 3. Read to non-volatile information memory region
 4. Flash Erase by block or sector, including margin read options
 5. Programming region defined by user
 6. Flash verify support
 7. Flash Swap (if supported on the device)
 8. To ensure that other demos aren't affected, erase the chip to ensure the successful execution of the demos.

10.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the KSDK Flash demo.

Platforms with SWAP feature:

- TWR-K21D50M
- TWR-K21F120M
- TWR-K24F120M
- TWR-K60D100M
- FRDM-K64F
- TWR-K64F120M
- TWR-K65F180M

Platforms without SWAP feature:

- FRDM-K22F

System Requirement

- FRDM-K64F
- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- MRB-KW01
- TWR-K22F120M
- TWR-K60D100M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KM34Z75M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512
- USB-KW40Z

10.3 System Requirement

10.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

10.3.2 Software requirements

- The project files are in this location: <SDK_Install>/examples/<board>/demo_apps/flash_demo/<toolchain>.
- Library dependencies: ksdk_platform_lib

10.4 Getting Started

The Flash Demo example code shows how to erase and program the Flash content and use the swap feature if it is supported on the device.

10.4.1 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 (9600 for FRDM-KL03Z48M) for baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions, see a Kinetis SDK User's Guide for your board.

10.5 Commands/Directions

1. Select the Debug target from within the IDE and build the project selected for the target hardware. The default Debug target runs from flash and demonstrates the Swap feature for devices that support Swap (e.g. TWR-K64F120M).
2. Connect one end of the USB cable to a PC host and the other end to the OpenSDA connector on the board.
3. Open Terminal program such as TeraTerm, Putty, or Hyperterminal.
4. Configure the Terminal program to select the OpenSDA COMx port for the board using
 - 115200 8N1: 115200 baud, 8 data bits, No parity, 1 Stop bit.
 - Or FRDM-KL03Z48M 9600 8N1: 9600 baud, 8 data bits, No parity, 1 Stop bit.
5. Connect to the board with the debugger (download & debug), run the program, and view the Terminal messages for Flash operations being performed.
6. For devices that support Swap, the Flash_Debug target copies (programs) the application that is running from the lower half to the upper half and then issues swap commands.
7. Flash memory blocks are swapped at the next reset. Disconnect debug session and hit the reset button on the board. Note: During swap, some memory locations depending on program flash size (e.g. for TWR-K64F120M: 0x7F100 & 0xFF100) are swapped and displayed on the terminal showing how the memory map changes.
8. For devices that do not support swap, view the terminal messages for Flash operations that are occurring for the demo.
9. Terminal displays the message "Flash Demo Complete!" when finished.

Note: Callback functions are not currently supported during flash erase or program operations

Note: For K22F and KV31, Flash erase and program operations are not allowed in High-Speed RUN modes. Therefore, the core clock speed is restricted to 80 MHz or less.



Chapter 11

FreeMASTER Demo

11.1 Overview

This demo application demonstrates usage of the FreeMASTER graphical visualization tool.

Modules

- [FreeMASTER Demo Introduction](#)
- [FreeMASTER Demo User's Guide](#)

11.2 FreeMASTER Demo Introduction

This section provides an introduction to the FreeMASTER Demo application.

Overview

The FreeMASTER Demo application project shows how to integrate the Freescale FreeMASTER communication driver into a KSDK-based application. The user should be able to use the FreeMASTER tool running on Host PC and connect it over a serial line, CAN interface, or BDM cable to this demo application. The demo.pmp file can be opened in FreeMASTER tool project for a quick access to selected variables. The variables can be monitored in a text grid or in a graph. The user can also modify the values directly in the variable watch grid.

In addition to the variable monitoring, the FreeMASTER tool can be used to build rich graphical control panels for any embedded application. See more information on the FreeMASTER home page at "<http://www.freescale.com/freemaster>".

Supported Platforms

The FreeMASTER tool and the driver are two software packages distributed separately outside of KSDK. This KSDK release contains a copy of FreeMASTER driver version 1.8.1 which supports the whole Kinetis K and Kinetis L families and other platforms.

The KSDK freemaster_demo application has been tested with these boards:

The freemaster_demo_flexcan demo Supported Platforms:

- TWR-K60D100M
- TWR-K64F120M

The freemaster_demo_lpuart demo Supported Platforms:

- FRDM-KL03Z (notice: cannot support the clock configuration of CLOCK_SETUP=2 in kl03)
- TWR-KL43Z48M

The freemaster_demo_uart demo Supported Platforms:

- FRDM-K22F
- FRDM-K64F
- TWR-K21D50M
- TWR-K22F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-KV10Z32
- TWR-KV31F120M

The freemaster_demo_usbcdc demo Supported Platforms:

- TWR-K22F120M

- TWR-K60D100M
- TWR-K64F120M
- TWR-KL43Z48M

However, the driver included in the src folder also supports other Kinetis platforms.

Get the FreeMASTER PC Host tool installer from the "<http://www.freescale.com/freemaster>" web site.

11.2.1 System Requirement

11.2.1.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

11.3 FreeMASTER Demo User's Guide

This chapter provides a user's guide to the FreeMASTER Demo application.

Getting Started

Open the demo application project in your favorite development environment. If the application project is not ready out of the box for your particular board, you can create an empty KSDK stationery project or reuse any other demo which works with your hardware. Adding FreeMASTER to an existing project is very easy by adding relevant source files available in the `demos/freemaster_demo/src/driver_v1_8` folder.

Connecting with UART (default)

Inspect the `freemaster_cfg.h` file to see the FreeMASTER configuration. The serial line is enabled by default. The default console port is used for communication with FreeMASTER PC Host tool. Do not use the demo with a console terminal tools like with most of the other KSDK examples. There are also other communications options available, such as BDM or CAN interface. See the user documentation for more information.

Running the FreeMASTER PC Host Tool

Compile and download the program to a target board. Connect serial cable to the PC host computer and start the FreeMASTER application (installer available at "<http://www.freescale.com/freemaster>"). Use the Start menu in the MS Windows environment to lookup the FreeMASTER launcher item. It is recommended that you also read the FreeMASTER user documentation available also in the Start menu group.

Using the FreeMASTER Demo project

In the FreeMASTER tool main window, press the Ctrl+K key first to select the serial COM port which connects your host computer with the target board. Select the 115200 as the default communication speed and press OK. Use the Ctrl+O to open the `demo.pmp` project file. The file is available in the same folder as the `freemaster_demo` application in the KSDK package. If everything goes well, you should see values of several variables in the variable watch grid in the bottom area of the main FreeMASTER window. Click the Oscilloscope item in the project tree on the left side and see the graphical representation of the selected variables.

Troubleshooting

If problems exist with the `freemaster_demo` application, try to start with the simplest `hello_world` example and a console terminal application to verify whether the serial line communication works well. The most

typical reason why FreeMASTER cannot communicate with the board is a wrong COM port selected on the host PC, or a wrong UART port selected on the target processor side or a bad communication speed.

Getting more information

The FreeMASTER is a versatile and powerful tool in which you can create your own interactive graphical monitors and control panels for any embedded application. To understand how to use all FreeMASTER features, scripting and communication options, see a User's Guide included with the FreeMASTER installation package. The target-side communication driver is further described in a User Manual included in the official distribution of the FreeMASTER Serial Driver, which is a separately downloadable package available at "<http://www.freescale.com/freemaster>".

Chapter 12

FTM PDB ADC Demo

This demo application demonstrates how to use FTM external trigger to start ADC conversion via PDB.

12.1 Overview

This application demonstrates how to use the FTM external trigger to start the ADC conversion using the PDB. The FTM0 is configured as a complementary combined mode. Each channel output frequency is 16 KHz. The complementary channel dead time is 1 μ s. The PDB pre-trigger works in back-to-back mode. The ADC0 and ADC1 work in single-end mode. The ADC0 uses channel 1 and channel 5. ADC1 uses channel 1 and channel 7.

12.2 Supported Platforms

This Tower System module is supported by the KSDK FTM PDB ADC demo.

- FRDM-KV10Z
- TWR-KV10Z32
- TWR-KV11Z75M

12.3 System Requirement

12.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

12.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/ftm_pdb_adc/<toolchain>.
- Library dependencies: ksdk_platform_lib

12.4 Getting Started

12.4.1 Hardware Settings

The Hello World project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board jumper settings and configurations in default state

Getting Started

when running this demo.

12.4.2 Prepare the Demo

Use default jumper settings on TWR-KV10Z32. Ensure that the J21(2~3 is short), J22(2~3 is short), J11(1~2 is short, 3~4 is short), J12(1~2 is short, 3~4 is short). On TWR-KV11Z75M: Ensure that the J19(2~3 is short), J20(2~3 is short), J9(1~2 is short, 3~4 is short), J7(1~2 is short, 3~4 is short).

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on the board or launch the debugger in the IDE to begin running the demo.

For detailed instructions, see the appropriate board User's Guide.

12.4.3 Run the demo

1. Download and run the `ftm_pdb_adc` code on the board.
2. Terminal prints this message: "Run PDB trig ADC with FlexTimer demo." and "Input any character to start demo."
3. Input a character to the serial terminal, which has 256 lines of information for the ADC conversion result.
4. Input any character to the serial terminal. The process repeats again.

Chapter 13

Hello World Demo

This demo application demonstrates the Hello World demo.

13.1 Overview

The Hello World project is a simple demonstration program that uses the KSDK software. It prints the "Hello World" message to the terminal using the KSDK UART drivers. The purpose of this demo is to show how to use the UART and to provide a simple project for debugging and further development.

13.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the KSDK Hello World demo.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- MRB-KW01
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KM34Z75M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M

Run the demo

- TWR-KW24D512
- USB-KW24D512
- USB-KW40Z-K22F
- USB-KW40Z

13.3 System Requirement

13.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

13.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/hello_world/<toolchain>.
- Library dependencies: kSDK_platform_lib

13.4 Getting Started

13.4.1 Hardware Settings

13.4.2 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions, see the appropriate board User's Guide.

13.5 Run the demo

This is an example how to run the demo.

Hello World!

13.6 Communication Interface Settings:

This part provides the information to customize the Hello World demo. The Hello World demo is configured to use these port pins for the platforms by default. If applicable for the board, jumpers are specified to select between serial output via OpenSDA and serial output via TWR-SER.

Platform	TX MCU Pin (Board Pin)	RX MCU Pin (Board Pin)	Module Instance
FRDM-K22F	PTE0 (N/A)	PTE1 (N/A)	UART1
FRDM-K64F	PTB17 (N/A)	PTB16 (N/A)	UART0
FRDM-KL26Z	PTA2 (J1-4)	PTA1 (J1-2)	LPSCI0
FRDM-KL46Z	PTA2 (J1-4)	PTA1 (J1-2)	UART0
FRDM-KW24	PTE0 (N/A)	PTE1 (N/A)	UART1
MRB-KW01	PTA2 (-)	PTA1 (-)	LPSCI0
TWR-K22F120M	PTE0 (J30)	PTE1 (J29)	UART1
TWR-K64F120M	PTC4 (J15)	PTC3 (J10)	UART1
TWR-K80F150M	PTC4 (J8)	PTC3 (J6)	UART1
TWR-KV31F120M	PTB17 (J23)	PTB16 (J22)	UART0
TWR-KW24D512	PTE0 (J18-2)	PTE1 (J18-5)	UART1
TWR-K21F120M	PTD8	PTD9	UART1
TWR-K21F120M	PTD8	PTD9	UART1
TWR-KM34Z75M	PTI6/UART2_RX	PTI7/UART2_TX	UART2
USB-KW24D512	N/A	N/A	USB CDC Virtual COM
FRDM-KV31F	PTB17 (N/A)	PTB16 (N/A)	UART0
FRDM-KV10Z	PTB17 (N/A)	PTB16 (N/A)	UART0
TWR-KV11Z75M	PTB17 (J505)	PTB16 (J506)	UART0
USB-KW40Z-K22F	N/A	N/A	USB CDC Virtual COM
USB-KW40Z	PTC7 (N/A)	PTC6 (N/A)	UART0



Communication Interface Settings:

Chapter 14

Hello World QSPI Demo

14.1 Overview

The Hello World QSPI demo project is a demonstration program that uses the KSDK software. This demo shows how to boot from QSPI region and the QSPI alias region if supported. This example can generate two different demos using a different linker file and a startup file :

- Program boot from QSPI region.
- Program boot from QSPI alias region (If the chip support QSPI alias region).

14.2 Supported Platforms

These Tower System modules and Freescale Freedom platforms are supported by the Hello World QSPI demo:

- TWR-K80F150M

14.3 System Requirement

14.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (Tower System/base board, ...) for a specific device
- Personal Computer

14.3.2 Software requirements

- The project files for booting from the QSPI region are in : <SDK_Install>/examples/<board>/demo-_apps/hello_world_qspi/<toolchain>.
- The project file for booting from the alias region are in: <SDK_Install>/examples/<board>/demo-_apps/hello_world_qspi_alias/<toolchain>.
- Library dependencies: ksdk_platform_lib
- Tool dependencies: Use the blhost and the elftosb tool provided by the ROM team from www.freescale.com

Getting Started

14.4 Getting Started

14.4.1 Hardware settings

This example requires external serial flash powered:

TWR-K80F150M

Jumper J30 pin 4 and pin 6 should be connected.

14.4.2 Prepare the example

1. Press the SW2 button (NMI button) continuously and connect a USB cable between the PC host and the OpenSDA USB port on the board. The button should be pressed until openSDA USB port connected.
2. Build the demo project and get the .srec output file.
3. Use elftosb tool to convert srec file to SB file needed by blhost.
 - First a .bd file is needed, open .bd file in <SDK_Install>/examples/<board>/demo_apps/hello_world_qspi/hello_world_qspi.bd. While change to other demo, just change the srec file name in .bd file.
 - In command line, use command ".elftosb.exe -V -c hello_world_qspi.bd -o hello_world_qspi.-sb" to get a sb file.
4. Prepare QSPI config block for BootROM.
 - If using TWR-K80, just use the qspi_config_block.bin located in <SDK_Install>/examples/<board>/demo_apps/hello_world_qspi/qspi_config_block.bin
 - If using different flash chip, the qspi config block should be re-configured in source file located in <SDK_Install>/examples/src/demo_apps/hello_world_qspi/qspi_config_block_generator.c, users can use GCC/Visual Studio/Code Block to re-generate a .bin file for QSPI configure block.
 - For detailed information of QSPI configure block, see document from BootLoader team.
5. Use blhost to configure bootloader and download code.
 - While using blhost, ".blhost.exe -p COMxx -- receive-sb-file hello_world_qspi.sb" ("COMxx" means the virtual COM number of the board.) Notice: -If using UART as communication between blhost, should not open serial terminal, or it may download failed.
6. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
7. Press the reset button on your board.

14.4.3 Run the example

The example makes two LEDs light up and these instruction are displayed/shown on the terminal window:

```
Hello World QSPI demo started!
```

Input some characters and the demo displays those characters.

Notice :

1. This example has no any code to change clock settings or system run mode. To change the system or QSPI clock settings, copy the code which changed clock settings or run mode from the QSPI memory to RAM first.
2. For the QSPI alias demo running in Keil, copy the .bss and RW part from the QSPI flash to RAM at startup before calling the main function.

Chapter 15

Hardware Timer Demo

This demo application demonstrates using the hardware timer driver.

15.1 Overview

The Hardware Timer project is a demonstration program to show how to use the Hardware Timer driver. A Hardware Timer interrupt is created and fires multiple times until it reaches the requested number.

15.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the Kinetis SDK Hardware Timer demo.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- MRB-KW01
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KM34Z75M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512

Getting Started

- USB-KW24D512
- USB-KW40Z-K22F
- USB-KW40Z

15.3 System Requirement

15.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

15.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/hwtimer_demo/<toolchain>.
- Library dependencies: kSDK_platform_lib

15.4 Getting Started

15.4.1 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with the following settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on the board or launch the debugger in the IDE to begin running the demo.

For detailed instructions, see the appropriate board User's Guide.

15.4.2 Run the demo

1. Press the reset button on your board.
2. "Hwtimer Example" message is displayed on the terminal.
3. A dot is printed when an Hwtimer interrupt occurs until the `HWTIMER_DOTS_PER_LINE * HWTIMER_LINES_COUNT` (defined in `hwtimer_demo.c`) interrupts occur.

4. Finally, the "End" message is displayed.

```
Hwtimer Example
.....
.....
End
```

15.5 Customization Options

This demo application is customizable to show different types of hardware timers. TWR-KV11Z75M does not support PIT timer, due to no PIT in KV11 silicon

15.5.1 Configure the Hardware Timer Used

Determine which timer the hardware timer driver uses. The ARM core SysTick timer is used by default.

```
#define HWTIMER_LL_DEVIF    kSysTickDevif
```

15.5.2 Configure which clock is used by the hardware timer

Determine which clock source is used by the hardware timer.

```
#define HWTIMER_LL_SRCCLK   kCoreClock
```

15.5.3 Configure which instance of the module is used

Determine which instance of the selected hardware module to use. For the SysTick timer only '0' is valid. If the PIT is used, use this to select the PIT channel.

```
#define HWTIMER_LL_ID       0
```

15.5.4 Hardware Timer Period

Determine the timer period (in microseconds).

```
#define HWTIMER_PERIOD      100000
```


Chapter 16

I2C Communication Demo

This demo application demonstrates the I2C demo.

16.1 Overview

The I2C communication application demonstrates I2C data communication between two boards. It also features low power wakeup of the slave board by using I2C address matching. First, the I2C slave board enters the low power wait mode. An LED on the I2C slave board is on to indicate that the MCU is in sleep mode and no code is running. Then, the I2C slave board is woken up by the I2C address matching interrupt when the I2C master boards sends the proper address. The LED on the I2C slave board is toggled during the data communication. After power on, the I2C master starts reading data from the I2C slave data buffer. The I2C slave has "sub" addresses to access a specific byte of data on the slave board. The master prints this data out via the serial terminal. The master can then modify the data at a specific "sub" address on the slave board. When the data is received, the I2C slave changes the content at that requested "sub" address. This change is reflected when the master reads the slave data buffer again.

16.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the KSDK I2C Communication demo.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- MRB-KW01
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M

Getting Started

- TWR-K65F180M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KM34Z75M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512

16.3 System Requirement

16.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

16.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/i2c_comm/<mode>/<toolchain>. Where <mode> is either master or slave.
- Library dependencies: kSDK_platform_lib

16.4 Getting Started

16.4.1 Hardware configuration

This demo requires two separate boards. Make these connections between the two boards by using external wires. In case of TWR-KV11Z75M, also connect pin 2 and 3 on J4 and J11. external wires:

FRDM-K22F:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J24 Pin 12	->	I2C0_SCL	J24 Pin 12
I2C0_SDA	J24 Pin 10	->	I2C0_SDA	J24 Pin 10
GND	J2 Pin 14	->	GND	J2 Pin 14

FRDM-K64F:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J2 Pin 20	->	I2C0_SCL	J2 Pin 20
I2C0_SDA	J2 Pin 18	->	I2C0_SDA	J2 Pin 18
GND	J2 Pin 14	->	GND	J2 Pin 14

FRDM-K64F:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C1_SCL	J2 Pin 20	->	I2C1_SCL	J2 Pin 20
I2C1_SDA	J2 Pin 18	->	I2C1_SDA	J2 Pin 18
GND	J2 Pin 14	->	GND	J2 Pin 14

FRDM-KL02Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J7 Pin 10	->	I2C0_SCL	J7 Pin 10
I2C0_SDA	J7 Pin 9	->	I2C0_SDA	J7 Pin 9
GND	J7 Pin 7	->	GND	J7 Pin 7

FRDM-KL03Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J2 Pin 10	->	I2C0_SCL	J2 Pin 10
I2C0_SDA	J2 Pin 9	->	I2C0_SDA	J2 Pin 9
GND	J2 Pin 7	->	GND	J2 Pin 7

FRDM-KL25Z:

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high

Getting Started

baurate. In this case, user need to use external pull-up resistors.

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C1_SCL	J10 Pin 12	->	I2C1_SCL	J10 Pin 12
I2C1_SDA	J10 Pin 10	->	I2C1_SDA	J10 Pin 10
GND	J9 Pin 14	->	GND	J9 Pin 14

FRDM-KL26Z:

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J2 Pin 20	->	I2C0_SCL	J2 Pin 20
I2C0_SDA	J2 Pin 18	->	I2C0_SDA	J2 Pin 18
GND	J2 Pin 14	->	GND	J2 Pin 14

FRDM-KL27Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C1_SCL	J2 Pin 20	->	I2C1_SCL	J2 Pin 20
I2C1_SDA	J2 Pin 18	->	I2C1_SDA	J2 Pin 18
GND	J2 Pin 14	->	GND	J2 Pin 14

FRDM-KL43Z, FRDM-KL43ZKL33, FRDM-KL46Z:

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J2 Pin 20	->	I2C0_SCL	J2 Pin 20
I2C0_SDA	J2 Pin 18	->	I2C0_SDA	J2 Pin 18

GND	J2 Pin 14	->	GND	J2 Pin 14
-----	-----------	----	-----	-----------

FRDM-KW24:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J2 Pin 20	->	I2C0_SCL	J2 Pin 20
I2C0_SDA	J2 Pin 18	->	I2C0_SDA	J2 Pin 18
GND	J2 Pin 14	->	GND	J2 Pin 14

FRDM-KW40Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C1_SCL	J25 Pin 10	->	I2C1_SCL	J25 Pin 10
I2C1_SDA	J25 Pin 12	->	I2C1_SDA	J25 Pin 12
GND	J24 Pin 14	->	GND	J24 Pin 14

MRB-KW01:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C1_SCL	J15 Pin 13	->	I2C1_SCL	J15 Pin 13
I2C1_SDA	J15 Pin 11	->	I2C1_SDA	J15 Pin 11
GND	J14 Pin 18	->	GND	J14 Pin 18

TWR-K21D50M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C1_SCL	Primary Elevator A7	->	I2C1_SCL	Primary Elevator A7
I2C1_SDA	Primary Elevator A8	->	I2C1_SDA	Primary Elevator A8
GND	Primary Elevator A6	->	GND	Primary Elevator A6

Getting Started

TWR-K22F120M, TWR-K24F120M, TWR-K60D100M & TWR-KV31F120M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator A7	->	I2C0_SCL	Primary Elevator A7
I2C0_SDA	Primary Elevator A8	->	I2C0_SDA	Primary Elevator A8
GND	Primary Elevator A6	->	GND	Primary Elevator A6

TWR-K64F120M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C1_SCL	Primary Elevator A75	->	I2C1_SCL	Primary Elevator A75
I2C1_SDA	Primary Elevator A60	->	PTC11/I2C1_SDA	Primary Elevator A60
GND	Primary Elevator A65	->	GND	Primary Elevator A65

TWR-KL43Z48M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C1_SCL	Primary Elevator A7	->	I2C1_SCL	Primary Elevator A7
I2C1_SDA	Primary Elevator A8	->	I2C1_SDA	Primary Elevator A8
GND	Primary Elevator A6	->	GND	Primary Elevator A6

TWR-KM34Z75M

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
PTD7/I2C0_SCL	J10 Pin 1	->	PTD7/I2C0_SCL	J10 Pin 1

PTE0/I2C0_SDA	J11 Pin 1	->	PTE0/I2C0_SDA	J11 Pin 1
GND	J25 Pin 26	->	GND	J25 Pin 26

TWR-KV10Z32:

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator A7	->	I2C0_SCL	Primary Elevator A7
I2C0_SDA	Primary Elevator A8	->	I2C0_SDA	Primary Elevator A8
GND	Primary Elevator A6	->	GND	Primary Elevator A6

TWR-K65F180M, TWR-K80F150M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator - Pin A7	->	I2C0_SCL	Primary Elevator - Pin A7
I2C0_SDA	Primary Elevator - Pin A8	->	I2C0_SDA	Primary Elevator - Pin A8
GND	Primary Elevator A65	->	GND	Primary Elevator A65

TWR-KW24D512:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator A7	->	I2C0_SCL	Primary Elevator A7
I2C0_SDA	Primary Elevator A8	->	I2C0_SDA	Primary Elevator A8
GND	Primary Elevator A81	->	GND	Primary Elevator A81

Getting Started

TWR-K21F120M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C1_SCL	Primary Elevator B50	->	I2C1_SCL	Primary Elevator B50
I2C1_SDA	Primary Elevator B51	->	I2C1_SDA	Primary Elevator B51
GND	Primary Elevator A65	->	GND	Primary Elevator A65

FRDM-KV31F:

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J1-16	->	I2C0_SCL	J1-16
I2C0_SDA	J2-13	->	I2C0_SDA	J2-13
GND	J2-14	->	GND	J2-14

FRDM-KV10Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J2 Pin 13	->	I2C0_SCL	J2 Pin 13
I2C0_SDA	J1 Pin 15	->	I2C0_SDA	J1 Pin 15
GND	J2 Pin 14	->	GND	J2 Pin 14

TWR-KV11Z75M:

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location

Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator A7	->	I2C0_SCL	Primary Elevator A7
I2C0_SDA	Primary Elevator A8	->	I2C0_SDA	Primary Elevator A8
GND	Primary Elevator A6	->	GND	Primary Elevator A6

16.4.2 Terminal configuration

Configure the PC host serial console as shown:

- 115200 baud rate
- 8 data bits
- No parity
- One stop bit
- No flow control

16.4.3 Run the demo

1. Connect the I2C slave board to the master board using the connections listed above.
2. Power on the I2C slave board.
3. Download and run the `i2c_comm_slave` project to the I2C slave board.
4. The terminal of the I2C slave board prints out a "=====`I2C Slave`====" message.
5. Power on the I2C master board.
6. Download and run the `i2c_comm_mstr` project to the I2C master board.
7. The terminal of the I2C master board prints out a "=====`I2C Master`====" message and the data received from the I2C slave.
8. The I2C slave project creates some "sub" addresses to access a specific byte of data on the slave board. The master reads all these "sub" addresses and prints out the data.

Slave Sub Address	Character
[0]	I
[1]	2
[2]	C
[3]	-
[4]	C
[5]	O
[6]	M
[7]	M

Getting Started

9. To change the I2C slave sub address content, input a new character in the I2C master command line:

```
Input slave sub address and the new character.  
Slave Sub Address: 5  
Input New Character: F
```

10. The master then displays the updated content on the terminal output.

Slave Sub Address	Character
[0]	I
[1]	2
[2]	C
[3]	-
[4]	C
[5]	F
[6]	M
[7]	M

Chapter 17

I2C Demo with RTOS

This demo application demonstrates the I2C demo on different RTOS.

17.1 Overview

This I2C application demonstrates the SDK Peripheral drivers working on different RTOS. The application acts as both the I2C master and the slave device on different I2C buses, such as the I2C Master on the I2C0 bus and the I2C Slave on the I2C1 bus. It can run on a single board or on two different boards. When connecting the two I2C buses on one board, the master sends the command using the I2C0 bus to the slave using the I2C1 bus. When connecting the I2C0 bus to the I2C1 bus on the other board, the application running on the first board is a master and sends a command to the other board which acts as a slave. This means that the first board can send a command and get a response from the other board by using the I2C bus.

The basic purpose of this demo is:

1. Read the Kinetis chip UID (low 32bits) from the slave board
2. Read the Kinetis chip internal temperature from the slave board
3. Control the RED/GREEN/BLUE color LEDs on the slave board

The application creates three different tasks to handle events concurrently:

1. Master task: responds to the user interface interaction, runs as a I2C master, and acts as a simple UI. It accepts user's commands to read the basic chip UID, chip temperature and control the on board LED, and power mode on the slave.
2. Slave task: responds to the command received from the I2C master and returns the result to the master.
3. ADC sample task: responds to getting the chip temperature in a period.
4. For the bare metal version, the master and slave tasks are separated into two separate projects.

17.2 Supported RTOS

- Freescale MQX™ RTOS
- FreeRTOS
- μ C/OS-II
- μ C/OS-III
- Bare Metal (no RTOS)

17.3 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the KSDK I2C demo with RTOS.

The Bare Metal (no RTOS) demo Supported Platforms:

Supported Platforms

- FRDM-K22F
- FRDM-K64F
- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW40Z
- MRB-KW01
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KV11Z75M

The FreeRTOS, μ C/OS-II, μ C/OS-III demo Supported Platforms:

- FRDM-K22F
- FRDM-K64F
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV31F
- MRB-KW01
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-KL43Z48M

The MQX demo Supported Platforms:

- FRDM-K22F

- FRDM-K64F
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KV31F
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-KL43Z48M

17.4 System Requirement

17.4.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

17.4.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/i2c_rtos/<rtos>/<toolchain>. Where <rtos> is the chosen RTOS configuration.
- Library dependencies:
 - Baremetal, FreeRTOS, uC/OS: ksdk_platform_lib
 - MQX RTOS: mqx_<board>, mqx_stdlib_<board>

17.5 Getting Started

The I2C RTOS application is designed to work on one single board or two different boards (default: master uses I2C0 slave uses I2C1 except special cases (check symbols I2C_RTOS_MASTER_INSTANCE and I2C_RTOS_SLAVE_INSTANCE)). Note that the bare-metal version only supports two boards.

17.5.1 Build with different RTOS support

Before running this application, build it with the RTOS you want to use. The projects for different RTOSes are differentiated by the workspace file name in the format of i2c_rtos_<rtos>.eww. For example, in IAR, the i2c_rtos_ucosii.eww workspace file is the μ C/OS-II version of this application. After opening

Getting Started

the appropriate workspace, build the `ksdk_<rtos>_lib` project and build the application project. A binary named `i2c_<rtos>.out` is generated.

17.5.2 Hardware configuration

Make the connections between the listed signals by using the external wires. In case of TWR-KV11Z75M, also connect pin 2 and 3 on J4 and J11.

Freescal Freedom FRDM-K22F

FRDM-K22F Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J24 - Pin 12	->	I2C1_SCL	J1 - Pin 13
I2C0_SDA	J24 - Pin 10	->	I2C1_SDA	J2 - Pin 7

FRDM-K22F Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J24 - Pin 12	->	I2C1_SCL	J1 - Pin 13
I2C0_SDA	J24 - Pin 10	->	I2C1_SDA	J2 - Pin 7
GND	TP21	->	GND	TP21

Freescal Freedom FRDM-K64F

FRDM-K64F Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J2 - Pin 20	->	I2C1_SCL	J4 - Pin 12
I2C0_SDA	J2 - Pin 18	->	I2C1_SDA	J4 - Pin 10

FRDM-K64F Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J2 - Pin 20	->	I2C1_SCL	J4 - Pin 12
I2C0_SDA	J2 - Pin 18	->	I2C1_SDA	J4 - Pin 10

GND	J2 - Pin 14	->	GND	J2 - Pin 14
-----	-------------	----	-----	-------------

FRDM-K64F Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J2 - Pin 20	->	I2C1_SCL	J4 - Pin 12
I2C0_SDA	J2 - Pin 18	->	I2C1_SDA	J4 - Pin 10
GND	J2 - Pin 14	->	GND	J2 - Pin 14

Freescal Freedom FRDM-KL02Z

FRDM-KL02Z Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J7 Pin 10	->	I2C0_SCL	J7 Pin 10
I2C0_SDA	J7 Pin 9	->	I2C0_SDA	J7 Pin 9
GND	J7 Pin 7	->	GND	J7 Pin 7

Freescal Freedom FRDM-KL25Z

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

FRDM-KL25Z Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J10 - Pin 6	->	I2C1_SCL	J10 - Pin 12
I2C0_SDA	J10 - Pin 8	->	I2C1_SDA	J10 - Pin 10

FRDM-KL25Z Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J10 Pin 6	->	I2C1_SCL	J10 Pin 12
I2C0_SDA	J10 Pin 8	->	I2C1_SDA	J10 Pin 10
GND	J9 Pin 14	->	GND	J9 Pin 14

Getting Started

FreescalE Freedom FRDM-KL26Z

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

FRDM-KL26Z Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J4 - Pin 6	->	I2C1_SCL	J2 - Pin 20
I2C0_SDA	J4 - Pin 8	->	I2C1_SDA	J2 - Pin 18

FRDM-KL26Z Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J4 - Pin 6	->	I2C1_SCL	J2 - Pin 20
I2C0_SDA	J4 - Pin 8	->	I2C1_SDA	J2 - Pin 18
GND	J2 - Pin 14	->	GND	J2 - Pin 14

FreescalE Freedom FRDM-KL27Z

FRDM-KL27Z Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J4 Pin 20	->	I2C1_SCL	J4 Pin 12
I2C0_SDA	J4 Pin 18	->	I2C1_SDA	J4 Pin 10

FRDM-KL27Z Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J4 Pin 20	->	I2C1_SCL	J4 Pin 12
I2C0_SDA	J4 Pin 18	->	I2C1_SDA	J4 Pin 10
GND	J2 Pin 14	->	GND	J2 Pin 14

FreescalE Freedom FRDM-KL43Z

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high

baurate. In this case, user need to use external pull-up resistors.

FRDM-KL43Z Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J4 Pin 2	->	I2C1_SCL	J2 Pin 20
I2C0_SDA	J4 Pin 4	->	I2C1_SDA	J2 Pin 18

FRDM-KL43Z Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J4 Pin 2	->	I2C1_SCL	J2 Pin 20
I2C0_SDA	J4 Pin 4	->	I2C1_SDA	J2 Pin 18
GND	J2 Pin 14	->	GND	J2 Pin 14

Freescale Freedom FRDM-KL43Z

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

FRDM-KL43Z Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J4 Pin 2	->	I2C1_SCL	J2 Pin 20
I2C0_SDA	J4 Pin 4	->	I2C1_SDA	J2 Pin 18

FRDM-KL43Z Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J4 Pin 2	->	I2C1_SCL	J2 Pin 20
I2C0_SDA	J4 Pin 4	->	I2C1_SDA	J2 Pin 18
GND	J2 Pin 14	->	GND	J2 Pin 14

Freescale Freedom FRDM-KL46Z

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

Getting Started

baurate. In this case, user need to use external pull-up resistors.

FRDM-KL46Z Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J4 Pin 6	->	I2C1_SCL	J2 Pin 20
I2C0_SDA	J4 Pin 8	->	I2C1_SDA	J2 Pin 18

FRDM-KL46Z Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J4 Pin 6	->	I2C1_SCL	J2 Pin 20
I2C0_SDA	J4 Pin 8	->	I2C1_SDA	J2 Pin 18
GND	J2 Pin 14	->	GND	J2 Pin 14

Freescall Freedom FRDM-KW40Z

FRDM-KW40Z has only RED leds available so GREEN and BLUE leds blinking is simulated by different RED leds.

FRDM-KW40Z Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
PTC2/I2C1_SCL	J25 - Pin 10	->	PTC2/I2C1_SCL	J25 - Pin 10
PTC3/I2C1_SDA	J25 - Pin 12	->	PTC3/I2C1_SDA	J25 - Pin 12>
GND	J24 - Pin 14	->	GND	J24 - Pin 14

Freescall Modular Reference Board MRB-KW01

MRB board doesn't include user controllable LEDs, so the only available commands are: 4 (Read Temperature) and 5 (Read Id).

MRB-KW01 Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J15 - Pin 12	->	I2C1_SCL	J15 - Pin 13
I2C0_SDA	J14 - Pin 8	->	I2C1_SDA	J15 - Pin 11

MRB-KW01 Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J15 - Pin 12	->	I2C1_SCL	J14 - Pin 14
I2C0_SDA	J14 - Pin 8	->	I2C1_SDA	J14 - Pin 12
GND	J14 - Pin 18	->	GND	J14 - Pin 18

TWR-K21D50M Tower System module

TWR-K21D50M Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
PTC10/I2C0_SCL	Primary Elevator - Pin A7	->	PTD2/I2C1_SCL	Primary Elevator - Pin B45
PTC11/I2C0_SDA	Primary Elevator - Pin A8	->	PTD3/I2C1_SDA	Primary Elevator - Pin B44

TWR-K21D50M Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
PTC10/I2C0_SCL	Primary Elevator - Pin A7	->	PTD2/I2C1_SCL	Primary Elevator - Pin B45
PTC11/I2C0_SDA	Primary Elevator - Pin A8	->	PTD3/I2C1_SDA	Primary Elevator - Pin B44
GND	Primary Elevator - Pin A65	->	GND	Primary Elevator - Pin A65

TWR-K21F120M Tower System module

TWR-K21F120M Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
PTD2/I2C0_SCL	Primary Elevator B45	->	PTC10/I2C1_SCL	Primary Elevator B50
PTD3/I2C0_SDA	Primary Elevator B44	->	PTC11/I2C1_SDA	Primary Elevator B51

Getting Started

TWR-K21F120M Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
PTD2/I2C0_SCL	Primary Elevator B45	->	PTC10/I2C1_SCL	Primary Elevator B50
PTD3/I2C0_SDA	Primary Elevator B44	->	PTC11/I2C1_SDA	Primary Elevator B51
GND	Primary Elevator - Pin A65	->	GND	Primary Elevator - Pin A65

TWR-K22F120M Tower System module

TWR-K22F120M Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator - Pin A7	->	I2C1_SCL	Primary Elevator - Pin B50
I2C0_SDA	Primary Elevator - Pin A8	->	I2C1_SDA	Primary Elevator - Pin B51

TWR-K22F120M Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator - Pin A7	->	I2C1_SCL	Primary Elevator - Pin B50
I2C0_SDA	Primary Elevator - Pin A8	->	I2C1_SDA	Primary Elevator - Pin B51
GND	Primary Elevator - Pin A65	->	GND	Primary Elevator - Pin A65

TWR-K24F120M Tower System module

TWR-K24F120M Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator A7	->	I2C1_SCL	Primary Elevator B50

I2C0_SDA	Primary Elevator A8	->	I2C1_SDA	Primary Elevator B51
----------	------------------------	----	----------	-------------------------

TWR-K24F120M Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator A7	->	I2C1_SCL	Primary Elevator B50
I2C0_SDA	Primary Elevator A8	->	I2C1_SDA	Primary Elevator B51
GND	Primary Elevator A6	->	GND	Primary Elevator A6

TWR-K60D100M Tower System module

TWR-K60D100M Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator A7	->	I2C1_SCL	Primary Elevator A75
I2C0_SDA	Primary Elevator A8	->	I2C1_SDA	Primary Elevator B71

TWR-K60D100M Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator A7	->	I2C1_SCL	Primary Elevator A75
I2C0_SDA	Primary Elevator A8	->	I2C1_SDA	Primary Elevator B71
GND	Primary Elevator A6	->	GND	Primary Elevator A6

TWR-K64F120M Tower System module

TWR-K64F120M Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location

Getting Started

I2C0_SCL	Primary Elevator - Pin A7	->	I2C1_SCL	Primary Elevator - Pin A75
I2C0_SDA	Primary Elevator - Pin A8	->	I2C1_SDA	Primary Elevator - Pin B71

TWR-K64F120M Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator - Pin A7	->	I2C1_SCL	Primary Elevator - Pin A75
I2C0_SDA	Primary Elevator - Pin A8	->	I2C1_SDA	Primary Elevator - Pin B71
GND	Primary Elevator - Pin A65	->	GND	Primary Elevator - Pin A65

TWR-K65F180M Tower System module

TWR-K65F180M Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator - Pin A7	->	I2C1_SCL	Primary Elevator - Pin B11
I2C0_SDA	Primary Elevator - Pin A8	->	I2C1_SDA	Primary Elevator - Pin B22

TWR-K65F180M Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator - Pin A7	->	I2C1_SCL	Primary Elevator - Pin B11
I2C0_SDA	Primary Elevator - Pin A8	->	I2C1_SDA	Primary Elevator - Pin B22
GND	Primary Elevator - Pin A65	->	GND	Primary Elevator - Pin A65

TWR-K80F150M Tower System module

TWR-K65F180M Single Board

Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator - Pin A7	->	I2C1_SCL	Primary Elevator - Pin A75
I2C0_SDA	Primary Elevator - Pin A8	->	I2C1_SDA	Primary Elevator - Pin B71

TWR-K65F180M Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator - Pin A7	->	I2C1_SCL	Primary Elevator - Pin A75
I2C0_SDA	Primary Elevator - Pin A8	->	I2C1_SDA	Primary Elevator - Pin B71
GND	Primary Elevator - Pin A65	->	GND	Primary Elevator - Pin A65

TWR-KL43Z48M Tower System module

TWR-KL43Z48M Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator A40	->	I2C1_SCL	Primary Elevator A7
I2C0_SDA	Primary Elevator A39	->	I2C1_SDA	Primary Elevator A8

TWR-KL43Z48M Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator A40	->	I2C1_SCL	Primary Elevator A7
I2C0_SDA	Primary Elevator A39	->	I2C1_SDA	Primary Elevator A8
GND	Primary Elevator A6	->	GND	Primary Elevator A6

Getting Started

FRDM-KV31F Tower System module

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

FRDM-KV31F Single Board				
Master		Connects To	Slave	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J1-16	->	I2C1_SCL	J1-02
I2C0_SDA	J2-13	->	I2C1_SDA	J1-04

FRDM-KV31F Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J1-16	->	I2C1_SCL	J1-02
I2C0_SDA	J2-13	->	I2C1_SDA	J1-04
GND	J2-14	->	GND	J2-14

FRDM-KV10Z:

FRDM-KL46Z Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J2 Pin 13	->	I2C0_SCL	J2 Pin 13
I2C0_SDA	J1 Pin 15	->	I2C0_SDA	J1 Pin 15
GND	J2 Pin 14	->	GND	J2 Pin 14

TWR-KV11Z75M Tower System module

KV11 derivatives have only one I2C peripheral so only connection between two boards is possible. The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

TWR-KV11Z75M Two Boards				
Master (Board #1)		Connects To	Slave (Board #2)	
Pin Name	Board Location		Pin Name	Board Location

PTC6/I2C0_SCL	J24 - Pin 19	->	PTC6/I2C0_SCL	J24 - Pin 19
PTC7/I2C0_SDA	J24 - Pin 20	->	PTC7/I2C1_SDA	J24 - Pin 20
GND	J24 - pin 1	->	GND	J24 - Pin 1

17.5.3 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For more detailed instructions, see a Kinetis SDK User's Guide for your board.

17.6 Run the demo

This menu displays in the terminal window:

```
Available Commands:
LED Red Toggle (1)   - Red Light toggles on/off
LED Green Toggle (2) - Green Light toggles on/off
LED Blue Toggle (3)  - Blue Light toggles on/off
Read Temperature (4) - Get temperature of client (It is necessary to set voltage reference exactly to 3.3
                      V to see correct temperature.)
Read Id      (5)     - Read client unique ID
```

Enter your choice (1 - 5):

You can select to toggle the RGB LED, read the temperature of the client board, and read the client unique ID.

Note that a different colored LED may turn on if the selected color is not available on that board.



Run the demo

Chapter 18

iRTC Comp 1 Hz Demo

This demo application demonstrates the iRTC 1Hz output through XBAR with fine compensation.

18.1 Overview

The iRTC 1Hz output with compensation project is a demonstration program that uses the KSDK software. It implements the following features:

- Use 32.768K external crystal as both iRTC and system (FLL) clock source.
- Enable IRC 4MHz to MCGIRCLK for iRTC fine compensation.
- Route the iRTC fine 1Hz output to XBAR_OUT10 pin
- Define the tested ppm by macro, and calculate the compensate Integer and Frac value written to RTC_COMPEN register.

18.2 Supported Platforms

This Tower System module is supported by the KSDK iRTC 1Hz output with compensation demo.

- TWR-KM34Z75M

18.3 System Requirement

18.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

18.4 Getting Started

18.4.1 Hardware Settings

This project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board jumper settings and configurations in default state when running this demo.

Run the demo

18.4.2 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions, see the appropriate board User's Guide.

18.5 Run the demo

These instructions are displayed/shown on the terminal window:

```
RTC Compensate 1HZ output demo
Compensate with error -100ppm (int:c, frac:60)
```

The 1Hz pulse out is routed to the PTL2 (XBAR0_OUT10) pin, which can be tested on the J25 Pin-23 on board.

Chapter 19

HTTP Server Demo on lwIP TCP/IP Stack

This demo application demonstrates the HTTPServer demo on lwIP TCP/IP stack with bare metal SDK or different RTOSes.

19.1 Overview

This is an HTTPServer set up on lwIP TCP/IP stack with bare metal SDK or different RTOSes. The user uses an Internet browser to send a request for connection. The board acts as an HTTP server and sends a Web page back to the PC.

19.2 Supported RTOS

- Freescale MQX™ RTOS
- FreeRTOS
- µC/OS-II
- µC/OS-III
- Bare Metal (no RTOS)

19.3 Supported Hardware

These Freescale Freedom development platforms and Tower System modules are supported by the Kinetis software development kit HTTPServer demo.

- FRDM-K64F
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M

19.4 System Requirement

19.4.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

Getting Started

19.4.2 Software requirements

- The project files are in:
 - Baremetal: <SDK_Install>/examples/<board>/demo_apps/lwip/lwip_httpserver_demo/httpserver-_bm/<toolchain>
 - RTOS: <SDK_Install>/examples/<board>/demo_apps/lwip/lwip_httpserver_demo/httpserver-_rtos/<rtos>/<toolchain>
- Library dependencies:
 - Baremetal, FreeRTOS, uC/OS: ksdk_platform_lib
 - MQX RTOS: mqx_<board>, mqx_stdlib_<board>

19.5 Getting Started

See the *lwIP TCP/IP Stack and Kinetis SDK Integration User's Guide* (document KSDKLWIPUG) for more information about the setup and requirements.

19.5.1 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with the following settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions steps, see a Kinetis SDK User's Guide for your board.

19.5.2 Network Configuration

Configure the IP address of PC network adapters as shown: IP address - 192.168.2.100 Subnet Mask - 255.255.255.0

19.5.3 Run the demo

1. Download the program to target board, which should be installed in TWR or FRDM.
2. Connect the Ethernet cable between the PC and the board.
3. When successfully connected, reset the board to run the demo.
4. Open the PC command window, type in "ping 192.168.2.102" to test whether lwIP stack is running. If successful, four echo request packets are successfully replied.

5. Input "192.168.2.102" in the URL of an Internet browser on a PC. If successful, the web page which the board returns opens in the browser.

Chapter 20

Ping Demo on lwIP TCP/IP Stack

This demo application demonstrates the Ping demo on lwIP TCP/IP stack with bare metal SDK or different RTOSes.

20.1 Overview

This is a Ping Demo on the lwIP TCP/IP stack which uses the ICMP protocol. The application on board periodically sends the ICMP echo request to a PC and processes the PC reply. Type the "ping \$board_address" in the PC command window to send an ICMP echo request to the board. The lwIP stack sends the ICMP echo reply back to the PC.

20.2 Supported RTOS

- Freescale MQX™ RTOS
- FreeRTOS
- µC/OS-II
- µC/OS-III
- Bare Metal (no RTOS)

20.3 Supported Hardware

These Freescale Freedom development platforms and Tower System modules are supported by the KSDK Ping demo.

- FRDM-K64F
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M

20.4 System Requirement

20.4.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

Run the demo

20.4.2 Software requirements

- The project files are in:
 - Baremetal: <SDK_Install>/examples/<board>/demo_apps/lwip/lwip_ping_demo/ping_bm/<toolchain>
 - RTOS: <SDK_Install>/examples/<board>/demo_apps/lwip/lwip_ping_demo/ping_rtos/<rtos>/<toolchain>
- Library dependencies:
 - Baremetal, FreeRTOS, uC/OS: ksdk_platform_lib
 - MQX RTOS: mqx_<board>, mqx_stdlib_<board>

20.5 Getting Started

See the *lwIP TCP/IP Stack and Kinetis SDK Integration User's Guide* (document KSDKLWIPUG) for instructions and requirements.

20.5.1 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions, see a Kinetis SDK User's Guide for your board.

20.5.2 Network Configuration

Configure the IP address of PC network adapters as shown:

- 192.168.2.100

20.6 Run the demo

1. Download the program to the target board.
2. Connect the Ethernet cable between the PC and the board.
3. When successfully connected, reset the board to run the demo.
4. Open the terminal. Ping send and ping receive are successful.
5. Type in "ping 192.168.2.102" in PC command window. If the operation is successful, four packets are successful replied.

Chapter 21

TCP Echo Demo on lwIP TCP/IP Stack

This demo application demonstrates the TCP Echo demo on lwIP TCP/IP stack with bare metal KSDK or different RTOSes.

21.1 Overview

This is a TCP echo demo on the lwIP TCP/IP stack with bare metal KSDK or different RTOSes, which uses the TCP protocol and acts as an echo server. The application on board sends back the TCP packets from the PC, which can be used to test whether the TCP connection is available.

21.2 Supported RTOS

- Freescale MQX™ RTOS
- FreeRTOS
- µC/OS-II
- µC/OS-III
- Bare Metal (no RTOS)

21.3 Supported Hardware

These Freescale Freedom development platforms and Tower System modules are supported by the KSDK TCP Echo demo.

- FRDM-K64F
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M

21.4 System Requirement

21.4.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

Run the demo

21.4.2 Software requirements

- The project files are in:
 - Baremetal: <SDK_Install>/examples/<board>/demo_apps/lwip/lwip_tcpecho_demo/tcpecho_bm/<toolchain>
 - RTOS: <SDK_Install>/examples/<board>/demo_apps/lwip/lwip_tcpecho_demo/tcpecho_rtos/<rtos>/<toolchain>
- Library dependencies:
 - Baremetal, FreeRTOS, uC/OS: ksdk_platform_lib
 - MQX RTOS: mqx_<board>, mqx_stdlib_<board>

21.5 Getting Started

See the *lwIP TCPIP Stack and Kinetis SDK Integration User's Guide* (document KSDKLWIPUG) for instructions and requirements.

21.5.1 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions, see a Kinetis SDK User's Guide for your board.

21.5.2 Network Configuration

Configure the IP address of PC network adapters as shown:

- 192.168.2.100

21.6 Run the demo

1. Download the program to the target board.
2. Connect the Ethernet cable between the PC and the board.
3. When successfully connected, reset the board to run the demo.
4. Open the command window on PC, type in "ping 192.168.2.102" to test whether the lwIP is running.
5. If it is running, use an external echo tool to perform the echo request. This tool sends

TCP packets to the board and checks whether the content sent back from board is the same.

A similar tool named "echotool" can be downloaded

from the: <http://bansky.net/echotool/> [example: echotool 192.168.2.102 /p tcp /r 7 /d hello]

6. If the operation is successful, all packets sent back are same as the packets sent to the board.



Run the demo

Chapter 22

UDP Echo Demo on lwIP TCP/IP Stack

This demo application demonstrates the UDP Echo demo on lwIP TCP/IP stack with bare metal KSDK or different RTOSes.

22.1 Overview

This is a UDP echo demo on the lwIP TCP/IP stack with bare metal KSDK or different RTOSes, which uses the UDP protocol and acts as an echo server. The application on board sends back the UDP packets from the PC, which can be used to test whether the UDP connection is available.

22.2 Supported RTOS

- Freescale MQX™ RTOS
- FreeRTOS
- μ C/OS-II
- μ C/OS-III
- Bare Metal (no RTOS)

22.3 Supported Hardware

These Freescale Freedom development platforms and Tower System modules are supported by the KSDK UDP Echo demo.

- FRDM-K64F
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M

22.4 System Requirement

22.4.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

Run the demo

22.4.2 Software requirements

- The project files are in:
 - Bare Metal: <SDK_Install>/examples/<board>/demo_apps/lwip/lwip_udpecho_demo/udpecho-_bm/<toolchain>
 - RTOS: <SDK_Install>/examples/<board>/demo_apps/lwip/lwip_udpecho_demo/udpecho-_rtos/<rtos>/<toolchain>
- Library dependencies:
 - Bare Metal, FreeRTOS, μ C/OS: ksdk_platform_lib
 - MQX RTOS: mqx_<board>, mqx_stdlib_<board>

22.5 Getting Started

See the *lwIP TCP/IP Stack and Kinetis SDK Integration User's Guide* (document KSDKLWIPUG) for instructions and requirements.

22.5.1 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions, see a Kinetis SDK User's Guide for your board.

22.5.2 Network Configuration

Configure the IP address of PC network adapters as shown:

- 192.168.2.100

22.6 Run the demo

1. Download the program to the target board.
2. Connect the Ethernet cable between the PC and the board.
3. When successfully connected, reset the board to run the demo.
4. Open the command window on PC, type in "ping 192.168.2.102" to test whether the lwIP is running.
5. If it is running, use an external echo tool to perform the echo request. This tool sends UDP packets to the board and checks whether the content sent back from board is the same. A similar tool

named "echotool" can be downloaded from the: <http://bansky.net/echotool/> [example: echotool 192.168.2.102 /p udp /r 7 /d hello]

6. If the operation is successful, all packets sent back are the same as the packets sent to the board.



Run the demo

Chapter 23

MMAU Filter Demo

23.1 Overview

The Memory Mapped Arithmetic Unit (MMAU) provides acceleration to a set of mathematical operations, including signed/unsigned multiplication and accumulation, division, and square root, and so on. This demo shows a typical use of the Memory Mapped Arithmetic Unit (MMAU) for 4th order lowpass filter computing. The operation of 4th order lowpass filter function is given by the following equation:

$$y(n)=b0*x(n)+b1*x(n-1)+b2*x(n-2)+b3*x(n-3)+b4*x(n-4)-a1*y(n-1)-a2*y(n-2)-a3*y(n-3)-a4*y(n-4)$$

23.2 Supported Platforms

This Tower System module is supported by the MMAU example.

- TWR-KM34Z75M

23.3 System Requirement

23.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

23.4 Getting Started

23.4.1 Hardware settings

The MMAU Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

23.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits

Getting Started

- No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
 4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

23.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
Mmau_filter_demo Begin.  
  
First column is an input signal, second column is an filtered output signal.  
0 --> 0  
2166732 --> 360  
2753973 --> 3120  
1604297 --> 13224  
123267 --> 37264  
12239 --> 79960  
1734704 --> 141864  
4097830 --> 220856  
5326223 --> 316240  
4660528 --> 431704  
3040692 --> 574288  
2258324 --> 750080  
3341806 --> 960296  
5629024 --> 1201096  
7363103 --> 1467192  
7274451 --> 1755928  
5723831 --> 2068168  
4376659 --> 2405248  
4701958 --> 2764856  
6648280 --> 3139672  
8689462 --> 3520160  
9199008 --> 3899152  
7914891 --> 4274256  
6175140 --> 4646056  
5711947 --> 5013856  
7090722 --> 5372904  
9200346 --> 5715656  
10253866 --> 6036000  
9398102 --> 6332656  
7482051 --> 6608672  
6291825 --> 6867456  
6941379 --> 7108872  
8868840 --> 7328872  
10342644 --> 7522936  
10021506 --> 7690160  
8162831 --> 7834256  
6390892 --> 7960504  
6233630 --> 8071352  
7746287 --> 8164600  
9461846 --> 8235752  
9712938 --> 8282400  
8134287 --> 8306680  
5992130 --> 8313568  
5043834 --> 8306552  
5955090 --> 8284592  
7700647 --> 8243112  
8488467 --> 8178136
```

7374730	-->	8089872
5114698	-->	7982520
3482901	-->	7860496
3675087	-->	7724496
5231628	-->	7570944
6452309	-->	7395344
5928792	-->	7196520
3814157	-->	6977928
1685767	-->	6744864
1125013	-->	6500072
2293441	-->	6241728
3788057	-->	5965592
3906151	-->	5669400
2180158	-->	5355528
-200227	-->	5029528
-1458963	-->	4695840
-832815	-->	4354552
741949	-->	4002104
1473959	-->	3635312
331515	-->	3255072
-2027032	-->	2866400
-3845491	-->	2474776
-3851097	-->	2082080
-2400263	-->	1685776
-1156602	-->	1282080
-1591289	-->	870256
-3656810	-->	454176
-5828926	-->	39720
-6479050	-->	-369624
-5340656	-->	-775008
-3748612	-->	-1180296
-3435831	-->	-1587688
-4971342	-->	-1994856
-7246945	-->	-2396160
-8474926	-->	-2786856
-7797983	-->	-3166504
-6060970	-->	-3538512
-5049184	-->	-3906232
-5879437	-->	-4269112
-7993407	-->	-4622392
-9660172	-->	-4960608
-9535189	-->	-5281752
-7871223	-->	-5588344
-6290283	-->	-5884448
-6322041	-->	-6171320
-8025478	-->	-6445624
-9935534	-->	-6701808
-10382821	-->	-6936512
-8997469	-->	-7151032
-7042261	-->	-7349632
-6274946	-->	-7535216
-7364674	-->	-7706264
-9289208	-->	-7857792
-10255966	-->	-7985472
-9317117	-->	-8089208
-7223680	-->	-8172936
-5749155	-->	-8240840
-6092036	-->	-8293384
-7796394	-->	-8326744
-9162986	-->	-8336152
-8780521	-->	-8320128
-6797545	-->	-8281800
-4789092	-->	-8226120
-4338241	-->	-8155472
-5610457	-->	-8067648
-7205110	-->	-7958000
-7417939	-->	-7823832
-5777092	-->	-7667080

Getting Started

```
-3468902 --> -7492856
-2269827 --> -7305176
-2946762 --> -7103720
-4566901 --> -6884528
-5338900 --> -6644024
-4227529 --> -6382728
-1887148 --> -6105312
-73038 --> -5816960
-60914 --> -5519288
-1498499 --> -5209520
-2723782 --> -4883656
-2263234 --> -4540760
-160231 --> -4184528
```

Mmau_filter_demo End.

Chapter 24

MMDVSQ Demo

This demo application demonstrates how to use MMDVSQ driver.

24.1 Overview

The MMDVSQ Demo project is a simple demonstration program to show how to use the MMDVSQ driver. This demo demonstrates the efficiency of division and square root operations and typical C functions.

24.2 Supported Platforms

This demo supports the following Tower System module and Freedom development platforms:

- FRDM-KV10Z
- TWR-KV10Z32
- TWR-KV11Z75M

24.3 System Requirement

24.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

24.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/mmdvsq_demo/<toolchain>.
- Library dependencies: ksdk_platform_lib

24.4 Getting Started

24.4.1 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits

Run the demo

- No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
 4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions, see a Kinetis SDK User's Guide for your board.

24.5 Run the demo

This is an example serial terminal output:

```
MMDVSQ Demo start!  
C library calculation takes 622 tickcycles  
MMDVSQ t calculation takes 521 tickcycles  
MMDVSQ Demo end
```

The tickcycles are used as a reference.

Chapter 25

Power Manager HAL Demo

25.1 Overview

The Power Manager demo application demonstrates different Power Manager modes supported by the Kinetis SoCs. The set of supported low power modes and their transition possibility differ platform to platform. See section: "System Mode Controller" in a Reference Manual for each Kinetis sub-family microcontroller.

25.2 Supported Hardware

These Freescale Freedom development platforms and Tower System modules are supported by the Kinetis software development kit Power Manager demo.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- MRB-KW01
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KM34Z75M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512

Getting Started

- USB-KW40Z

25.3 System Requirement

25.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for a specific device
- Personal Computer

25.3.2 Software requirements

- The project files are in: `<SDK_Install>/examples/<board>/demo_apps/power_manager_hal_demo/<toolchain>`.
- Library dependencies: `ksdk_platform_lib`

25.4 Getting Started

25.4.1 Hardware Settings

The demo does not require any special hardware configurations. Although not required, the recommendation is to leave the development board jumper settings and configurations in default state when running this demo.

25.4.2 Prepare the Demo

Follow the instructions in *Getting Started with Kinetis Software Development Kit (KSDK)* to:

- Set up hardware connections
- Configure a Terminal session
- Build and download application to targeted devices

Note: The demo is configured to work with the Terminal baudrate at 9600 bps. When running the demo, unplug all debugger devices. For the MRB-KW01, it is necessary to connect on the J8 pins 2-3.

25.4.3 Run the demo

1. Press the reset button on the hardware.
2. A control menu is displayed on the Terminal window. Note that the list on the menu is not the same for all platforms.

It depends on the list of supported low power modes. For example, on the TWR-K64F120M, this menu displays:

Power Manager Demo

```
Core Clock = 48000000Hz
```

```
SMC mode = kStatRun
```

```
Select the desired operation
```

```
Press  A for enter: RUN    - Normal RUN mode
```

```
Press  B for enter: Wait   - Wait mode
```

```
Press  C for enter: Stop   - Stop mode
```

```
Press  D for enter: VLPR   - Very Low Power Run mode
```

```
Press  E for enter: VLPW   - Very Low Power Wait mode
```

```
Press  F for enter: VLPS   - Very Low Power Stop mode
```

```
Press  G for enter: LLS    - Low Leakage Stop mode
```

```
Press  H for enter: VLLS0  - Very Low Leakage Stop 0 mode
```

```
Press  I for enter: VLLS1  - Very Low Leakage Stop 1 mode
```

```
Press  J for enter: VLLS3  - Very Low Leakage Stop 3 mode
```

```
Waiting for key to be pressed...
```

1. Enter a command by pressing the corresponding input key. If the user enters an invalid mode transition, the demo displays this message on the terminal window:

```
Cannot go from RUN to VLPW directly.  
Next loop
```

Getting Started

In most valid mode transitions, the SoC wakes up after receiving the RTC alarm or the GPIO switch trigger. However, in some modes, the SoC only accepts either RTC alarm or the GPIO switch trigger. In that case, the demo prints the following message on the terminal: Note: On the FRDM-KL25Z, FRDM-KL26Z and FRDM-KL46Z, the RTC counter is fed without the 32 Khz (OSC32KCLK) clock. Therefore, the accuracy of RTC alarms is impacted.

The board does not support wake up from this mode by RTC due to disabled External
Entering Very Low Leakage Stop 0 mode, press the SW1 button to wake up.
Wake up goes through Reset sequence.

25.4.4 Supported Low Power Modes By Platform

This table shows the supported modes on different platforms:

Platform	Supported Power Modes	Wakeup Sources
FRDM-K22F	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(80MHz), HSRUN(120MHz)	RTC, SW2
FRDM-K64F	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(120MHz)	RTC, SW2
FRDM-KL02Z48M	WAIT, STOP, VLPR(1 MHz), VLPW, VLPS, VLLS1, VLLS3, RUN(48MHz)	LPTMR
FRDM-KL03Z48M	WAIT, STOP, VLPR(2 MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS3, RUN(48MHz)	RTC, SW2
FRDM-KL25Z	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS3, RUN(48MHz)	RTC, PTD6 J2-17 to VSS J9-14
FRDM-KL26Z	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS3, RUN(48MHz)	RTC, SW1
FRDM-KL27Z	WAIT, STOP, VLPR(2 MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS3, RUN(48MHz)	RTC, SW3
FRDM-KL43Z	WAIT, STOP, VLPR(2 MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS3, RUN(48MHz)	RTC, SW3
FRDM-KL46Z	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS3, RUN(48MHz)	RTC, SW1

FRDM-KV10Z	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, VLLS0, VLLS1, VLLS3, RUN(75MHz)	RTC, SW3
FRDM-KV31F	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(80MHz), HSRUN(120MHz)	RTC, SW3
FRDM-KW24	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(48MHz)	RTC, SW1
FRDM-KW40Z	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(32MHz)	RTC, SW2
MRB-KW01	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS, VLLS1, VLLS3, RUN(48MHz)	RTC
TWR-K21D50M	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(48MHz)	RTC, SW1
TWR-K21F120M	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(120MHz)	RTC, SW3
TWR-K22F120M	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(80MHz), HSRUN(120MHz)	RTC, SW1
TWR-K24F120M	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(120MHz)	RTC, SW2
TWR-K60D100M	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS, VLLS1, VLLS2, VLLS3, RUN(96MHz)	RTC, SW1
TWR-K64F120M	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(120MHz)	RTC, SW1
TWR-K65F180M	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(120MHz), HSRUN(180MHz)	RTC, SW3
TWR-K80F150M	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(120MHz), HSRUN(150MHz)	RTC, SW3

Getting Started

TWR-KL43Z48M	WAIT, STOP, VLPR(2 MHz), VLPW, VLPS, LLS, VLLS1, VLLS3, RUN(48MHz)	RTC, SW2
TWR-KM34Z75M	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(72MHz)	RTC, SW1
TWR-KV10Z32	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, VLLS0, VLLS1, VLLS3, RUN(75MHz)	RTC, SW2
TWR-KV31F120M	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(80MHz), HSRUN(120MHz)	RTC, SW1
TWR-KV11Z75M	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, VLLS0, VLLS1, VLLS3, RUN(75MHz)	RTC, SW2
TWR-KW24D512	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(48MHz)	RTC, SW3
USB-KW40Z	WAIT, STOP, VLPR(4 MHz), VLPW, VLPS, LLS3, VLLS1, VLLS2, VLLS3, RUN(21MHz)	RTC

Chapter 26

Power Manager RTOS Demo

This demo application demonstrates how to use the Power Manager.

26.1 Overview

The Power Manager demo application demonstrates different Power Manager modes supported by the Kinetis SoCs. The set of supported low power modes and their transition possibility differ platform to platform. See section: "System Mode Controller" in a Reference Manual for each Kinetis Sub-family microcontroller.

26.2 Supported RTOS

- Freescale MQX RTOS
- FreeRTOS
- C/OS-II
- C/OS-III
- Bare Metal (no RTOS)

26.3 Supported Hardware

These Freescale Freedom development platforms and Tower System modules are supported by the Kinetis software development kit Power Manager demo.

The Bare Metal (no RTOS) demo Supported Platforms:

- FRDM-K22F
- FRDM-K64F
- FRDM-KL25Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M

System Requirements

- TWR-KL43Z48M
- TWR-KV31F120M
- TWR-KW24D512
- USB-KW40Z

The FreeRTOS, Freescale MQX RTOS, C/OS-II, C/OS-III demo Supported Platforms:

- FRDM-K22F
- FRDM-K64F
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KV31F120M
- TWR-KW24D512
- USB-KW40Z

26.4 System Requirements

26.4.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for a specific device
- Personal Computer

26.4.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/power_manager_rtos_demo/<configuration>/<toolchain> where <configuration> is either bare metal or a supported RTOS.
- Library dependencies:
 - Bare metal, FreeRTOS, uC/OS: ksdk_platform_lib

- MQX RTOS: `mqx_<board>`, `mqx_stdlib_<board>`

26.5 Getting Started

26.5.1 Hardware Settings

The demo does not require any special hardware configurations. Although not required, the recommendation is to leave the development board jumper settings and configurations in default state when running this demo.

26.5.2 Prepare the Demo

Follow the instructions in *Getting Started with Kinetis Software Development Kit (KSDK)* to:

- Set up hardware connections
- Configure a Terminal session
- Build and download application to targeted devices

Note: The demo is configured to work with the Terminal baudrate at 9600 bps. When running the demo, unplug all debugger devices. For the MRB-KW01, it is necessary to connect on the J8 pins 2-3.

26.5.3 Run the demo

1. Press the reset button on the hardware.
2. A control menu is displayed on the Terminal window. Note that the list on the menu is not the same for all platforms. It depends on the list of supported low power modes. For example, on the TWR-K64F120M, this menu displays:

Power Manager Demo

```
Core Clock = 48000000Hz
```

```
SMC mode = kStatRun
```

```
Select the desired operation
```

```
Press  A for enter: RUN    - Normal RUN mode
```

```
Press  B for enter: Wait   - Wait mode
```

```
Press  C for enter: Stop   - Stop mode
```

Getting Started

Press D for enter: VLPR - Very Low Power Run mode

Press E for enter: VLPW - Very Low Power Wait mode

Press F for enter: VLPS - Very Low Power Stop mode

Press G for enter: LLS - Low Leakage Stop mode

Press H for enter: VLLS0 - Very Low Leakage Stop 0 mode

Press I for enter: VLLS1 - Very Low Leakage Stop 1 mode

Press J for enter: VLLS3 - Very Low Leakage Stop 3 mode

Waiting for key to be pressed...

1. Enter a command by pressing the corresponding input key. If the user enters an invalid mode transition, the demo displays this message on the terminal window:

```
Cannot go from RUN to VLPW directly.  
Next loop
```

In most valid mode transitions, the SoC wakes up after receiving the RTC alarm or the GPIO switch trigger. However, in some modes, the SoC only accepts either RTC alarm or the GPIO switch trigger. In that case, the demo prints the following message on the terminal: Note: On the FRDM-KL25Z and FRDM-KL46Z, the RTC counter is fed without the 32KHz (OSC32KCLK) clock. Therefore the accuracy of RTC alarms is impacted.

The board does not support wake up from this mode by RTC due to disabled External Entering Very Low Leakage Stop 0 mode, press the SW1 button to wake up. Wake up goes through Reset sequence.

26.5.4 Supported Low Power Modes By Platform

This table shows the supported modes on different platforms:

Platform	Supported Power Modes	Wakeup Sources
FRDM-K22F	WAIT, STOP, VLPR(4MHz), VLPW, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(80MHz), HSRUN(120MHz)	RTC, SW2

FRDM-K64F	WAIT, STOP, VLPR(4MHz), VL- PW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(120MHz)	RTC, SW2
FRDM-KL25Z	WAIT, STOP, VLPR(4MHz), VL- PW, VLPS, LLS, VLLS0, VLLS1, VLLS3, RUN(48MHz)	RTC, PTD6 J2-17 to VSS J9-14
FRDM-KL27Z	WAIT, STOP, VLPR(2MHz), VL- PW, VLPS, LLS, VLLS0, VLLS1, VLLS3, RUN(48MHz)	RTC, SW3
FRDM-KL43Z	WAIT, STOP, VLPR(2MHz), VL- PW, VLPS, LLS, VLLS0, VLLS1, VLLS3, RUN(48MHz)	RTC, SW3
FRDM-KL46Z	WAIT, STOP, VLPR(4MHz), VL- PW, VLPS, LLS, VLLS0, VLLS1, VLLS3, RUN(48MHz)	RTC, SW1
FRDM-KV31F	WAIT, STOP, VLPR(4MHz), VL- PW, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(80MHz), H- SRUN(120MHz)	RTC, SW3
FRDM-KW24	WAIT, STOP, VLPR(4MHz), VL- PW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(48MHz)	RTC, SW1
FRDM-KW40Z	WAIT, STOP, VLPR(4MHz), VLP- W, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(32MHz)	RTC, SW2
TWR-K21D50M	WAIT, STOP, VLPR(4MHz), VL- PW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(48MHz)	RTC, SW1
TWR-K21F120M	WAIT, STOP, VLPR(4MHz), VL- PW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(120MHz)	RTC, SW3
TWR-K22F120M	WAIT, STOP, VLPR(4MHz), VL- PW, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(80MHz), H- SRUN(120MHz)	RTC, SW1
TWR-K24F120M	WAIT, STOP, VLPR(4MHz), VL- PW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(120MHz)	RTC, SW2
TWR-K60D100M	WAIT, STOP, VLPR(4MHz), VL- PW, VLPS, LLS, VLLS1, VLLS2, VLLS3, RUN(96MHz)	RTC, SW1
TWR-K64F120M	WAIT, STOP, VLPR(4MHz), VL- PW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(120MHz)	RTC, SW1

Getting Started

TWR-K65F180M	WAIT, STOP, VLPR(4MHz), VLPW, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(120MHz), HSRUN(180MHz)	RTC, SW3
TWR-K80F150M	WAIT, STOP, VLPR(4MHz), VLPW, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(120MHz), HSRUN(150MHz)	RTC, SW3
TWR-KL43Z48M	WAIT, STOP, VLPR(2MHz), VLPW, VLPS, LLS, VLLS1, VLLS3, RUN(48MHz)	RTC, SW2
TWR-KV31F120M	WAIT, STOP, VLPR(4MHz), VLPW, VLPS, LLS3, VLLS0, VLLS1, VLLS2, VLLS3, RUN(80MHz), HSRUN(120MHz)	RTC, SW1
TWR-KW24D512	WAIT, STOP, VLPR(4MHz), VLPW, VLPS, LLS, VLLS0, VLLS1, VLLS2, VLLS3, RUN(48MHz)	RTC, SW3
USB-KW40Z	WAIT, STOP, VLPR(4MHz), VLPW, VLPS, LLS3, VLLS1, VLLS2, VLLS3, RUN(21MHz)	RTC

Chapter 27

RTC Function Demo

This demo application demonstrates how to use the RTC driver.

27.1 Overview

This RTC demo application demonstrates the important features of the RTC Module by using the RTC Peripheral Driver.

It supports these features:

- Calendar
 - Get the current date time with Year, Month, Day, Hour, Minute and Second.
 - Set the current date time with Year, Month, Day, Hour, Minute and Second.
- Alarm
 - Set the alarm based on the current time.
 - Application prints a notification when the alarm expires.
- Seconds interrupt
 - Use second interrupt function to display a digital time blink every second.
- Compensation
 - Configure the compensation with cycles.
 - The 1 Hz RTC clock with compensation configured is output to a pin. Use an oscilloscope to check the compensation result.

27.2 Supported Hardware

These Freescale Freedom development platforms and Tower System modules are supported by the KSDK RTC Function demo.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL03Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KW24
- FRDM-KW40Z
- MRB-KW01
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M

Getting Started

- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KW24D512
- USB-KW40Z

27.3 System Requirement

27.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

27.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/rtc_func/<toolchain>.
- Library dependencies: ksdk_platform_lib

27.4 Getting Started

27.4.1 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control (Note that for the FRDM-KL03 platform, the terminal baud rate should be 9600)
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

Note: For the MRB-KW01, it is necessary to connect on the J8 pins 2-3 and change the CLOCK_SETUP to 1 (or change the RTC input to OSC32KCLK in a different way).

For detailed instructions, see a Kinetis SDK User's Guide for your board.

27.5 Run the demo

This menu is displayed on the serial terminal:

Please choose the sub demo to run:

- 1) Get current date time.
- 2) Set current date time.
- 3) Alarm trigger show.
- 4) Second interrupt show (demo for 20s).
- 5) Set RTC compensation.

Select:



Run the demo

Chapter 28

SAI Demo

This demo application demonstrates how to use the SAI drivers.

28.1 Overview

The SAI Demo project is a digital audio demonstration program that uses the KSDK software. It performs audio playback from either a .wav file, stored in Flash, or from the line-in on a TWR-AUDIO-SGTL Tower System module using the KSDK I2S and I2C drivers. On the TWR-K22F120M, TWR-K24F120M, TWR-K64F120M, and the TWR-K80F150M Tower System modules, the project also uses the CMSIS-DSP library to perform a Fast Fourier Transform, and return the fundamental frequency of the line-in audio.

28.2 Supported Hardware

This demo supports the following Freescale Freedom development platforms and Tower System modules:

- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M

28.3 System Requirement

28.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

28.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/sai_demo/<toolchain>.
- Library dependencies: ksdk_platform_lib

Run the demo

28.4 Getting Started

28.4.1 GCC Compiler notes

When building the demo with GCC, ensure that the demo and platform library are built with this option:

```
<code>  
    <br>CHOOSE_FLOAT=HARD_FP<br>  
</code>
```

Otherwise, the project does not use the Kinetis device's hardware floating point when using the CMSIS--DSP library.

28.4.2 Hardware Settings

These Tower System modules are required to run the sai_demo:

- TWR-ELEV (except for the TWR-K24F120M)
- TWR-AUDIO-SGTL (except TWR-K24F120M which has a built-in one)

28.4.3 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions, see a Kinetis SDK User's Guide for your board.

28.5 Run the demo

To hear the audio playback, connect a set of headphones to the headphone output on the TWR-AUDIO--SGTL card. For input to the codec, connect an audio source to the Line-In on the TWR-AUDIO-SGTL.

When the demo starts, this message is displayed in the terminal output window:

```
Audio Demo!
```

```
Press spacebar to start demo.
```

```
Demo begin...
```

The user can either play back audio from the line-in source, or play a .wav file stored in the Flash. The line-in option plays the audio gathered from the codec line-in for approximately 15 seconds.

```
Select player:
    1. Line-In Playback
    2. Wav File Playback
->1
```

If selecting playback from the line-in source, decide whether to perform an FFT analysis to find the fundamental frequency of the audio input. Finding the fundamental frequency is best suited for pure tones played into the line-in of the TWR-AUDIO-SGTL card.

```
Select filter:
    1. FFT - Find Fundamental Frequency
    2. None
->1
```

The user is prompted to select from a list of headphone output levels:

```
Choose headphone dB level:
    1. +3.0 dB
    2. 0.0 dB
    3. -3.0 dB
    4. -6.0 dB
    5. -12.0 dB
    6. -24.0 dB
    7. -48.0 dB
->5
Frequency is 93 Hz
```

The table shows the terminal display after playback has completed and the FFT option was selected. These are the options for the .wav file option:

```
Select player:
    1. Line-In Playback
    2. Wav File Playback
->2
Select Wav file:
    1. Audio Demo
->1
Choose headphone dB level:
    1. +3.0 dB
    2. 0.0 dB
    3. -3.0 dB
```

Run the demo

- 4. -6.0 dB
- 5. -12.0 dB
- 6. -24.0 dB
- 7. -48.0 dB

→5

The quality of the .wav file PCM data depends on the demo system and the compiler.

This table shows the audio sample rate, channels and bit depth of the .wav file for the various platforms and compilers.

Hardware System	Sample Rate (kHz)				Bit Depth				Channels			
	IAR	ARM	GN-U-G-CC	KDS-GCC	IAR	ARM	GN-U-G-CC	KDS-GCC	IAR	ARM	GN-U-G-CC	KDS-GCC
TW-R--K22-F120-M	44.1	44.1	11.-025	11.-025	16	16	16	16	2	2	2	2
TW-R--K24-F120-M	44.1	44.1	44.1	44.1	32	32	32	32	2	2	2	2
TW-R--K60-F100-M	44.1	44.1	44.1	44.1	32	32	32	32	2	2	2	2
TW-R--K64-F120-M	44.1	44.1	44.1	44.1	32	32	32	32	2	2	2	2
TW-R--K65-F180-M	44.1	44.1	44.1	44.1	32	32	32	32	2	2	2	2
TW-R--K80-F150-M	44.1	44.1	44.1	44.1	32	32	32	32	2	2	2	2

TW-R-K21-F120-M	44.1	44.1	11.-025	11.-025	16	16	16	16	2	2	2	2
------------------------	------	------	---------	---------	----	----	----	----	---	---	---	---

Quality differences of the .wav playback depend on the size constraints of the target device, the Flash size, and the density of the code generated by the compiler.

Note that all supported platforms play audio from the line-in option with the same quality: 16-bit, 44.1 kHz, 2 channels.

28.6 Key Functions

void audio_stream_init(void)

Initializes the I2S, I2C, and TWR-AUDIO-SGTL Tower System module for streaming audio from Line-In.

void audio_wav_init(wave_file_t *newWav)

Initializes the I2S, I2C, and TWR-AUDIO-SGTL Tower System module for playing back WAV file in Flash.

Parameters

<i>newWav</i>	Pointer to wave file data structure.
---------------	--------------------------------------

uint32_t config_volume(sgtl_handler_t *handler, sgtl_module_t module, uint32_t volumeCtrl)

Sets volume from the user input.

Parameters

<i>handler</i>	pointer to codec handler structure.
<i>module</i>	name of module on codec to set the volume for.
<i>volumeCtrl</i>	user input data from terminal menu.

Returns

status_t Return kStatus_Success if function completed successfully, return kStatusFail if function failed.

Key Functions

snd_status_t stream_audio(dsp_types_t dspType, uint8_t volumeCtrl)

Plays a stream of audio.

Parameters

<i>dspType</i>	Used to select one DSP function to perform on the data.
<i>volumeCtrl</i>	Value used to set decibel level on codec.

Returns

Returns soundcard status

snd_status_t get_wav_data(wave_file_t *waveFile)

Collects data from WAV file header.

Parameters

<i>waveFile</i>	Data structure of pcm data array.
-----------------	-----------------------------------

Returns

status_t Return kStatus_Success if function completed successfully, return kStatusFail if function failed.

snd_status_t play_wav(uint32_t *pcmBuffer, uint8_t volumeCtrl)

Plays the PCM audio data from the WAV format array.

Parameters

<i>pcmBuffer</i>	Pointer to data array containing WAV formatted audio data.
<i>volumeCtrl</i>	Value used to set decibel level on codec.

Returns

status_t Return kStatus_Success if function completed successfully, return kStatusFail if function failed.

void send_wav(uint8_t *dataBuffer, uint32_t length, sai_data_format_t *dataFormat)

Sends audio data to the sound card.

Key Functions

Parameters

<i>pdataBuffer</i>	Pointer to data array containing WAV formatted audio data.
<i>length</i>	length of WAV file to send.
<i>dataFormat</i>	Point to audio_data_format_t for sound card.

float32_t do_fft(sai_data_format_t *dataFormat, uint8_t *buffer, float32_t *fftData, float32_t *fftResult)

Performs frequency analysis and finds fundamental frequency of the PCM data.

Parameters

<i>dataFormat</i>	Pointer to audio data format structure.
<i>buffer</i>	Pointer to data array to store modulated PCM data.
<i>fftData</i>	Pointer to data array for storing Fast Fourier Transform data.
<i>fftResult</i>	Point to data array for storing real frequency bins from FFT.

Returns

float32_t Returns fundamental frequency in Hz.

Chapter 29

SLCD basic testing and an Guess Number game

This demo application does SLCD basic testing and demonstrates usage of SLCD APIs in a guess number game.

29.1 Overview

The SLCD basic testing and an Guess Number game project is a demonstration program that uses the KSDK software. It implements the following features:

- SLCD basic testing. All numbers and icons are shown on the SLCD screen.
- A guess number game. All numbers are shown on the SLCD screen.
- RNGA module is also used to generate random numbers.

29.2 Supported Platforms

This Tower System module is supported by the KSDK SLCD basic testing and a Guess Number game demo.

- TWR-KM34Z75M

29.3 Getting Started

29.3.1 Hardware Settings

This project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board jumper settings and configurations in default state when running this demo.

29.3.2 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions, see the appropriate board User's Guide.

Communication Interface Settings:

29.4 Run the demo

This example shows how to run the demo.

1. Basic Testing The demo performs basic testing on the SLCD first. All numbers and icons are shown one-by-one on the screen.
2. Guess number game Next, the demo asks the user to play a guess number game. The user can input the number (0-9999) in the console and the number is displayed on the SLCD screen. `<codeblock>`
 - ----- Start basic SLCD test -----
 - ----- SLCD Guess Num Game -----
 - The number input and final number are shown on the SLCD.
 - Check SLCD for these numbers.
 - Let's play:
 - Guess the number I want(0 - 9999), Press 'enter' to end: 5000
 - The input number 5000 is smaller than what I want. Guess again!
 - Guess the number I want(0 - 9999), Press 'enter' to end: 7500
 - The input number 7500 is bigger than what I want. Guess again!
 - Guess the number I want(0 - 9999), Press 'enter' to end: 6125
 - The input number 6125 is smaller than what I want. Guess again!
 - Guess the number I want(0 - 9999), Press 'enter' to end: 6396
 - Great, 6396, you have GOT it!
 - Play again? Input 'Y' or 'N'.
 - y
 -
 - ----- SLCD Guess Num Game -----
 - The number input and final number are shown on the SLCD.
 - Check SLCD for these numbers.
 - Let's play:
 - Guess the number I want(0 - 9999), Press 'enter' to end:`</codeblock>`

29.5 Communication Interface Settings:

TWR-KM34Z75M	PTI6/UART2_RX	PTI7/UART2_TX	UART2
--------------	---------------	---------------	-------

Chapter 30

SLCD Low Power Demo

This demo application demonstrates how to use SLCD with low power support.

30.1 Overview

This demo application demonstrates how to use SLCD module to drive an external segment LCD and also demonstrates the SLCD's low power features.

30.2 Supported Hardware

These Freescale Freedom development platforms are supported by this demo.

- FRDM-KL43Z

30.3 System Requirement

30.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (Tower System/base board, ...) for specific device
- Personal Computer

30.4 Getting Started

30.4.1 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions, see the Getting Started with Kinetis SDK document for your board.



Run the demo

30.5 Run the demo

After demo is running, the debug terminal prints the demo log and segment board on the Freescale Freedom platform board displays RTC time.

Chapter 31

Thermistor Lab Demo

This demo application demonstrates how to use PDB to trigger ADC and measure on-board thermistor.

31.1 Overview

This lab shows how to configure and use the ADC module to sample the differential voltage across on-board thermistors RT1-RT4. If the user touches any on-board thermistor with a finger, the lab application detects a change in the thermistor temperature and starts flashing the corresponding LED pair.

- The lab tutorial demonstrates:
 - how to configure ADC module to read differential inputs
 - how to filter and process ADC results
 - how to use FreeMASTER visualization tool to display sampled results.

31.2 Supported Hardware

This Tower System modules are supported by the Thermistor Lab demo.

-TWR-KV10Z32 -TWR-KV11Z75M

31.3 System Requirement

31.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

31.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/thermistor_lab/<toolchain>.
- Library dependencies: kSDK_platform_lib

31.4 Getting Started

31.4.1 Prepare the Demo

1. Ensure that these jumpers are shorted.

Getting Started

TWR-KV10Z32:

J8	2-3	
J11	1-2	3-4
J12	1-2	3-4
J13	1-2	3-4
J14	1-2	3-4

TWR-KV11Z75M:

J6	1-2	3-4
J7	1-2	3-4
J8	1-2	3-4
J9	1-2	3-4
J13	2-3	

1. Download the program to the target board.
2. Touch 4 on-board thermistor to see LED change.

For detailed instructions, see a Kinetis SDK User's Guide for your board.

31.4.2 Demo Code Overview

The lab application configures both ADCs to be triggered by the FlexTimer0 via the PDB. The FlexTimer is configured to generate the 16 KHZ PWM and the channel1 trigger is used to trigger both ADCs via the PDB. The PDB is configured to generate four delayed trigger signals to both ADCs per FlexTimer0 Channel 1 trigger and, as a result, 4 ADCs samples are converted per each FlexTimer channel trigger. The ADC is configured to be in a 16-bit differential and ping-pong mode.

When an ADC conversion is complete, an interrupt is generated by the ADC module and an interrupt service routine is executed. The interrupt service routine ADCn_ISR() calls the ADCn_Task which executes these tasks:

reads ADC results registers. filters ADC results with low-pass FIR filter. differentiates filtered results to detect a change in a voltage across the thermistor. detects a negative/positive slope of a voltage change to determine which LED is turned on/off. executes a software timer, whose time out period is 100 ms and resets every 400 ms. The software timer is used to generate a time base for LEDs flashing.

31.4.2.1 ADC Differential Mode of Operation

To measure a voltage across the thermistor, configure the ADC for a differential mode of operation. In a differential mode, the ADC measures a difference between two analogous inputs. The ADC enables selecting input pairs which are treated as differential inputs.

Detection of a Change of Thermistor Voltage

If a user places a finger on a thermistor, its temperature increases. The temperature rise results in a voltage decrease across the resistor. If the user removes the finger, the temperature decreases and the voltage goes up.

A simple differentiators are used to detect a voltage change. The filtered thermistor voltage is stored in a buffer. The buffer size is defined by the `BUFF_SIZE`. The differentiator calculates a difference between an actual voltage sample and a sample delayed by `i_delay` pointer, which points to the buffer.

```
delta_rtl = rtl_filt -rtl_filt_buff[i_delay];
```

If the voltage across the thermistor decreases, the differentiator returns a negative value. If the voltage increases, the differentiator returns a positive value. If there is no change in voltage, the deviator output returns zero. The bigger the slope of voltage increase/decrease, the more positive/negative value the differentiator returns. The lab application uses this information to detect if the finger is placed on the particular thermistor or if the finger was removed. Placing/removing a finger on the thermistor is characterized by a certain slope (rate) of voltage decrease/increase. The application defines positive and negative thresholds for each thermistor. If a difference output exceeds threshold limits (for at least three consequent samples), an action is taken and a corresponding LED starts to flash.

Chapter 32

Heating, Ventilating, and Air Conditioning on lwIP TCP/IP Stack

This demo application demonstrates the Heating, Ventilating, and Air Conditioning demo on lwIP TCP/IP stack with different RTOSes.

32.1 Overview

This is simulation of HVAC system with web server using lwIP TCP/IP stack on different RTOSes. The user uses an Internet browser to send a request for connection, to set up HVAC system on board. The board acts as an HTTP server and sends a Web page back to the PC. The user also can directly set up desired temperature by pressing switches on board and observe LEDs status.

32.2 Supported RTOS

- Freescale MQX RTOS
- FreeRTOS
- C/OS-II
- C/OS-III

32.3 Supported Hardware

These Freescale Freedom development platforms and Tower System modules are supported by the Kinetis SDK web_hvac demo.

- FRDM-K64F
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M

32.4 System Requirement

32.4.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

Getting Started

32.4.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/web_hvac/<rtos>/<toolchain>. Where <rtos> is one of the supported RTOSes.
- Library dependencies:
 - Baremetal, FreeRTOS, uC/OS: ksdk_platform_lib
 - MQX RTOS: mqx_<board>, mqx_stdlib_<board>

32.4.3 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/demo_apps/web_hvac/<toolchain>.
- Library dependencies: ksdk_platform_lib

32.5 Getting Started

32.5.1 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with the following settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.

For detailed instructions steps, see a Kinetis SDK User's Guide for your board.

32.5.2 Network Configuration

Configure the IP address of PC network adapters as shown: IP address - 192.168.2.100 Subnet Mask - 255.255.255.0

32.5.3 Run the demo

1. Download the program to the target board, which should be installed in Tower System or Freescale Freedom.
2. Connect the Ethernet cable between the PC and the board.
3. When successfully connected, reset the board to run the demo.
4. Open the PC command window, type in "ping 192.168.2.102" to test whether lwIP stack is running.

5. Input "192.168.2.102" in the URL of an Internet browser on a PC. If successful, the web page which the board returns opens in the browser.
6. In the browser, click on "HVAC Status" option to observe the current information on the target board.
7. In the browser, Selected "Change Settings" option, input new setting then click "Set" button, the browser loads the status page. If successful, the desired temperature changes to a new setting and the actual temperature increases/decreases until it reaches desired temperature:
 - Change the desired temperature to a greater value and HVAC mode to "Heat", the actual temperature increases until it meet configured desired temperature.
 - Change the desired temperature to a lower value and HVAC mode to "Cool", the actual temperature decreases until it meets the configured desired temperature
8. On the other hand, the desired temperature can be changed by pressing the switches on board. The LEDs (if they exist) on the board represent HVAC system's state:
 - LED1: Simulate the Fan's state
 - LED2: System in the Heat mode
 - LED3: System in the Cool mode
 - LED4: Simulate the heart beat, increase real temperature (i.e., by hair dryer) to see the LED4 go faster and decrease temperature to see it slow down.

Chapter 33

ADC16 Example

33.1 Overview

The ADC16 Example project is a demonstration program that uses the KSDK software to measure the internal temperature of the chip. This function uses the user input as a trigger to start the measurement. Use the ADC to read the chip's temperature, press any key in the terminal and print the converted value and temperature to the terminal.

33.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the ADC16 example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- MRB-KW01
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KM34Z75M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512

Getting Started

- USB-KW40Z_KW40Z

33.3 System Requirement

33.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

33.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/adc16/<toolchain>.
- Library dependencies: kSDK_platform_lib

33.4 Getting Started

33.4.1 Hardware settings

The ADC16 Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

33.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

33.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
press any key to start measure temperature
```

Input any character from the keyboard to start calculating the temperature with the calibrated value and formula listed in the Reference Manual. These instructions are displayed/shown on the terminal window:

```
press any key to start measure temperature
ADC converted value: 14151
Temperature 29
press any key to start measure temperature
```


Chapter 34

AFE Example

34.1 Overview

The AFE Example project is a demonstration program that uses the KSDK software. In this example, the AFE module samples the voltage difference of the EXT_SD_ADP0 and EXT_SD_ADM0 pins.

34.2 Supported Platforms

This Tower System module is supported by the AFE example.

- TWR-KM34Z75M

34.3 System Requirement

34.3.1 Hardware requirements

- J-Link ARM
- USB A to USB Mini B cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer
- DC Power Supply

34.4 Getting Started

34.4.1 Hardware settings

This example requires one board and one DC Power Supply. Connect the DC Power Supply output signals to AFE differential sample pins:

Board	Connects To	DC Power Supply	
EXT_SD_ADP0	->	Power Positive end	
EXT_SD_ADM0	->	Power Negative end	

Make these connections between the board and DC Power Supply by using external wires:

TWR-KM34Z75M

Board		Connects To	DC Power Supply	
Pin Name	Board Location		DC Power Supply	connection ends

Getting Started

Pin 45 of QFP144/- AFE_SDADP0	J31 Pin 2	->	DC Power Supply	Positive end
Pin 46 of QFP144/- AFE_SDADM0	J31 Pin 4	->	DC Power Supply	Negative end

34.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

34.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
AFE Example: An 8 MHz external crystal is used as a clock source for AFE in this example.  
Single and polling mode is selected.
```

Adjust the output DC value from 0 to 500 mV. For example, increase the output DC value while the program is running. The printed log is displayed in the terminal window as shown below.

```
result0 = 4910994 0x4aef92  
result0 = 4928640 0x4b3480  
result0 = 5930280 0x5a7d28  
result0 = 6031566 0x5c08ce  
result0 = 6633264 0x653730  
result0 = 6723942 0x669966  
result0 = 6948546 0x6a06c2  
result0 = 7288512 0x6f36c0  
result0 = 7418664 0x713328  
result0 = 7620930 0x744942  
result0 = 8039334 0x7aaba6  
result0 = 8117874 0x7bde72  
result0 = 8268936 0x7e2c88  
result0 = 8276484 0x7e4a04  
result0 = 8280666 0x7e5a5a  
result0 = 8294334 0x7e8fbe
```

Chapter 35

CMP Example

35.1 Overview

The CMP Example compares the analog input to the reference DAC output to control an LED. If the analog input is higher than the DAC output, the LED is on. Otherwise, the LED is turned off.

35.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the CMP example.

- FRDM-K64F
- FRDM-KL03Z
- FRDM-KV10Z
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K64F120M
- TWR-K65F180M
- TWR-KM34Z75M
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512
- USB-KW40Z_KW40Z

35.3 System Requirement

35.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

35.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/cmp/<toolchain>.

Getting Started

- Library dependencies: ksdk_platform_lib

35.4 Getting Started

35.4.1 Hardware configuration

In case of TWR-KV11Z75M: 1) Remove jumpers from J4 and J17 and make the connections between J4 pin 2 and J17 pin 3 by using the external wire. 2) SW3 is used instead of SW1.

35.4.2 Hardware settings

The CMP Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example. FRDM-KV10Z: The on-board SW3 button must be connected to PTC2 pin manually. Connect J1-10 with J3-13 by using external wire.

35.4.3 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

35.4.4 Run the example

These instructions are displayed/shown on the terminal window:

```
The demo compares analog input to the reference DAC output to control an LED.  
The LED is turned ON/OFF when the analog input is LOWER/HIGHER than the DAC output.  
Press SW to see the LED status.
```

```
for TWR-KM34Z75M  
Change the potentiometer position to see the LED status.
```

```
The analog input is HIGHER than DAC output!  
The analog input is LOWER than DAC output!  
The analog input is HIGHER than DAC output!  
The analog input is LOWER than DAC output!
```

Press the SW (*) button on the board and observe the LED toggle. NOTE: For the TWR-K65F180M board, the on-board potentiometer is used instead of the SW button.

Chapter 36

CMT Example

36.1 Overview

The carrier modulator transmitter (CMT) provides the means to generate the protocol timing and carrier signals for a wide variety of encoding schemes. The CMT is intended to be sufficiently programmable to handle the timing requirements of most protocols with minimal CPU intervention. This example uses the CMT peripheral to perform data modulation.

36.2 Supported Platforms

This Freescale Freedom development platform is supported by the CMT example.

- TWR-K60D100M
- FRDM-KW40Z

36.3 System Requirement

36.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (Tower System/base board, ...) for specific device
- Personal Computer

36.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/cmt/<toolchain>.
- Library dependencies: ksdk_platform_lib

36.4 Getting Started

36.4.1 Hardware settings

The CMT Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

Getting Started

36.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Connect a oscilloscope to
 - the pin 2 of the Jumper 2 on the board for TWR-K60D100M
 - the pin 6 of the J25 connector on the board for FRDM-KW40Z
3. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
4. Download the program to the target board.
5. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

36.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
CMT Initialize finished!
Start carrier modulation ....
16 bit data carrier modulation finished. Stop carrier modulation!
```

The output waveform of the carrier modulated data can be seen on the oscilloscope.

The example modulates the two bytes: 0x15, 0x24.

Verify the waveform on the oscilloscope:

- waveform data: 1010100000100100.
- bit one is with 10 microsecond high time period
- bit zero is with the 1 microsecond high time period add 9 microsecond low time period.

To easily capture the signal, there are two notifications:

1. For only two bytes to transmit, we should use trigger to capture the output signal.
2. Set the voltage range to 1 volt(k60d100m) or 0.5 volt(kw40z), and adjust the scale to make the smallest time unit to about 40 us.

Chapter 37

COP Example

37.1 Overview

The COP Example project is a demonstration program that uses the KSDK software to enable Watchdog and continuously refreshes the Watchdog to prevent the CPU reset. After pushing the software button, the Watchdog expires after approximately 1 seconds and the chip is reset.

- Combine refresh and reset operation on the WDOG timer.
- Use a SW to start the COP. After pressing the software button, the COP starts to expire.
- Use an LED to indicate the reset process. First, the LED is turned off when the software button is pressed, the LED starts blinking. After reset, the LED is turned off. (**When running this example, we need enable watchdog)

37.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the COP example.

- FRDM-KL03Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KW40Z
- TWR-KL43Z48M

37.3 System Requirement

37.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

37.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/cop/<toolchain>.
- Library dependencies: ksdk_platform_lib

Getting Started

37.4 Getting Started

37.4.1 Hardware settings

The COP Example project does not call for a special hardware configuration. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

37.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

37.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
COP example begin.  
Press SW to begin expiring COP
```

Press the SW (*) button on the board and the board receives and refreshes the reset operation on COP WDOG timer. These instructions are displayed/shown on the terminal window:

```
Press SW to begin expiring COP  
Board resets after 1 seconds.  
COP reset the chip successfully
```

Chapter 38

DAC Example

38.1 Overview

The DAC Example project is a demonstration program that uses the KSDK software. This function uses the terminal to enter a DAC value and convert this value to a DAC output.

38.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the DAC example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW40Z
- MRB-KW01
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL43Z48M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M

38.3 System Requirement

38.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable

Getting Started

- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

38.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/dac/<toolchain>.
- Library dependencies: kSDK_platform_lib

38.4 Getting Started

38.4.1 Hardware settings

The DAC Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

38.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

38.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
DAC Example.  
Enter the value for DAC input from 0 to 65535
```

Input the DAC value and the board converts that value to the DAC output. The converted value can be seen on the oscilloscope. These instructions are displayed/shown on the terminal window:

```
Check oscilloscope to see DAC output of 20000
```

Verify that the voltage is compatible with the DAC level on the oscilloscope.

Chapter 39

DMA Example

39.1 Overview

The direct memory access (DMA) controller performs complex data transfers with minimal intervention from the host processor. This example uses the DMA peripheral to transfer data from the Flash to RAM by using the DMA with different channels.

39.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the DMA example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL25Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KW40Z
- TWR-K21D50M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-KM34Z75M
- TWR-KM34Z75M
- TWR-KL43Z48M
- TWR-KV10Z32
- USB-KW40Z_KW40Z

39.3 System Requirement

39.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

Getting Started

39.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/dma/<toolchain>.
- Library dependencies: kSDK_platform_lib

39.4 Getting Started

39.4.1 Hardware settings

The DMA Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

39.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on the board or launch the debugger in the IDE to begin running the example.

39.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
DMA EXAMPLE
Requesting channel 0 to transfer data from address 0x37ec to 0x1ffff018

Starting transfer data ...
Transferred with DMA channel No.0: successful
Press any key to start transferring data with another channel
```

Type characters from the keyboard and the board transfers data by using a different channel (number of supported channels depends on each DMA instance). These instructions are displayed/shown on the terminal window:

```
Requesting channel 1 to transfer data from address 0x37ec to 0x1ffff018

Starting transfer data ...
Transferred with DMA channel No.1: successful
```

Press any key to start transferring data with another channel
Requesting channel 2 to transfer data from address 0x37ec to 0x1fffe018

Starting transfer data ...

Transferred with DMA channel No.2: successful

Press any key to start transferring data with another channel

Requesting channel 3 to transfer data from address 0x37ec to 0x1fffe018

Starting transfer data ...

Transferred with DMA channel No.3: successful

Press any key to start transferring data with another channel

Chapter 40

DSPI Example with other methods

40.1 Overview

The DSPI Example project is a demonstration program that uses the KSDK software. This example provides 5 examples with 5 modes: DSPI polling, non-blocking, blocking, DMA blocking, DMA non blocking, and DSPI loopback.

- DSPI board to board:
 - Transfers data through instance 0 of SPI interface. SPI0 pins of the master board are connected to the SPI0 pins of the slave board.
 - It is important to ensure all SPI board-to-board connections are kept as short as possible and that a solid ground wire is connected between the boards. Preferably this ground connection should be as close as possible to the SPI signals on each board. A poor board-to-board connection compromises data signal integrity causing failures in the example.
 - Master sends an array to the slave and receives the array back from the slave. It also compares whether the two buffers are the same. The slave sends back the received buffer from the master.
(*) (Power up slave first)
- DSPI master loop-back:
 - Transfer data through instance 0 of SPI interface. The MISO pin and MOSI pin are connected.
 - Sends an array out through the MISO pin and compares it with the received buffer from the MOSI pin.
 -

40.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the DSPI example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M

Getting Started

- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512

40.3 System Requirement

40.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

40.3.2 Software requirements

- The project files are in: `<SDK_Install>/examples/<board>/driver_examples/dspi/<use_case>/<toolchain>`.
- Library dependencies: `ksdk_platform_lib`

40.4 Getting Started

40.4.1 Hardware settings

- DSPI master loopback:
 - Transfers data through the instance 0 of the SPI interface. The MISO pin and MOSI pin are connected.
- DSPI board to board:
 - Transfers data through the instance 0 of the SPI interface. SPI0 pins of the master board are connected to the SPI0 pins of the slave board.

FRDM-K22F :

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	J1 pin 11	->	MISO	J1 pin 16
MOSI	J1 pin 16	->	MOSI	J11 pin 11
SCK	J1 pin 15	->	SCK	J1 pin 15
PCSO0	J24 pin 9	->	PCSO0	J24 pin 9
GND	J2 pin 14	->	GND	J2 pin 14

FRDM-KW24 :

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	J2 pin 10	->	MISO	J2 pin 8
MOSI	J2 pin 8	->	MOSI	J2 pin 10
SCK	J2 pin 12	->	SCK	J2 pin 12
PCSO0	J2 pin 6	->	PCSO0	J2 pin 6
GND	J2 pin 14	->	GND	J2 pin 14

FRDM-KW40 :

Ensure that J7 is disconnected and the SPI does not interfere with the serial connection to the external Flash chip.

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	J1 pin 10	->	MISO	J1 pin 8
MOSI	J1 pin 8	->	MOSI	J1 pin 10
SCK	J1 pin 12	->	SCK	J1 pin 12
PCSO0	J1 pin 6	->	PCSO0	J1 pin 6
GND	J1 pin 14	->	GND	J1 pin 14

FRDM-K64F:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	J2 pin 10	->	MISO	J2 pin 8
MOSI	J2 pin 8	->	MOSI	J2 pin 10
SCK	J2 pin 12	->	SCK	J2 pin 12
PCSO0	J2 pin 6	->	PCSO0	J2 pin 6
GND	J2 pin 14	->	GND	J2 pin 14

FRDM-KV31F :

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	J2 pin 10	->	MISO	J2 pin 8

Getting Started

MOSI	J2 pin 8	->	MOSI	J2 pin 10
SCK	J2 pin 12	->	SCK	J2 pin 12
PCSO0	J1 pin 15	->	PCSO0	J1 pin 15
GND	J2 pin 14	->	GND	J2 pin 14

TWR-K21F120M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	Primary Elevator A11	->	MISO	J20 pin 21
MOSI	J20 pin 21	->	MOSI	Primary Elevator A11
SCK	J20 pin 19	->	SCK	J20 pin 19
PCSO0	J20 pin 17	->	PCSO0	J20 pin 17
GND	Primary Elevator B2	->	GND	Primary Elevator B2

TWR-K21D50M & TWR-K22F120M & TWR-K24F120M & TWR-K64F120M & TWR-KV10Z32 & TWR-KV31F120M & TWR-KW24D512:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	Primary Elevator B44	->	MISO	Primary Elevator B45
MOSI	Primary Elevator B45	->	MOSI	Primary Elevator B44
SCK	Primary Elevator B48	->	SCK	Primary Elevator B48
PCSO0	Primary Elevator B46	->	PCSO0	Primary Elevator B46
GND	Primary Elevator B2	->	GND	Primary Elevator B2

TWR-K60D100M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location

MISO	Primary Elevator A77	->	MISO	Primary Elevator A76
MOSI	Primary Elevator A76	->	MOSI	Primary Elevator A77
SCK	Primary Elevator B64	->	SCK	Primary Elevator B64
PCSO0	Primary Elevator A63	->	PCSO0	Primary Elevator A63
GND	Primary Elevator B2	->	GND	Primary Elevator B2

TWR-K65F180M & TWR-K80F150M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	Primary Elevator B44	->	MISO	Primary Elevator B45
MOSI	Primary Elevator B45	->	MOSI	Primary Elevator B44
SCK	Primary Elevator B48	->	SCK	Primary Elevator B48
PCSO0	Primary Elevator B46	->	PCSO0	Primary Elevator B46
GND	Primary Elevator B2	->	GND	Primary Elevator B2

FRDM-KV10Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
SPI0_SIN	J2 pin 10	->	SPI0_SOUT	J2 pin 2
SPI0_SOUT	J2 pin 2	->	SPI0_SIN	J2 pin 10
SPI0_CLK	J2 pin 12	->	SCK	J2 pin 12
SPI0_SC0	J3 pin 9	->	PCSO0	J3 pin 9
GND	J2 pin 14	->	GND	J2 pin 14

TWR-KV11Z75M:

Master Board	Connects To	Slave Board
--------------	-------------	-------------

Getting Started

Pin Name	Board Location		Pin Name	Board Location
MISO	Primary Elevator B44	->	MISO	Primary Elevator B45
MOSI	Primary Elevator B45	->	MOSI	Primary Elevator B44
SCK	Primary Elevator B48	->	SCK	Primary Elevator B48
PCSO0	Primary Elevator B46	->	PCSO0	Primary Elevator B46
GND	Primary Elevator B2	->	GND	Primary Elevator B2

40.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

40.4.3 Run the example

DSPI blocking Master-Slave

Note: Set up the slave first and the slave board displays this message on the terminal:

```
DSPI board to board blocking example
This example run on instance 0
Be sure DSPI0-DSPI0 are connected
Slave example is running...
```

The master sends an array to the slave and receives the array back from the slave. It also compares whether the two buffers are the same. The master board prints this message on the terminal:

```
DSPI board to board blocking example
This example run on instance 0
Be sure DSPI0-DSPI0 are connected
Transfer at baudrate 468750
```

```
Master transmit:
```

```

01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
Master receive:
01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
DSPI Master Sends/ Receives successfully
Press any key to run again

```

The slave board receives and prints this message on terminal:

```

Slave receive:
01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
Slave example is running...

```

DSPI non-blocking Master-Slave

Set up the slave first and the slave board displays this message on the terminal:

```

DSPI board to board non-blocking example
This example run on instance 0
Be sure DSPI0-DSPI0 are connected
Slave example is running...

```

The master sends an array to the slave and receives the array back from the slave. It also compares whether the two buffers are the same. The master board prints this message on the terminal:

```

DSPI board to board non-blocking example
This example run on instance 0
Be sure DSPI0-DSPI0 are connected
Transfer at baudrate 468750

Master transmit:
01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
Master receive:
01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
DSPI Master Sends/ Receives successfully
Press any key to run again

```

The slave board receives and prints this message on the terminal:

```

Slave receive:
01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
Slave example is running...

```

DSPI eDMA blocking Master-Slave

Set up the slave first and the slave board displays this message on the terminal:

Getting Started

```
DSPI board to board EDMA blocking example
This example run on instance 0
Be sure DSPI0-DSPI0 are connected
Slave example is running...
```

The master sends an array to the slave and receives the array back from the slave. It also compares whether the two buffers are the same. The master board print this message on the terminal:

```
DSPI board to board eDMA-blocking example
This example run on instance 0
Be sure DSPI0-DSPI0 are connected
Transfer at baudrate 468750

Master transmit:
  01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
  11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
Master receive:
  01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
  11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
DSPI Master Sends/ Receives successfully
Press any key to run again
```

The slave board receives and print on terminal:

```
Slave receive:
  01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
  11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
Slave example is running...
```

DSPI eDMA non-blocking Master-Slave

Set up the slave first and the slave board displays this message on the terminal:

```
DSPI board to board EDMA non-blocking example
This example run on instance 0
Be sure DSPI0-DSPI0 are connected
Slave example is running...
```

The master sends an array to the slave and receives the array back from the slave. It also compares whether the two buffers are the same. The master board prints this message on the terminal:

```
DSPI board to board eDMA-non-blocking example
This example run on instance 0
Be sure DSPI0-DSPI0 are connected
Transfer at baudrate 468750

Master transmit:
  01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
  11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
Master receive:
  01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
  11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
DSPI Master Sends/ Receives successfully
Press any key to run again
```

The slave board receives and prints this message on terminal:

```
Slave receive:
  01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
  11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
Slave example is running...
```

DSPI polling Master-Slave

Set up the slave first and the slave board displays this message on the terminal:

```
DSPI board to board polling example
This example run on instance 0
Be sure DSPI0-DSPI0 are connected
Slave example is running...
```

The master sends an array to the slave and receives the array back from the slave. It also compares whether the two buffers are the same. The master board displays this message on the terminal:

```
DSPI board to board polling example
This example run on instance 0
Be sure DSPI0-DSPI0 are connected
Transfer at baudrate 468750

Master transmit:
  01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
  11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
Master receive:
  01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
  11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
DSPI Master Sends/ Receives successfully
Press any key to run again
```

The slave board receives and prints this message on the terminal:

```
Slave receive:
  01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
  11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
Slave example is running...
```

DSPI Loopback

These instructions are displayed/shown on the terminal window:

```
DSPI master self loopback example
This example run on instance 0
Be sure MISO-to-MOSI are connected
Transfer at baudrate 468750

Master transmit:
  01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
  11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20
Master receive:
  01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F 10
  11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F 20

DSPI Sends/ Receives successfully
Press any key to run again
```


Chapter 41

EDMA Example

41.1 Overview

The enhanced direct memory access (eDMA) controller is a second-generation performing complex data transfers with minimal intervention from a host processor. This example uses the eDMA peripheral to transfer data from the Flash to RAM using the eDMA with different channels.

41.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the EDMA example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KV31F
- FRDM-KW24
- FRDM-KV10Z
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512

41.3 System Requirement

41.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

Getting Started

41.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/edma/<toolchain>.
- Library dependencies: kSDK_platform_lib

41.4 Getting Started

41.4.1 Hardware settings

The EDMA Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

41.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

41.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
EDMA transfer from memory to memory
```

```
Starting EDMA channel No. 0 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.0: successful
Press any key to start transfer with other channel
```

```
Starting EDMA channel No. 1 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.1: successful
Press any key to start transfer with other channel
Starting EDMA channel No. 2 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.2: successful
Press any key to start transfer with other channel
```

```
Starting EDMA channel No. 3 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.3: successful
Press any key to start transfer with other channel
```

```
Starting EDMA channel No. 4 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.4: successful
```

Press any key to start transfer with other channel

Starting EDMA channel No. 5 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.5: successful
Press any key to start transfer with other channel

Starting EDMA channel No. 6 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.6: successful
Press any key to start transfer with other channel

Starting EDMA channel No. 7 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.7: successful
Press any key to start transfer with other channel

Starting EDMA channel No. 8 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.8: successful
Press any key to start transfer with other channel

Starting EDMA channel No. 9 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.9: successful
Press any key to start transfer with other channel

Starting EDMA channel No. 10 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.10: successful
Press any key to start transfer with other channel

Starting EDMA channel No. 11 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.11: successful
Press any key to start transfer with other channel

Starting EDMA channel No. 12 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.12: successful
Press any key to start transfer with other channel

Starting EDMA channel No. 13 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.13: successful
Press any key to start transfer with other channel

Starting EDMA channel No. 14 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.14: successful
Press any key to start transfer with other channel

Starting EDMA channel No. 15 to transfer data from addr 0x1fff0000 to addr 0x1fff0028
Transferred with eDMA channel No.15: successful
Press any key to start transfer with other channel

This example shows how to transfer data from Flash to RAM on each channel that are supported by the eDMA instance.

Chapter 42

EWM Example

42.1 Overview

The EWM Example project is a demonstration program that uses the KSDK software. This function uses EWM as a Watchdog for an external circuit when the counter reaches a high value. First, the EWM keeps refreshing. When the software button is pressed, the EWM expires and an interrupt occurs.

42.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the EWM example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KM34Z75M
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512

42.3 System Requirement

42.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

Getting Started

42.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/ewm/<toolchain>.
- Library dependencies: kSDK_platform_lib

42.4 Getting Started

42.4.1 Hardware settings

The EWM Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

42.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

42.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
EWM example
Press SW to expire EWM
```

Press the SW (*) button on the board to reset the counter and enable the interrupt for the next run. These instructions are displayed/shown on the terminal window:

```
EWM interrupt has occurred
Press SW to allow the EWM to expire
```

Chapter 43

FLASH Example

43.1 Overview

The Flash Example project is a demonstration program that uses the KSDK software to access Flash memory. The example provide following features:

- Check flash information
- Erase a sector and verify
- Program a sector and verify

43.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the FLASH example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- MRB-KW01
- TWR-K21D50M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KM34Z75M
- TWR-KL25Z48M
- TWR-KL43Z48M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M

Getting Started

- TWR-KW24D512
- USB-KW40Z_KW40Z

43.3 System Requirement

43.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

43.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/flash/<toolchain>.
- Library dependencies: ksdk_platform_lib

43.4 Getting Started

43.4.1 Hardware settings

The FLASH Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

43.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

43.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
Flash Example Start
Flash Information:
Total Flash Size: 1024 KB, Hex: (0x100000)
Flash Sector Size: 4 KB, Hex: (0x1000)
There is no D-Flash (FlexNVM) on this Device.
There is no Enhanced EEPROM (EEE) on this Device.
Flash is UNSECURE!

Erase a sector of flash
successfully Erased Sector 0xfa000 -> 0xfb000

Program a buffer to a sector of flash
successfully Programmed and Verified Location 0xfa000 -> 0xfa080

Flash Example End
```

for - TWR-KM34Z75M These instructions are displayed/shown on the terminal window:

```
Flash Example Start
Flash Information:
Total Flash Size: 256 KB, Hex: (0x40000)
Flash Sector Size: 2 KB, Hex: (0x800)
There is no D-Flash (FlexNVM) on this Device.
There is no Enhanced EEPROM (EEE) on this Device.
Flash is UNSECURE!

Erase a sector of flash
Successfully Erased Sector 0x3d000 -> 0x3d800

Program a buffer to a sector of flash
Successfully Programmed and Verified Location 0x3d000 -> 0x3d080

Flash Example End
```


Chapter 44

FlexCAN Example

44.1 Overview

This FlexCAN example application demonstrates the SDK Peripheral drivers working with different methods. FlexCAN network and FlexCAN loop-back are the two provided examples:

- CAN network: transfers data through the CAN interface. On node 1, the user inputs characters by using the UART debug terminal and sends the data with the FlexCAN interface. On the other node, the FlexCAN receives the data and prints it to the UART terminal.
- CAN loop-back: transfers data through the CAN loop-back interface. On one node, one 8-byte buffer stream transmitter output is internally sent back to the receiver input.

The board transfers and receives characters through the FlexCAN-UART interface. Type the characters on the keyboard and the board receives and displays them on the terminal screen. Look for instructions output to the terminal.

44.2 Supported Platforms

These Tower System modules are supported by the FlexCAN example:

- TWR-K21F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-KV11Z75M

44.3 System Requirement

44.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

44.3.2 Software requirements

- The project files are in: `<SDK_Install>/examples/<board>/driver_examples/flexcan/<use_case>/<toolchain>`.

Getting Started

- Library dependencies: ksdk_platform_lib

44.4 Getting Started

44.4.1 Hardware settings

TWR-SER Tower System module configuration (only FlexCAN network example)

- Short J5(1-2), J5(3-4), J5(5-6), J5(7-8), and J5(9-10) to enable CAN connection.
- Connect the two TWR-SER modules through the CAN port (J7).

Although not required, the recommendation is to leave the development board jumper settings and configurations in default state when running this example.

44.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

44.4.3 Run the example

44.4.3.1 FlexCAN loopback

These instructions are displayed/shown on the terminal window:

```
Running the FlexCAN loopback example.
*****FLEXCAN LOOPBACK EXAMPLE*****
Message format: Standard (11 bit id)
Message buffer 8 used for Rx.
Message buffer 9 used for Tx.
Interrupt Mode: Enabled
Operation Mode: TX and RX --> Normal

FlexCAN MB receive configuration
FlexCAN send configuration
Data transmit: 0a 0b 0c 0d 0e 0f 10 11
DLC=8, mb_idx=8
RX MB data: 0x0a 0b 0c 0d 0e 0f 10 11
ID: 0x123Press any key to run again!
```

44.4.3.2 FlexCAN network

After connecting the two boards, these instructions display on each terminal window. One board must be chosen as node A and the other board as node B. Data is sent continuously between the node A and the node B.

This message displays on the node A terminal:

```
*****FlexCAN : SCI2CAN demo *****
Message format: Standard (11 bit id)
Message buffer 8 used for Rx.
Message buffer 9 used for Tx.
OSJTAG Port used for Serial Console.
Interrupt Mode: Enabled
Operation Mode: TX and RX --> Normal

Select local nodes as A or B:
Node:A
Data from Node B. Data from Node B. Data from Node B.
```

This message displays on the node B terminal:

```
*****FlexCAN : SCI2CAN demo *****
Message format: Standard (11 bit id)
Message buffer 8 used for Rx.
Message buffer 9 used for Tx.
OSJTAG Port used for Serial Console.
Interrupt Mode: Enabled
Operation Mode: TX and RX --> Normal

Select local nodes as A or B:
Node:B
Data from Node A
```


Chapter 45

FlexIO simulated I2C Example with other methods

45.1 Overview

The FlexIO I2C example application demonstrates the FlexIO simulated I2C driver working with different methods. The FlexIO I2C example shows transmit/receive between the FlexIO-simulated I2C and I2C1 using these efficiency methods:

- Using blocking method
- Using non-blocking method

45.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the FlexIO I2C example.

- FRDM-KL27Z
- FRDM-KL43Z
- TWR-KL43Z48M
- TWR-K80F150M

45.3 System Requirement

45.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Personal Computer

45.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/flexio/i2c/<toolchain>.
- Library dependencies: kSDK_platform_lib

45.4 Getting Started

45.4.1 Hardware settings

This example requires connecting the FlexIO pins with the I2C1 pins. Connect FlexIO pins to the I2C1 pins. Note that the default uses FlexIO pin5 and pin4:

Getting Started

FlexIO Pins		Connects To	I2C1 Pins	
FlexIO Pin5		->	I2C1 SDA	
FlexIO Pin4		->	I2C1 SCL	

Make these connections between the FlexIO pins and the I2C1 pins by using external wires:

TWR-KL43Z48

FlexIO Pins		Connects To	I2C1 Pins	
Pin Name	Board Location		Pin Name	Board Location
PTD5/FLEXIO_PI-N5	Primary Elevator B39	->	I2C1 SDA	Primary Elevator A8
PTD4/FLEXIO_PI-N4	Primary Elevator B59	->	I2C1 SCL	Primary Elevator A7

FRDM-KL43Z48M

FlexIO Pins		Connects To	I2C1 Pins	
Pin Name	Board Location		Pin Name	Board Location
PTD5/FLEXIO_PI-N5	J2-12	->	I2C1 SDA	J2-18
PTD4/FLEXIO_PI-N4	J2-6	->	I2C1 SCL	J2-20

FRDM-KL27Z48M

FlexIO Pins		Connects To	I2C1 Pins	
Pin Name	Board Location		Pin Name	Board Location
PTD5/FLEXIO_PI-N5	J1-11	->	I2C1 SDA	J2-18
PTD4/FLEXIO_PI-N4	J1-9	->	I2C1 SCL	J2-20

TWR-K80F150M

FlexIO Pins		Connects To	LPUART Pins	
Pin Name	Board Location		Pin Name	Board Location

PTB11/FLEXIO_P-IN5	B69	->	I2C1 SDA	B51
PTB10/FLEXIO_P-IN4	B70	->	I2C1 SCL	B50

45.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. For TWR-KL43Z48M, insert the Tower System module into TWR-ELEV.
3. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
4. Download the program to the target board.
5. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

45.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
+++++++ FLEXIO I2C Master Send/Receive Example Start ++++++

-----Non-blocking&Blocking example-----
1. FlexIO simulated I2C master write a buffer to I2C1
2. I2C1 acts as slave and receives data from FlexIO simulated I2C Master.
3. Compare rxBuff and txBuff to see result.
4. FlexIO simulated I2C master read a buffer from I2C1
5. I2C1 send the buffer and FlexIO simulated I2C master receives the buffer.
6. Compare rxBuff and txBuff to see result.

=====

Press any key to start transfer:
```

Type a character on the keyboard and the FlexIO simulated I2C sends a buffer to the I2C1. It also compares the received buffer on the I2C1 side with the txBuff and checks whether the result is successful. Then, the I2C1 sends a buffer to the FlexIO simulated I2C, compares the receive buffer in the FlexIO simulated I2C side to the txBuff, and checks whether the result is successful.

```
-----Non-blocking example-----

FlexIO simulated I2C master to I2C standard slave write transfer succeeded!!

FlexIO simulated I2C master to I2C standard slave read transfer succeeded!!

-----Blocking example-----
```

Getting Started

FlexIO simulated I2C master to I2C standard slave write transfer succeeded!!

FlexIO simulated I2C master to I2C standard slave read transfer succeeded!!

...

Chapter 46

Flexio I2S Example with other methods

46.1 Overview

The FlexIO I2S example project is a demonstration program that uses the KSDK software. This example plays back a period of sound stored in the Flash. This example involves four methods:

- Using the master interrupt
- Using the master DMA
- Using the slave interrupt and slave DMA

46.2 Supported Platforms

These Tower System modules are supported by the FlexIO I2S example:

- TWR-KL43Z48M
- TWR-K80F150M

46.3 System Requirement

46.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- TWR-SGTL5000 board
- Headphone
- Hardware (Tower System/base board, ...) for specific device
- Personal Computer

46.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/flexio/i2s/<toolchain>.
- Library dependencies: ksdk_platform_lib

46.4 Getting Started

46.4.1 Hardware settings

This example requires connecting the FLEXIO pins with the SAI pins so that the I2S signals can route to the TWR-SGTL5000 Tower System module. Connect FlexIO pins to the SAI pins. Note that the default

Getting Started

uses the FlexIO pin0 ~ pin3:

Flexio Pins		Connects To	SAI Pins	
Flexio Pin0		->	SAI TxData	
Flexio Pin1		->	SAI RxData	
Flexio Pin2		->	SAI SCLK	
Flexio Pin3		->	SAI FS	

Make these connections between the FlexIO pins and SAI pins by using external wires:

TWR-KL43Z48

Flexio Pins		Connects To	SAI Pins	
Pin Name	Board Location		Pin Name	Board Location
PTD4/FLEXIO_PI-N4 (*)	Primary Elevator B9	->	SAI SCLK (*)	Primary Elevator A22
PTD5/FLEXIO_PI-N5 (*)	Primary Elevator B7	->	SAI Fs (*)	Primary Elevator A23
PTD0/FLEXIO_PI-N0	Primary Elevator B46	->	SAI TxData	Primary Elevator A25
PTD1/FLEXIO_PI-N1	Primary Elevator B48	->	SAI TxData	Primary Elevator A24

TWR-K80F150M

Flexio Pins		Connects To	SAI Pins	
Pin Name	Board Location		Pin Name	Board Location
PTB10/FLEXIO_P-IN4 (*)	Primary Elevator B70	->	SAI SCLK (*)	Primary Elevator A22
PTB11/FLEXIO_P-IN5 (*)	Primary Elevator B69	->	SAI Fs (*)	Primary Elevator A23
PTB0/FLEXIO_PI-N0	Primary Elevator A38	->	SAI TxData	Primary Elevator A25
PTB1/FLEXIO_PI-N1	Primary Elevator A37	->	SAI RxData	Primary Elevator A24

46.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Insert all boards into TWR-ELEV.
3. Insert headphones into J7 port on the TWR-SGTL5000 Tower System module.
4. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
5. Download the program to the target board.
6. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

46.4.3 Run the example

These instructions are repeatedly displayed/shown on the terminal window:

```
Master Interrupt testing passed!
```

```
Master DMA testing passed!
```

```
Slave Interrupt testing passed!
```

```
Slave DMA testing passed!
```

Users can hear the sine wave sound in the headphones. <note> Because the FlexIO does not have the MCLK, the example has to use the MCLK in the TWR-SGTL5000 Tower System module to make the codec work correctly. The clock, which is not a part of the FlexIO clock source, is not accurate. This issue causes the clock mismatch between the FlexIO and the sgtl5000 codec. As a result, when the FlexIO i2s is the master, it has a certain amount of noise.

Chapter 47

FlexIO IRDA Example

This example application demonstrates FlexIO timer to encode and decode IRDA pulse.

47.1 Overview

This example uses FlexIO UART driver and FlexIO timers to send and receive IRDA signals. Data is first sent via FlexIO-simulated UART, then the simulated UART TX signal is routed into one FlexIO timer and encoded into IRDA pulse. On the receiving side, the IRDA pulse is first routed into one FlexIO timer, the timer decodes it into UART RX signal, then FlexIO UART driver receives the decoded signal.

47.2 Supported Platforms

This Freescale Freedom development platform is supported by the KSDK FlexIO IRDA example.

- FRDM-KL43Z

47.3 System Requirement

47.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multilink universal
- Mini/micro USB cable
- USB A to micro AB cable
- Personal Computer

47.4 Getting Started

47.4.1 Hardware Settings

The FlexIO IRDA project does not call for any special hardware configurations in default loop-back mode. For non loop-back mode or using CMP0 trig mode, connect the FlexIO and CMP0 pins according to the following settings:

FRDM-KL43Z:

CMP0 Trig mode

- fsl_flexio_irda.h define IRDA_RX_CMP0_TRIG to 1
- main.h define LOOPBACK_TEST to 0

Getting Started

FlexIO		Connects To	CMP0	
Pin Name	Board Location		Pin Name	Board Location
PTD7	J2-10	->	PTC6	J1-9

Non loop-back mode (this mode loops-back externally for an easy demo test)

- fsl_flexio_irda.h define IRDA_RX_CMP0_TRIG to 0
- main.h define LOOPBACK_TEST to 0

FlexIO		Connects To	FlexIO	
Pin Name	Board Location		Pin Name	Board Location
PTD6	J2-8	->	PTD7	J2-10

The user can check UART and IRDA waveform at the following pins.

Pin Name	Board Location	Function	Comments
PTD4	J2-6	FlexIO simulated UART TX	Optional OFF(define FLEXIO_UART_TX_PINEN to 0)
PTD5	J2-12	FlexIO simulated UART RX	No waveform in loop-back mode
PTD6	J2-8	IRDA pulse input for FlexIO timer to decode into UART	Non loop-back mode only
PTD7	J2-10	IRDA pulse output encoded by FlexIO timer	
PTE0	J2-18	CMP0 output	Can check CMP0 output in CMP0 trig mode

47.4.2 Prepare the Demo

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the demo.
5. Program ends with a while (1) loop to get the user input from the terminal window one character at

a time and send the input character via IRDA. The character is also echoed on the terminal window. For detailed instructions, see the appropriate board-specific document.

47.5 Run the demo

This example shows the following information on the terminal window:

```
Start FlexIO UART/IRDA demo
```

```
Non-blocking Send/Receive Demo
```

```
String data is : Hello World
```

```
Binary data is : 0x48656c6c6f20576f726c640
```

```
Blocking Send Demo
```

```
String data is : Hello
```

```
Binary data is : 0x48656c6c6f
```

```
Blocking Receive Demo
```

```
String data is : He
```

```
Binary data is : 0x4865
```

Last demo: Input one char at a time from the terminal.

It is transmitted via the FlexIO IRDA driver and echoed on the terminal.

abcdefghijklmn (This is the example echo user input for one character at a time).

47.5.1 Customization Options

- In `main.h`
 - The `IRDA_RX_CMP0_TRIG`(default to 0) definition determines whether to use the CMP0 as the FlexIO trig.
 - The `LOOPBACK_TEST`(default to 1) definition determines whether the loop back FlexIO signals internally.
 - The `FLEXIO_UART_RX_PINEN`(default to 1) definition determines whether the FlexIO-simulated UART RX signals present on PTD5.
 - The `FLEXIO_UART_TX_PINEN`(default to 1) definition determines whether the FlexIO-simulated UART TX signals present on PTD4.
- In `fsl_flexio_irda.h`
 - The `IRDA_RXPIN_REVERSE`(default to 0) definition determines whether the FlexIO IRDA decoding timer uses a reversed input or not.
 - The `IRDA_TXPIN_REVERSE`(default to 0) definition determines whether the FlexIO IRDA encoding timer reverses the output pulse or not.
 - Note: `IRDA_RXPIN_REVERSE` and `IRDA_TXPIN_REVERSE` must be the same for the demo test.



Run the demo

Chapter 48

FlexIO-simulated SPI Example with other methods

48.1 Overview

The FlexIO SPI example application demonstrates the FlexIO-simulated SPI driver working with different methods. The FlexIO SPI example shows the transmit/receive between the FlexIO-simulated SPI and SPI1 using these methods:

master

- Using interrupts
- Using the DMA

slave

- Using the interrupts
- Using the DMA

48.2 Supported Platforms

These Tower System modules and Freescale Freedom platforms are supported by the FlexIO SPI example:

- FRDM-KL27Z
- TWR-KL43Z48M
- TWR-K80F150M

48.3 System Requirement

48.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Personal Computer

48.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/flexio/spi/<mode>/<toolchain>
- Library dependencies: ksdk_platform_lib

Getting Started

48.4 Getting Started

48.4.1 Hardware settings

This example requires connecting FlexIO pins with the SPI1 pins. Connect FlexIO pins to the SPI1 pins. Note that the default uses the FlexIO pin0~pin3:

FlexIO Pins	Connects To	SPI1 Pins	
FlexIO Pin0	->	SPI1 MOSI/MISO	
FlexIO Pin1	->	SPI1 MISO/MOSI	
FlexIO Pin2	->	SPI1 SCK	
FlexIO Pin3	->	SPI1 CSn	

Make these connections between the FlexIO Pins and the SPI1 pins by using external wires:

master example

TWR-KL43Z48M

FlexIO Pins		Connects To	SPI1 Pins	
Pin Name	Board Location		Pin Name	Board Location
PTD0/FLEXIO_PI-N0	Primary Elevator B46	->	SPI1 MOSI	Primary Elevator B10
PTD4/FLEXIO_PI-N1	Primary Elevator B48	->	SPI1 MISO	Primary Elevator B11
PTD2/FLEXIO_PI-N2	Primary Elevator B45	->	SPI1 SCK	Primary Elevator B39
PTD4/FLEXIO_PI-N3	Primary Elevator B44	->	SPI1 CSn	Primary Elevator B59

FRDM-KL27Z48M

FlexIO Pins		Connects To	SPI1 Pins	
Pin Name	Board Location		Pin Name	Board Location
PTD0/FLEXIO_PI-N0	J1-1	->	SPI1 MOSI	J2-18
PTD1/FLEXIO_PI-N1	J1-3	->	SPI1 MISO	J2-20
PTD2/FLEXIO_PI-N2	J1-5	->	SPI1 SCK	J1-11

PTD3/FLEXIO_PI-N3	J1-7	->	SPI1 CSn	J1-9
-------------------	------	----	----------	------

TWR-K80F150M

FlexIO Pins		Connects To	DSPI0 Pins	
Pin Name	Board Location		Pin Name	Board Location
PTB0/FLEXIO_PI-N0	Primary Elevator A38	->	DSPI0 SDI	Primary Elevator B44
PTB1/FLEXIO_PI-N1	Primary Elevator A37	->	DSPI0 SDO	Primary Elevator B45
PTB10/FLEXIO_P-IN4	Primary Elevator B70	->	DSPI0 SCK	Primary Elevator B48
PTB11/FLEXIO_P-IN5	Primary Elevator B69	->	DSPI0 PCS0	Primary Elevator B46

slave example**TWR-KL43Z48M**

FlexIO Pins		Connects To	SPI1 Pins	
Pin Name	Board Location		Pin Name	Board Location
PTD0/FLEXIO_PI-N0	Primary Elevator B46	->	SPI1 MISO	Primary Elevator B11
PTD4/FLEXIO_PI-N1	Primary Elevator B48	->	SPI1 MOSI	Primary Elevator B10
PTD2/FLEXIO_PI-N2	Primary Elevator B45	->	SPI1 SCK	Primary Elevator B39
PTD4/FLEXIO_PI-N3	Primary Elevator B44	->	SPI1 CSn	Primary Elevator B59

FRDM-KL27Z48M

FlexIO Pins		Connects To	SPI1 Pins	
Pin Name	Board Location		Pin Name	Board Location
PTD0/FLEXIO_PI-N0	J1-1	->	SPI1 MOSI	J2-20
PTD1/FLEXIO_PI-N1	J1-3	->	SPI1 MISO	J2-18

Getting Started

PTD2/FLEXIO_PI-N2	J1-5	->	SPI1 SCK	J1-11
PTD3/FLEXIO_PI-N3	J1-7	->	SPI1 CSn	J1-9

TWR-K80F150M

FlexIO Pins		Connects To	DSPI0 Pins	
Pin Name	Board Location		Pin Name	Board Location
PTB0/FLEXIO_PI-N0	Primary Elevator A38	->	DSPI0 SDI	Primary Elevator B44
PTB1/FLEXIO_PI-N1	Primary Elevator A37	->	DSPI0 SDO	Primary Elevator B45
PTB10/FLEXIO_P-IN4	Primary Elevator B70	->	DSPI0 SCK	Primary Elevator B48
PTB11/FLEXIO_P-IN5	Primary Elevator B69	->	DSPI0 PCS0	Primary Elevator B46

48.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. For TWR-KL43Z48M, insert the Tower System module into TWR-ELEV.
3. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
4. Download the program to the target board.
5. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

48.4.3 Run the example

master example

These instructions are displayed/shown on the terminal window:

```
+++++++ FLEXIO SPI Send/Receive Example Start ++++++

1. FlexIO-simulated SPI master starts transfer with the masterWriteBuff and masterReadBuff.
2. SPI1 acts as slave also transfer with the slaveWriteBuff and slaveReadBuff.
```

3. Compare the masterWriteBuff and the slaveReadBuff and the slaveWriteBuff and the masterReadBuff to see results.

```
=====
```

Press any key to start the transfer:

Type a character on the keyboard and the FlexIO-simulated SPI master starts the transfer with the SPI slave, compares the masterWriteBuff and slaveReadBuff, the slaveWriteBuff and the masterReadBuff to check whether the transfer is successful.

```
FlexIO simulated SPI master to SPI slave bidirectional transfer succeed!!
FlexIO simulated SPI master to SPI slave transfer DMA bidirectional transfer succeed!!
FlexIO simulated SPI master to SPI slave bidirectional transfer succeed!!
FlexIO simulated SPI master to SPI slave transfer DMA bidirectional transfer succeed!!
FlexIO simulated SPI master to SPI slave bidirectional transfer succeed!!
FlexIO simulated SPI master to SPI slave transfer DMA bidirectional transfer succeed!!
FlexIO simulated SPI master to SPI slave bidirectional transfer succeed!!
...
```

slave example

These instructions are displayed/shown on the terminal window:

```
+++++++ FLEXIO SPI Send/Receive Example Start ++++++
1. SPI1 acts as master starts transfer with masterWriteBuff and masterReadBuff.
2. FlexIO simulated SPI slave also transfer with slaveWriteBuff and slaveReadBuff.
3. Compare masterWriteBuff and slaveReadBuff, slaveWriteBuff and masterReadBuff to see result.
=====
Press any key to start transfer:
```

Type a character on the keyboard and the SPI1 master starts the transfer with the FlexIO- simulated SPI slave, compares the masterWriteBuff and the slaveReadBuff, the slaveWriteBuff and the masterReadBuff to check whether the transfer is successful.

```
SPI master to FlexIO simulated SPI slave bidirectional transfer succeeded!!
SPI master to FlexIO simulated SPI slave DMA bidirectional transfer succeeded!!
SPI master to FlexIO simulated SPI slave bidirectional transfer succeeded!!
SPI master to FlexIO simulated SPI slave DMA bidirectional transfer succeeded!!
SPI master to FlexIO simulated SPI slave bidirectional transfer succeeded!!
SPI master to FlexIO simulated SPI slave DMA bidirectional transfer succeeded!!
...
```


Chapter 49

FlexIO-simulated UART Example with other methods

49.1 Overview

The FlexIO UART example application demonstrates the FlexIO-simulated UART driver working with different methods. The FlexIO UART example shows the transmit/receive between the FlexIO-simulated UART and the LPUART using interrupts and DMA:

- flexio_uart_example using interrupts
- flexio_uart_dma_example using DMA

49.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the FlexIO UART example.

- FRDM-KL27Z
- FRDM-KL43Z
- TWR-KL43Z48M
- TWR-K80F150M

49.3 System Requirement

49.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Personal Computer

49.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/flexio/uart/<use_case>/<toolchain>.
- Library dependencies: ksdk_platform_lib

Getting Started

49.4 Getting Started

49.4.1 Hardware settings

This example requires connecting the FLEXIO pins with the LPUART pins. Connect the FlexIO pins to the LPUART pins. Note that the default uses the FlexIO pin5 and pin4:

FlexIO Pins	Connects To	LPUART Pins
FlexIO Pin5	->	LPUART Rx
FlexIO Pin4	->	LPUART Tx

Make these connections between the FlexIO pins and LPUART pins by using external wires:

FRDM-KL43Z

FlexIO Pins		Connects To	LPUART Pins	
Pin Name	Board Location		Pin Name	Board Location
PTD5/FLEXIO_PI-N5	J2-12	->	LPUART1 Rx	J2-20
PTD4/FLEXIO_PI-N4	J2-6	->	LPUART1 Tx	J2-18

FRDM-KL27Z

FlexIO Pins		Connects To	LPUART Pins	
Pin Name	Board Location		Pin Name	Board Location
PTD5/FLEXIO_PI-N5	J1-11	->	LPUART1 Rx	J3-3
PTD4/FLEXIO_PI-N4	J1-9	->	LPUART1 Tx	J3-1

TWR-K80F150M

Because LPUART1 is used as debug console so LPUART0 is used in the example

FlexIO Pins		Connects To	LPUART Pins	
Pin Name	Board Location		Pin Name	Board Location
PTB11/FLEXIO_P-IN5	B69	->	LPUART0 Rx	A41
PTB10/FLEXIO_P-IN4	B70	->	LPUART0 Tx	A42

TWR-KL43Z48

FlexIO Pins		Connects To	LPUART Pins	
Pin Name	Board Location		Pin Name	Board Location
PTD5/FLEXIO_PI-N5	Primary Elevator B39	->	LPUART1 Rx	TWR-KL43Z48M J15-14
PTD0/FLEXIO_PI-N4	Primary Elevator B59	->	LPUART1 Tx	Primary Elevator B47

49.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Insert the Tower System module into the TWR-ELEV.
3. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
4. Download the program to the target board.
5. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

49.4.3 Run the example**49.4.3.1 FLEXIO_UART interrupt way**

These instructions are displayed/shown on the terminal window:

```

+++++++ FLEXIO UART Send/Receive Example Start ++++++

1. FlexIO simulated UART send a buffer
2. LPUART1 receives data from FlexIO simulated UART.
3. Compare rxBuff and txBuff to see result.
4. LPUART1 send a buffer
5. FlexIO simulated UART receives data from LPUART1.
6. Compare rxBuff and txBuff to see result.
=====
Press any key to start transfer:

```

Type a character from the keyboard and the FlexIO simulated UART sends a buffer to the LPUART1, compares the receive buffer in the LPUART1 side with the txBuff and checks whether the result is successful. Then, the LPUART1 sends a buffer to the FlexIO simulated UART, compares the received buffer in the FlexIO-simulated UART side with the txBuff and checks whether the result is successful.

Getting Started

```
FlexIO simulated UART receive from FlexIO LPUART1 successfully
FlexIO simulated UART receive from FlexIO LPUART1 successfully
FlexIO simulated UART receive from FlexIO LPUART1 successfully
FlexIO simulated UART receive from FlexIO LPUART1 successfully
...
```

For other boards:

```
Transfer from FlexIO simulated UART to LPUART1 successfully
FlexIO simulated UART receive from FlexIO LPUART1 successfully
Transfer from FlexIO simulated UART to LPUART1 successfully
FlexIO simulated UART receive from FlexIO LPUART1 successfully
Transfer from FlexIO simulated UART to LPUART1 successfully
FlexIO simulated UART receive from FlexIO LPUART1 successfully
Transfer from FlexIO simulated UART to LPUART1 successfully
FlexIO simulated UART receive from FlexIO LPUART1 successfully
Transfer from FlexIO simulated UART to LPUART1 successfully
FlexIO simulated UART receive from FlexIO LPUART1 successfully
...
```

49.4.3.2 FLEXIO_UART interrupt way

These instructions are displayed/shown on the terminal window:

```
+++++ FLEXIO UART Send/Receive DMA Example Start +++++

1. FlexIO simulated UART send a buffer using DMA
2. LPUART1 receives data from FlexIO simulated UART.
3. Compare rxBuff and txBuff to see result.
4. LPUART1 send a buffer
5. FlexIO simulated UART receives data from LPUART1 using DMA.
6. Compare rxBuff and txBuff to see result.

=====
Press any key to start transfer:
```

Type a character from the keyboard and the FlexIO-simulated UART sends a buffer to the LPUART1, compares the received buffer in the LPUART1 side with the txBuff, checks whether the result is successful. Then, the LPUART1 sends a buffer to the FlexIO-simulated UART, compares the received buffer in the FlexIO-simulated UART side with the txBuff and checks whether the result is successful.

```
FlexIO simulated UART receive from FlexIO LPUART using DMA successfully
FlexIO simulated UART receive from FlexIO LPUART using DMA successfully
FlexIO simulated UART receive from FlexIO LPUART using DMA successfully
FlexIO simulated UART receive from FlexIO LPUART using DMA successfully
...
```

For other boards:

```
Transfer from FlexIO simulated UART to LPUART using DMA successfully
FlexIO simulated UART receive from FlexIO LPUART using DMA successfully
Transfer from FlexIO simulated UART to LPUART using DMA successfully
FlexIO simulated UART receive from FlexIO LPUART using DMA successfully
Transfer from FlexIO simulated UART to LPUART using DMA successfully
FlexIO simulated UART receive from FlexIO LPUART using DMA successfully
Transfer from FlexIO simulated UART to LPUART using DMA successfully
FlexIO simulated UART receive from FlexIO LPUART using DMA successfully
...
```

Chapter 50

FTM Example

50.1 Overview

The FTM Example project is a demonstration program that uses the KSDK software to generate a square pulse PWM to control the LED brightness.

- FTM generates a PWM with the increasing and decreasing duty cycle.
- LED brightness is increasing and then dimming. This is a continuous process.

50.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the FTM example.

- FRDM-K22F
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512

<note>The TWR-K65F180M Tower System module does not have a suitable LED. The PWM signal is connected to the elevator board connector B25.</note>

50.3 System Requirement

50.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device

Getting Started

- Personal Computer

50.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/ftm/<toolchain>.
- Library dependencies: ksdk_platform_lib

50.4 Getting Started

50.4.1 Hardware settings

The FTM Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

50.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

50.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
Welcome to FTM example  
See the change of LED brightness
```

After that, the LED brightness is increasing and then dimming. This is a continuous process.

Chapter 51

GPIO Example

51.1 Overview

The GPIO Example project is a demonstration program that uses the KSDK software to manipulate the general-purpose outputs. The example is supported by the set, clear, and toggle write-only registers for each port output data register. The example uses the software button to control/toggle the LED.

51.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the GPIO example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL03Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KM34Z75M
- TWR-KL25Z48M
- TWR-KL43Z48M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512
- USB-KW40Z_KW40Z

Getting Started

51.3 System Requirement

51.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

51.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/gpio/<toolchain>.
- Library dependencies: kSDK_platform_lib

51.4 Getting Started

51.4.1 Hardware settings

The GPIO Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

51.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

51.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
GPIO PD Driver example
```

Press SW to turn on/off a LED1

Press the SW (*) button on the board and observe the LED toggle, which is controlled by GPIO.

Chapter 52

I2C Example with other methods

52.1 Overview

The I2C Example project is a demonstration program that uses the KSDK software. This example provides 4 examples: I2C blocking, non blocking, callback and polling.

- I2C master sends and receives the array to/from the I2C slave and compares whether the two buffers are the same
- I2C slave sends the buffer received from the master then echoes back to the master
- First run the master and then run the slave

52.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the I2C example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- MRB-KW01
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL25Z48M
- TWR-KL43Z48M
- TWR-KM34Z75M
- TWR-KV10Z32

Getting Started

- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512

52.3 System Requirement

52.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

52.3.2 Software requirements

- The project files are in: `<SDK_Install>/examples/<board>/driver_examples/i2c/<use_case>/<toolchain>`.
- Library dependencies: `ksdk_platform_lib`

52.4 Getting Started

52.4.1 Hardware settings

This example requires two separate boards. Connect an instance of the I2Cx master to the I2Cx slave. The process is the same as the I2C common instance in the demo project. In case of TWR-KV11Z75M, also connect pin 2 and 3 on J4 and J11.

Master Board	Connects To	Slave Board
SDA	->	SDA
SCL	->	SCL
GND	->	GND

Make these connections between the two boards by using external wires:

FRDM-K22F :

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
PTB2/I2C0_SCL	J24 Pin 12	->	PTB2/I2C0_SCL	J24 Pin 12

PTB3/I2C0_SDA	J24 Pin 10	->	PTB3/I2C0_SDA	J24 Pin 10
GND	J2 Pin 14	->	GND	J2 Pin 14

FRDM-K64F:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
PTE24/I2C0_SCL	J2 Pin 20	->	PTE24/I2C0_SCL	J2 Pin 20
PTE25/I2C0_SDA	J2 Pin 18	->	PTE25/I2C0_SDA	J2 Pin 18
GND	J2 Pin 14	->	GND	J2 Pin 14

FRDM-KL02Z & FRDM-KL03Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
PTE3/I2C0_SCL	J7 Pin 10	->	PTE3/I2C0_SCL	J7 Pin 10
PTE4/I2C0_SDA	J7 Pin 9	->	PTE4/I2C0_SDA	J7 Pin 9
GND	J7 Pin 7	->	GND	J7 Pin 7

FRDM-KL25Z:

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
		->		
		->		
		->		

FRDM-KL26Z:

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

Master Board	Connects To	Slave Board
--------------	-------------	-------------

Getting Started

Pin Name	Board Location		Pin Name	Board Location
PTE24/I2C0_SCL	J2 Pin 20	->	PTE24/I2C0_SCL	J2 Pin 20
PTE25/I2C0_SDA	J2 Pin 18	->	PTE25/I2C0_SDA	J2 Pin 18
GND	J2 Pin 14	->	GND	J2 Pin 14

FRDM-KL27Z

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
PTD7/I2C1_SCL (*)	J2 Pin 20	->	PTD7/I2C1_SCL (*)	J2 Pin 20
PTD6/I2C1_SDA (*)	J2 Pin 18	->	PTD6/I2C1_SDA (*)	J2 Pin 18
GND	J2 Pin 14	->	GND	J2 Pin 14

FRDM-KL43Z & FRDM-KL43ZKL33 & FRDM-KL46Z:

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
PTD7/I2C1_SCL (*)	J2 Pin 20	->	PTD7/I2C1_SCL (*)	J2 Pin 20
PTD6/I2C1_SDA (*)	J2 Pin 18	->	PTD6/I2C1_SDA (*)	J2 Pin 18
GND	J2 Pin 14	->	GND	J2 Pin 14

FRDM-KW24:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J2 Pin 20	->	I2C0_SCL	J2 Pin 20
I2C0_SDA	J2 Pin 18	->	I2C0_SDA	J2 Pin 18
GND	J2 Pin 14	->	GND	J2 Pin 14

FRDM-KW40Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C1_SCL	J25 Pin 10	->	I2C1_SCL	J25 Pin 10
I2C1_SDA	J25 Pin 12	->	I2C1_SDA	J25 Pin 12
GND	J24 Pin 14	->	GND	J24 Pin 14

MRB-KW01:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
PTC1/I2C1_SCL	J15 Pin 13	->	PTC1/I2C1_SCL	J15 Pin 13
PTC2/I2C1_SDA	J15 Pin 11	->	PTC2/I2C1_SDA	J15 Pin 11
GND	J14 Pin 18	->	GND	J14 Pin 18

TWR-K21D50M & TWR-K22F120M & TWR_K24F120M & TWR-KV31F120M & TWR-KL43Z48M & TWR-KV31F120M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
PTE24/I2C0_SCL (*)	Primary Elevator A7	->	PTE24/I2C0_SCL (*)	Primary Elevator A7
PTE25/I2C0_SDA (*)	Primary Elevator A8	->	PTE25/I2C0_SDA (*)	Primary Elevator A8
GND	Primary Elevator A6	->	GND	Primary Elevator A6

TWR-KM34Z75M

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
PTD7/I2C0_SCL	J10 Pin 1	->	PTD7/I2C0_SCL	J10 Pin 1
PTE0/I2C0_SDA	J11 Pin 1	->	PTE0/I2C0_SDA	J11 Pin 1
GND	J25 Pin 26	->	GND	J25 Pin 26

Getting Started

TWR-KV10Z32:

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator A7	->	I2C0_SCL	Primary Elevator A7
I2C0_SDA	Primary Elevator A8	->	I2C0_SDA	Primary Elevator A8
GND	Primary Elevator A6	->	GND	Primary Elevator A6

TWR-K60D100M & TWR-K64F120M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
PTE10/I2C1_SCL	Primary Elevator A75	->	PTE10/I2C1_SCL	Primary Elevator A75
PTE11/I2C1_SDA	Primary Elevator B71	->	PTE11/I2C1_SDA	Primary Elevator B71
GND	Primary Elevator A6	->	GND	Primary Elevator A6

TWR-K65F180M & TWR-K80F150M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
PTE19/I2C0_SCL	Primary Elevator - Pin A7	->	PTE19/I2C0_SCL	Primary Elevator - Pin A7
PTE18/I2C0_SDA	Primary Elevator - Pin A8	->	PTE18/I2C0_SDA	Primary Elevator - Pin A8
GND	Primary Elevator A65	->	GND	Primary Elevator A65

TWR-KL25Z48M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C1_SCL	Primary Elevator B22	->	I2C1_SCL	Primary Elevator B22
I2C1_SDA	Primary Elevator B10	->	I2C1_SDA	Primary Elevator B10
GND	Primary Elevator B2	->	GND	Primary Elevator B2

TWR-K21F120M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
PTC10/I2C1_SCL	Primary Elevator B50	->	PTC10/I2C1_SCL	Primary Elevator B50
PTC11/I2C1_SDA	Primary Elevator B51	->	PTC11/I2C1_SDA	Primary Elevator B51
GND	Primary Elevator A65	->	GND	Primary Elevator A65

TWR-KW24D512:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator A7	->	I2C0_SCL	Primary Elevator A7
I2C0_SDA	Primary Elevator A8	->	I2C0_SDA	Primary Elevator A8
GND	Primary Elevator A81	->	GND	Primary Elevator A81

FRDM-KV31F:

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

Master Board	Connects To	Slave Board
--------------	-------------	-------------

Getting Started

Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J1-16	->	I2C0_SCL	J1-16
I2C0_SDA	J2-13	->	I2C0_SDA	J2-13
GND	J2-14	->	GND	J2-14

FRDM-KV10Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	J2 Pin 13	->	I2C0_SCL	J2 Pin 13
I2C0_SDA	J1 Pin 15	->	I2C0_SDA	J1 Pin 15
GND	J2 Pin 14	->	GND	J2 Pin 14

TWR-KV11Z75M:

The board doesn't support external pull-up resistors for I2C pins. So the internal pull-up resistors is enable for I2C pins. However, the resistor is quite huge (~20KOhm - 50KOhm). The I2C may run FAIL in high baurate. In this case, user need to use external pull-up resistors.

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
I2C0_SCL	Primary Elevator A7	->	I2C0_SCL	Primary Elevator A7
I2C0_SDA	Primary Elevator A8	->	I2C0_SDA	Primary Elevator A8
GND	Primary Elevator A6	->	GND	Primary Elevator A6

52.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the

example.

52.4.3 Run the example

52.4.3.1 I2C blocking

These instructions are displayed/shown on the terminal window:

On Master board:

```
===== I2C MASTER BLOCKING =====
1. Master sends a frame includes CMD(size of data) and data
2. Master receives data from slave.
3. Compare rxBuff and txBuff to see result.
=====
Press any key to start transfer:
```

Type a character on the keyboard and the master board sends to the slave board and receives back from the slave board.

On Master board:

```
Master sends 1 bytes:
01
Master Sends/ Receives 1 bytes successfully
Master sends 2 bytes:
01 02
Master Sends/ Receives 2 bytes successfully
Master sends 3 bytes:
01 02 03
Master Sends/ Receives 3 bytes successfully
Master sends 4 bytes:
01 02 03 04
Master Sends/ Receives 4 bytes successfully
...
```

On Slave board:

```
===== I2C SLAVE BLOCKING =====
Slave is running ...
Slave received:
01
Slave received:
01 02
Slave received:
01 02 03
Slave received:
01 02 03 04
Slave received:
01 02 03 04 05
...
```

52.4.3.2 I2C non-blocking

These instructions are displayed/shown on the terminal window same as above.



Getting Started

52.4.3.3 I2C callback

These instructions are displayed/shown on the terminal window same as above.

52.4.3.4 I2C polling

These instructions are displayed/shown on the terminal window same as above.

Chapter 53

iRTC Example

53.1 Overview

The iRTC Example project is a demonstration program that uses the KSDK software to demonstrate the iRTC timer functionality. After a pre-defined time elapse, the iRTC ISR is called to alert users.

53.2 Supported Platforms

This Tower System module is supported by the iRTC example.

- TWR-KM34Z75M

53.3 System Requirement

53.3.1 Hardware requirements

- J-Link ARM
- USB A to USB Mini B cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

53.4 Getting Started

53.4.1 Hardware settings

The iRTC Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

53.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.

Getting Started

4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

53.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
RTC Example START:

Alarm Time is 2015/1/21 18:55:33

Current Time is 2015/1/21 18:55:31
Current Time is 2015/1/21 18:55:32
Ring, ring, ring
Current Time is 2015/1/21 18:55:33

RTC Example END.
```

Afterwards, the program enters an infinite loop.

Chapter 54

Low Power Serial Communication Interface (LPSCI) Example with Other Methods

54.1 Overview

This LPSCI example application demonstrates the SDK Peripheral drivers working with different methods. The LPSCI example shows transmit/receive LPSCI driver with other efficiency methods:

- Using blocking method
- Using non-blocking method
- Using Dma blocking method
- Using Dma non-blocking method
- Using polling method

The board transfers and receives characters through the LPSCI interface. Type characters on the keyboard and the board receives and echoes them on the terminal screen. Look for instructions output to the terminal.

54.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the LPSCI example.

- FRDM-KL02Z (*) (DMA not supported)
- FRDM-KL25Z (*) (DMA not supported)
- FRDM-KL26Z
- FRDM-KL46Z
- MRB-KW01
- TWR-KL25Z48M (*) (DMA not supported)

54.3 System Requirement

54.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

Getting Started

54.3.2 Software requirements

- The project files are in: `<SDK_Install>/examples/<board>/driver_examples/lpsci/<use_case>/<toolchain>`.
- Library dependencies: `ksdk_platform_lib`

54.4 Getting Started

54.4.1 Hardware settings

The LPSCI Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

54.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

54.4.3 Run the example

54.4.3.1 LPSCI blocking

These instructions are displayed/shown on the terminal window:

```
+++++++ LPSCI Send/Receive Blocking Example ++++++
```

Type characters on the keyboard and the board receives and echoes them to the terminal screen.

Type characters on the keyboard and the board receives and echoes them to the terminal screen.

54.4.3.2 LPSCI non-blocking

These instructions are displayed/shown on the terminal window:

```
+++++++ LPSCI Send/Receive Non Blocking Example ++++++
```

Type characters on the keyboard and the board receives and echoes them to the terminal screen.

Type characters on the keyboard and the board receives and echoes them to the terminal screen.

54.4.3.3 LPSCI DMA blocking

These instructions are displayed/shown on the terminal window:

```
+++++++ LPSCI-DMA Blocking Example ++++++
```

Type characters on the keyboard and the board receives and echoes them to the terminal screen.

Type characters on the keyboard and the board receives and echoes them to the terminal screen.

54.4.3.4 LPSCI DMA non-blocking

These instructions are displayed/shown on the terminal window:

```
+++++++ LPSCI-DMA Non Blocking Example ++++++
```

Type characters on the keyboard and the board receives and echoes them to the terminal screen.

Type characters on the keyboard and the board receives and echoes them to the terminal screen.

54.4.3.5 LPSCI polling

These instructions are displayed/shown on the terminal window:

```
+++++++ LPSCI Polling Example ++++++
```

Type characters on the keyboard and the board receives and echoes them to the terminal screen.

Type characters on the keyboard and the board receives and echoes them to the terminal screen.

Chapter 55

LPTMR Example

55.1 Overview

The LPTMR (Low Power Timer) project is a demonstration program to show how to use the LPTMR driver. It triggers an LPTMR interrupt once every second and prints out the number of interrupts that have occurred since the program started running.

55.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the LPTMR example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL25Z48M
- TWR-KL43Z48M
- TWR-KM34Z75M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512
- USB-KW40Z_KW40Z

Getting Started

55.3 System Requirement

55.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

55.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/lptmr/<toolchain>.
- Library dependencies: ksdk_platform_lib

55.4 Getting Started

55.4.1 Hardware settings

The LPTMR Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

55.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

55.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
Low Power Timer Example
```

```
LPTMR interrupt No.1  
LPTMR interrupt No.2  
LPTMR interrupt No.3
```

An LPTMR interrupt is triggered once every second. The LED blinks and prints out the number of interrupts that have occurred since the program started running.

Chapter 56

Low Power Universal Asynchronous Receiver/Transmitter (LPUART) Example with other methods

56.1 Overview

This LPUART example application demonstrates the SDK Peripheral drivers working with different methods. The LPUART example shows transmit/receive LPUART driver with these efficiency methods:

- Using blocking method
- Using non-blocking method
- Using DMA blocking method
- Using DMA non-blocking method
- Using polling method

Transfer data between the board and the PC. The board transfers and receives characters through the LPUART interface. Type characters on the keyboard and the board receives and echoes them to the terminal screen. Look for instructions output to the terminal.

56.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the LPUART example.

- FRDM-KL03Z (*) (EDMA not support)
- FRDM-KL27Z
- FRDM-KL43Z (*) (EDMA not support)
- FRDM-KW40Z
- TWR-K80F150M
- TWR-KM34Z75M
- USB-KW40Z

56.3 System Requirement

56.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (Tower System/base board, ...) for a specific device
- Personal Computer

For TWR-KM34Z75M

Getting Started

- J-Link ARM
- USB A to USB Mini B cable
- Hardware (Tower System/base board, ...) for a specific device
- Personal Computer
- USB-UART(TTL) conversion board

56.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/lpuart/<use_case>/<toolchain>.
- Library dependencies: ksdk_platform_lib

56.4 Getting Started

56.4.1 Hardware settings

The LPUART Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

For - TWR-KM34Z75M

56.4.2 Hardware settings

This example requires an extra USB-TTL(3.3V) transform board connected to the PC USB port.

TWR-KM34Z75M	Connects To	USB-TTL board
TxD	->	RxD
RxD	->	TxD
GND	->	GND

Make these connections between the two boards by using external wires:

TWR-KM34Z75M

TWR-KM34Z75M		Connects To	USB-TTL board	
Pin Name	Board Location		Pin Name	Board Location
PTJ5/LPUART0_-TX	J14 Pin 1	->	RxD	RxD
PTJ6/LPUART0_-RX	J16 Pin 1	->	TxD	TxD

GND	J25 Pin 26	->	GND	GND
-----	------------	----	-----	-----

56.4.3 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

56.4.4 Run the example

For - TWR-KM34Z75M

1. Connect RxD,TxD,GND between Tower board and USB-TTL board.
2. Connect the USB-TTL board to PC host.
3. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
4. Download the program to the target board.
5. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

56.4.5 Run the example

56.4.5.1 FLEXIO_UART interrupt way

These instructions are displayed/shown on the terminal window:

```
+++++++ LPUART Send/Receive Blocking Example ++++++
```

Type characters on the keyboard and the board receives and echoes them on the terminal screen.

Type characters on the keyboard and the board receives and echoes them on the terminal screen.

Getting Started

56.4.5.2 LPUART non-blocking

These instructions are displayed/shown on the terminal window:

```
+++++++ LPUART Send/Receive Non Blocking Example ++++++
```

Type characters on the keyboard and the board receives and echoes them on the terminal screen.

Type characters on the keyboard and the board receives and echoes them on the terminal screen.

56.4.5.3 LPUART DMA blocking

These instructions are displayed/shown on the terminal window:

```
+++++++ LPUART-DMA Send/Receive Blocking Example ++++++
```

Type characters on the keyboard and the board receives and echoes them on the terminal screen.

Type characters on the keyboard and the board receives and echoes them on the terminal screen.

56.4.5.4 LPUART DMA non-blocking

These instructions are displayed/shown on the terminal window:

```
+++++++ LPUART-DMA Send/Receive Non Blocking Example ++++++
```

Type characters on the keyboard and the board receives and echoes them on the terminal screen.

Type characters on the keyboard and the board receives and echoes them on the terminal screen.

56.4.5.5 LPUART polling

These instructions are displayed/shown on the terminal window:

```
+++++++ LPUART Send/Receive Polling Example ++++++
```

Type characters on the keyboard and the board receives and echoes them on the terminal screen.

Type characters on the keyboard and the board receives and echoes them on the terminal screen.

Chapter 57

LTC AES Example

57.1 Overview

This project is a demonstration program that uses the KSDK software for encryption/decryption sample data using AES-CBC, AES-CCM, and XCBC-MAC algorithm.

57.2 Supported Platforms

These Freescale Freedom development platforms are supported by the LTC_AES example.

- FRDM-KW40Z
- USB-KW40Z

57.3 System Requirement

57.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (Tower System/base board, ...) for specific device
- Personal Computer

57.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/ltc/ltc_aes/<toolchain>.
- Library dependencies: ksdk_platform_lib

57.4 Getting Started

57.4.1 Hardware settings

The LTC_AES Example project does not call for any special hardware configurations. The recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

57.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.

Getting Started

2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

57.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
..... LTC (AES) DRIVER EXAMPLE .....
```

```
Measuring timer is driven 60 MHz. (tick = 16 picoSeconds)
```

```
Testing input string:
```

```
Once upon a midnight dreary,  
while I pondered weak and weary,  
Over many a quaint and curious volume of forgotten lore,  
While I nodded,  
nearly napping,  
suddenly there came a tapping,  
As of some one gently rapping,  
rapping at my chamber doorIts some visitor,  
I muttered,  
tapping at my chamber doorOnly this,  
and nothing more.
```

```
----- AES-CBC method -----
```

```
AES CBC Encryption of 320 bytes.
```

```
AES CBC encryption finished in 5359 ticks / 89 µs
```

```
AES CBC Decryption of 320 bytes.
```

```
AES CBC decryption finished in 5151 ticks / 85 µs
```

```
Decrypted string :
```

```
Once upon a midnight dreary,  
while I pondered weak and weary,  
Over many a quaint and curious volume of forgotten lore,  
While I nodded,  
nearly napping,  
suddenly there came a tapping,  
As of some one gently rapping,  
rapping at my chamber doorIts some visitor,  
I muttered,  
tapping at my chamber doorOnly this,  
and nothing more.
```

```
----- AES-CCM method -----
```

```
AES CCM Encryption of 320 bytes.
```

```
using iv length : 12 bytes
```

```
using aad length : 20 bytes
```

```
using key length : 16 bytes
```

```
using tag length : 8 bytes
```

```
AES CCM encryption finished in 6504 ticks / 108 µs
```

```
AES CCM decryption of 320 bytes.
```

```
AES CCM decryption finished in 6473 ticks / 107 µs
```

```
Decrypted string:
  Once upon a midnight dreary,
    while I pondered weak and weary,
  Over many a quaint and curious volume of forgotten lore,
  While I nodded,
    nearly napping,
    suddenly there came a tapping,
  As of some one gently rapping,
    rapping at my chamber doorIts some visitor,
    I muttered,
    tapping at my chamber doorOnly this,
    and nothing more.
```

```
----- AES-XCBC-MAC -----
```

```
AES XCBC-MAC Computing hash of 320 bytes
```

```
Computed hash:
```

```
ac aa c6 e9 c7 46 81 65 38 7b f 15 d9 3f 80 8a
```

```
..... THE END OF THE LTC (AES) DRIVER EXAMPLE .....
```


Chapter 58

MMAU Example

58.1 Overview

The Memory Mapped Arithmetic Unit (MMAU) provides acceleration to a set of mathematical operations, including signed/unsigned multiplication and accumulation, division and square root. This example uses the MMAU module for sine(x) computing. The sine(x) function is implemented using a 13th order polynomial approximation derived using a [Taylor Series]..

58.2 Supported Platforms

This Tower System module is supported by the MMAU example.

- TWR-KM34Z75M

58.3 System Requirement

58.3.1 Hardware requirements

- J-Link ARM
- USB A to USB Mini B cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

58.4 Getting Started

58.4.1 Hardware settings

The MMAU Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

58.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control

Getting Started

3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

58.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
MMAU example : start

Sin(pi) = 0 in frac32 format
Sin(0.8*pi) = 1262259216 in frac32 format
Sin(0.6*pi) = 2042378312 in frac32 format
Sin(0.4*pi) = 2042378312 in frac32 format
Sin(0.2*pi) = 1262259216 in frac32 format
Sin(0) = 0 in frac32 format
Sin(-0.2*pi) = -1262259224 in frac32 format
Sin(-0.4*pi) = -2042378320 in frac32 format
Sin(-0.6*pi) = -2042378320 in frac32 format
Sin(-0.8*pi) = -1262259224 in frac32 format
Sin(-pi) = 0 in frac32 format

MMAU example : end
```

Afterwards, the program enters an infinite loop.

Chapter 59

MPU Example

59.1 Overview

MPU Example defines protected/unprotected memory region from the core. A memory region is configured as the non-writable region. If any operation writes to this region, this example provides a prevention alert by outputting a message on terminal. Then, this region becomes accessible and writing to it is successful.

59.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the MPU example.

- FRDM-K64F
- TWR-K21F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KM34Z75M

59.3 System Requirement

59.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

59.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/mpu/<toolchain>.
- Library dependencies: ksdk_platform_lib

Getting Started

59.4 Getting Started

59.4.1 Hardware settings

The MPU Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

59.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

59.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
MPU example begin.  
  
Set regionArray to un-writeable.  
Write 0 to regionArray at No.0  
regionArray[0] = 0  
Core access violation and generate busfault!  
Core is granted write access permission!  
regionArray[0] = 0  
Protected regionArray successfully !  
Press any key to continue
```

Chapter 60

PDB Example

60.1 Overview

The PDB Example project is a demonstration program that uses the KSDK software and PDB to generate a constant periodic of time (trigger pulse and interrupt). Each time the PDB expires, an interrupt occurs and counter is increased and prints to the terminal.

60.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the PDB example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KM34Z75M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512

60.3 System Requirement

60.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (Tower System/base board, ...) for specific device
- Personal Computer

Getting Started

60.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/pdb/<toolchain>.
- Library dependencies: kSDK_platform_lib

60.4 Getting Started

60.4.1 Hardware settings

The PDB Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

60.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

60.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
PDB example
PDB ISR No.1 occurred !
PDB ISR No.2 occurred !
PDB ISR No.3 occurred !
PDB ISR No.4 occurred !
PDB ISR No.5 occurred !
PDB ISR No.6 occurred !
PDB ISR No.7 occurred !
PDB ISR No.8 occurred !
PDB ISR No.9 occurred !
PDB ISR No.10 occurred !
PDB example finished
Press any key to run example again
```

Chapter 61

PIT Example

61.1 Overview

The PIT Example project is a demonstration program that uses the KSDK software and PIT to cause the LED to blink with different frequencies on multiple channels. Measure the time of the generated pulse with the oscilloscope on the LED1 and the LED2. The LED2 toggles two times faster than the LED1.

61.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the PIT example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KV31F
- FRDM-KW24
- FRDM-KW40Z
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL25Z48M
- TWR-KL43Z48M
- TWR-KM34Z75M
- TWR-KV31F120M
- TWR-KW24D512
- USB-KW40Z

Getting Started

61.3 System Requirement

61.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

61.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/pit/<toolchain>.
- Library dependencies: ksdk_platform_lib

61.4 Getting Started

61.4.1 Hardware settings

The PIT Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

61.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

61.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
Starting channel No.0 ...
```

Starting channel No.1 ...

Channel No.0 interrupt is occurred !

Channel No.0 interrupt is occurred !

Channel No.1 interrupt is occurred !

Channel No.0 interrupt is occurred !

Channel No.0 interrupt is occurred !

Channel No.1 interrupt is occurred !

Chapter 62

QSPI Example with other methods

62.1 Overview

The QSPI example project is a demonstration program that uses the KSDK software. This example erase and program external serial flash through QSPI. This example involves three methods:

- QSPI using polling way to program the external serial flash
- QSPI using interrupt way to program the external serial flash
- QSPI using DMA method to program the external serial flash

62.2 Supported Platforms

This Tower System modules are supported by the QSPI example:

- TWR-K80F150M

62.3 System Requirement

62.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (Tower System/base board, ...) for a specific device
- Personal Computer

62.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/qspi/<toolchain>.
- Library dependencies: ksdk_platform_lib

62.4 Getting Started

62.4.1 Hardware settings

This example requires external serial flash powered:

TWR-K80F150M

Jumper J30 pin4 and pin6 should be connected.

Getting Started

62.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

62.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
QSPI example started!
Erase finished!
Program data finished!

Program through QSPI polling succeeded !
Erase finished!
Program data finished!

Program through QSPI Interrupt succeeded !
Erase finished!
Program data finished!

Program through QSPI DMA succeed !

Press any key to continue again!
```

Chapter 63

QuadTmr Example

63.1 Overview

The QuadTmr Example project is a demonstration program that uses the KSDK software to demonstrate the QuadTmr timer functionality. While the program is running, the user captures waveforms in the scope.

63.2 Supported Platforms

This Tower System module is supported by the QuadTmr example.

- TWR-KM34Z75M

63.3 System Requirement

63.3.1 Hardware requirements

- J-Link ARM
- USB A to USB Mini B cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer
- Oscilloscope

63.4 Getting Started

63.4.1 Hardware settings

This example requires one board and one oscilloscope. Connect the oscilloscope to the QuadTmr output pin:

Board	Connects To	oscilloscope	
QTMRO_TMR1	->	Positive end	
Ground Test Point	->	Ground end	

Make these connections between the board and oscilloscope by using oscilloscope probes:

TWR-KM34Z75M

Board		Connects To	oscilloscope	
Pin Name	Board Location		oscilloscope	connection ends

Getting Started

PTG0/QTMR0_T-MR1	J25 Pin 20	->	oscilloscope	Positive end
------------------	------------	----	--------------	--------------

63.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

63.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
*****QUADTIMER EXAMPLE START*****
*****Delay 3 s for PWM*****

*****Make sure to connect a scope.*****

****A 50% duty cycle PWM wave is observed in the scope.****

*****QUADTIMER EXAMPLE END.*****
```

After that, the program enters an infinite loop.

Chapter 64

RNGA Example

64.1 Overview

The RNGA is a digital integrated circuit capable of generating the 32-bit random numbers. The RNGA Example project is a demonstration program that uses the KSDK software to generate random numbers and prints them to the terminal.

64.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the RNGA example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KV31F
- FRDM-KW24
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-KM34Z75M
- TWR-KV31F120M
- TWR-KW24D512

64.3 System Requirement

64.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

Getting Started

64.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/rnga/<toolchain>.
- Library dependencies: ksdk_platform_lib

64.4 Getting Started

64.4.1 Hardware settings

The RNGA Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

64.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

64.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
RNGA Peripheral Driver Example
Generate 10 random numbers
```

```
Generate 10 number:
Get random data No.0: 75128ccd.
Get random data No.1: f3bc5f99.
Get random data No.2: fe50a8bc.
Get random data No.3: 4737e46d.
Get random data No.4: 9f8bb4a8.
Get random data No.5: cadfd781.
Get random data No.6: a8263a08.
Get random data No.7: 3fed8d88.
Get random data No.8: c2826970.
Get random data No.9: 2715eb04.
Press any key to continue
```

Chapter 65

RTC Example

65.1 Overview

The RTC Example project is a demonstration program that uses the KSDK software to get/set RTC time and alarm time. The RTC module is configured to use as an alarm clock.

- Set alarm date time; it should be later than the initial date time.
- Start RTC. When the RTC date time matches the alarm date time, an indicated LED should be turned on.

65.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the RTC example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KW24
- FRDM-KW40Z
- MRB-KW01
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KL25Z48M
- TWR-KL43Z48M
- TWR-KW24D512
- USB-KW40Z

Getting Started

65.3 System Requirement

65.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

65.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/rtc/<toolchain>.
- Library dependencies: ksdk_platform_lib

65.4 Getting Started

65.4.1 Hardware settings

The RTC Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

65.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

65.4.3 Run the example

Note: On the FRDM-KL25Z, FRDM-KL26Z and FRDM-KL46Z, the RTC counter is fed without the 32 kHz (OSC32KCLK) clock. Therefore, the accuracy of RTC alarms is affected.

These instructions are displayed/shown on the terminal window:

```
RTC example: set up time to wake up an alarm
Current datetime: 2014-12-25 19:00:00
Input the number of second to wait for alarm
The second must be positive value
```

Type characters on the keyboard and the board receives and initializes a second value to start an alarm mode. Alarm occurs on the specified second. Note: On the FRDM-KL26Z and FRDM-KL46Z, the RTC counter is fed without the 32 kHz (OSC32KCLK) clock. Therefore, the accuracy of RTC alarms is affected. These instructions are displayed/shown on the terminal window:

```
Alarm occurs at: 2014-12-25 19:00:21
Alarm occurred !!!! Current datetime: 2014-12-25 19:00:22
Input the number of seconds to wait for the alarm
Seconds must have a positive value
```

After the specific RTC date time matches the alarm date time, an indicated LED should turn on.

Chapter 66

SDHC SDCard Example

66.1 Overview

The SDHC SDCard Example application demonstrates the use of SD card driver. It displays the card information followed by a write-read compare test and the erase operation. Provide an example with different modes:

- Detect card inserted
- Read and write single block and multi-blocks to SDCard
- Erase blocks in SDCard

66.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the SDHC SdCard example.

- TWR-K21F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M

66.3 System Requirement

66.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

66.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/sdhc_sdcard/<toolchain>.
- Library dependencies: ksdk_platform_lib

Getting Started

66.4 Getting Started

66.4.1 Hardware settings

The SDHC SdCard Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

66.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

66.4.3 Run the example

Insert an SD or a micro-SD card depending on the board connector. Ensure that the card doesn't contain any important content because the demo erases and overwrites some sectors.

These instructions are displayed/shown on the terminal window:

```
SD Card Demo Start!
This demo is going to access data on card
A card is detected
SDCard initialized

----- Card Information -----
Card Type: SDHC
Card Capacity: f GB
Host Clock Max Rate: 120 MHz
Clock Rate: 20 MHz
Manufacturer ID: 0x3
OEM ID: 0x5344
Product name: SD04G
Product serial number: 0x25BD9A0
Product revision: 8.0
Manufacturing data: Dec 2010
CSD Structure: 0x1
taac: f ns
nsac: 0 clks
tran speed: f kbps
ccc: class 0 2 4 5 7 8 10
max read block length: 512 Bytes
c_size: 7562
Erase unit size is one or multiple units of 512 bytes
```

```

The size of write protected group is 2 blocks
R2W_Factor: 2
max write block length: 9
The content is copied
Hard disk-like file system with partition table
SCR Structure: 0x0
SD Spec: 0x2
SD Spec 3.0
SDHC Card(Security Version 2.00)
Card supports 1-bit bus width
Card supports 4-bit bus width
Support set block count command

```

```

!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!! CAUTION !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
THIS DEMO IS GOING TO ERASE AND WRITE RAW DATA TO THE CARD,
MAKE SURE YOU TAKE BACKUP OF ANY VALUEABLE DATA PRESENT IN THE CARD
BEFORE PROCEEDING.
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
Do you want to proceed? (Enter 'y' IF yes) :

```

User need type 'Y' character from the keyboard. These instructions are displayed/shown on the terminal window:

```

Start write/read/compare demo...
Single block write/read/compare demo passed!
Multi-block write/read/compare demo passed!
Erase blocks demo passed!
SD Card Demo End!

```


Chapter 67

SDRAMC Example

67.1 Overview

The synchronous DRAM controller module (SDRAM) provides a seamless integration of SDRAM. This example uses the SDRAMC peripheral to initialize the SDRAM.

67.2 Supported Platforms

These Tower System modules are supported by the SDRAMC example.

- TWR-K65F180M
- TWR-K80F150M

67.3 System Requirement

67.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (Tower System/base board, ...) for specific device
- Personal Computer

67.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/sdramc/<toolchain>.
- Library dependencies: ksdk_platform_lib

67.4 Getting Started

67.4.1 Hardware settings

The SDRAMC Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example. For TWR-K80F150M, the OpenSDA UART and the SDRAM have multiplex pins. Therefore, ensure that there is no shunt on J6.

Getting Started

67.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

67.4.3 Run the example

These instructions are displayed/shown on the terminal window for K80 after the J6 and J8 reset after the sdram write/read check:

```
SDRAM Write Data and Read Data Succeed.  
SDRAM Spend xx milliseconds with Cache Write back.  
SDRAM Spend xx milliseconds with Cache Write through.  
SDRAM Spend xx milliseconds with non-cacheable.  
SDRAM Example End.
```

These instructions are displayed/shown on the terminal window for others:

```
SDRAM Example Start!  
SDRAM Memory Write Start, Start Address 0x70000000, Data Length 4096 !  
SDRAM Write finished!  
SDRAM Read Start, Start Address 0x70000000, Data Length 4096 !  
SDRAM Read finished!  
SDRAM Write Data and Read Data Compare Start!  
SDRAM Write Data and Read Data Succeeded.  
SDRAM Example End.
```

Chapter 68

SLCD Example

68.1 Overview

SLCD Example defines how to use slcd to display content.

68.2 Supported Platforms

These Freescale Freedom development platforms are supported by the SLCD example.

- FRDM-KL43Z
- FRDM-KL46Z
- TWR-KM34Z75M

68.3 System Requirement

68.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

68.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/slcd/<toolchain>.
- Library dependencies: ksdk_platform_lib

68.4 Getting Started

68.4.1 Hardware settings

The MPU Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

68.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.

Getting Started

2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

68.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
SLCD enters interrupt
```

For TWR-KM34Z75M This example turns on all SLCD segments and blinks several times (No instructions on the terminal window).

Chapter 69

Smart Card Example

69.1 Overview

This example demonstrates the SDK Peripheral drivers working with different methods.

- Using blocking method
- Using non-blocking method

Transfer data between the board and the smart card Zeitcontrol ZC7.5 RevD. The example transfers using both T0 and T1 modes.

69.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the smart card example.

- TWR-K21F120M (using TWR-POSCARD, combination of smartcard_uart and smartcard_ncn8025 drivers)
- TWR-K80F150M (using on-board micro-SIM socket, combination of smartcard_emvsim and smartcard_direct drivers)

69.3 System Requirement

69.3.1 Hardware requirements

- J-Link ARM
- PE Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer
- TWR-POSCARD Tower System module (in case of micro SIM interface absence on microprocessor Tower System module)
- smart card Zeitcontrol ZC7.5 RevD

69.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/smartcard/<use_case>/<toolchain>.
- Library dependencies: ksdk_platform_lib

Getting Started

69.4 Getting Started

69.4.1 Hardware settings

The smart card example project requires a special hardware configuration when using the TWR-POSCARD. In case of using :

- TWR-POSCARD board requires following important jumper setting of J24(2-3) and J26(1-2), common for all supported boards.
- TWR-K21fF20M Tower System module, TWR-POSCARD jumper settings required: J22 (3-4), J1 (open), J3 (3-5), J7 (2-4, 3-5), J19 (1-2), J18 (open), J2 (3-5)
- TWR-K80F150M Tower System module in combination with the TWR-POSCARD, the following jumper settings are required: J21 (1-2), J22 (1-2, 3-4), J1 (4-6), J3 (4-6), J7 (1-3, 4-6), J19 (), J18 (open), J2 (4-6) on TWR-K80F150M Tower System module 0 ohm resistor R215 has to be removed (this R215 resistor is required to communicate with on board (K80F150M) SIM interface).

69.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.
5. Insert smart card into socket (when using TWR-POSCARD Tower System module, it's the socket under magnetic stripe reader; when using TWR-K80 Tower System modules, it's the socket under micro SD card socket).

69.4.3 Run the example

These instructions are displayed/shown on the terminal window:

SMARTCARD blocking

```
SMARTCARD Driver Send Receive blocking functionality example *****
```

```
Insert a smart card to test
Card inserted.
Deactivating card...Done!
Resetting/Activating card...Done!
=====
Send receive blocking functionality example in T=0 mode started!
```

```

Smart card EEPROM Start Address = 0xC00000
Smart card EEPROM Size = 32 KBytes

Deactivating card...Done!
Resetting/Activating card...Done!

Send receive blocking functionality example in T=1 mode started!

LRC received correctly
Echo data received correctly!
Command status OK

Send receive blocking functionality example finished!
=====

```

SMARTCARD non-blocking

```

SMARTCARD Driver Send Receive non-blocking functionality example *****

Card inserted.
Deactivating card...Done!
Resetting/Activating card...Done!
=====
Send receive non-blocking functionality example in T=0 mode started!

Smart card EEPROM Start Address = 0xC00000
Smart card EEPROM Size = 32 KBytes

Deactivating card...Done!
Resetting/Activating card...Done!

Send receive non-blocking functionality example in T=1 mode started!

LRC received correctly
Echo data received correctly!
Command status OK

Send receive non-blocking functionality example finished!
=====

```


Chapter 70

SPI Example with other methods

70.1 Overview

The SPI Example project is a demonstration program that uses the KSDK software. This example provides 5 examples SPI board to board with 5 modes: SPI polling, non-blocking, blocking, DMA blocking, DMA non blocking, and SPI loopback.

- SPI board to board:
 - Transfer data through instance 0 of SPI interface, SPI0 pins of master board are connected with SPI0 pins of slave board.
 - Ensure that all SPI board-to-board connections are kept as short as possible and that a solid ground wire is connected between the boards. Preferably this ground connection should be as close as possible to the SPI signals on each board. A poor board-to-board connection compromises data signal integrity causing failures in the example.
 - Master send an array to slave and receive the array back from slave, compare whether the two buffers are the same. Slave send back received buffer from master. Set up the slave first.
- SPI master loopback:
 - Transfer data through instance 0 of SPI interface, MISO pin and MOSI pin are connected
 - Send an array out through MISO pin and compare it with received buffer from MOSI pin

70.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the SPI example.

- FRDM-KL02Z (*) (DMA not supported)
- FRDM-KL03Z (*) (DMA not supported)
- FRDM-KL25Z (*) (DMA not supported)
- FRDM-KL26Z
- FRDM-KL27Z (*) (DMA not supported)
- FRDM-KL43Z
- FRDM-KL46Z
- MRB-KW01
- TWR-KL25Z48M (*) (DMA not supported)
- TWR-KL43Z48M
- TWR-KM34Z75M

70.3 System Requirement

70.3.1 Hardware requirements

- J-Link ARM

Getting Started

- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (Tower System/base board, ...) for specific device
- Personal Computer

70.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/spi/<use_case>/<toolchain>.
- Library dependencies: kSDK_platform_lib

70.4 Getting Started

70.4.1 Hardware settings

- SPI master loopback:
 - Transfer data through instance 0 of SPI interface, MISO pin and MOSI pin are connected
- SPI board to board:
 - Transfer data through instance 0 of SPI interface, SPI0 pins of master board are connected with SPI0 pins of slave board

<note>For the MRB-KW01: Open J3 to disconnect PTD4(PCS0) with DIO4.</note>

This example requires two separate boards. Connect instance SPI0 master to SPI0 slave:

FRDM-KL02Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	J7 pin 5	->	MISO	J7 pin 5
MOSI	J7 pin 4	->	MOSI	J7 pin 4
SCK	J7 pin 3	->	SCK	J7 pin 3
PCS0	J7 pin 6	->	PCS0	J7 pin 6
GND	J7 pin 7	->	GND	J7 pin 7

FRDM-KL03Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	J2 pin 3	->	MISO	J2 pin 3

MOSI	J2 pin 5	->	MOSI	J2 pin 5
SCK	J2 pin 4	->	SCK	J2 pin 4
PCS0	J2 pin 6	->	PCS0	J2 pin 6
GND	J2 pin 7	->	GND	J2 pin 7

FRDM-KL25Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	J1 pin 11	->	MISO	J1 pin 11
MOSI	J1 pin 1	->	MOSI	J1 pin 1
SCK	J1 pin 9	->	SCK	J1 pin 9
PCS0	J1 pin 7	->	PCS0	J1 pin 7
GND	J2 pin 14	->	GND	J2 pin 14

FRDM-KL26Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	J1 pin 9	->	MISO	J1 pin 9
MOSI	J1 pin 11	->	MOSI	J1 pin 11
SCK	J4 pin 9	->	SCK	J4 pin 9
PCS0	J1 pin 7	->	PCS0	J1 pin 7
GND	J2 pin 14	->	GND	J2 pin 14

FRDM-KL27Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	J2 pin 10	->	MISO	J2 pin 10
MOSI	J2 pin 8	->	MOSI	J2 pin 8
SCK	J2 pin 12	->	SCK	J2 pin 12
PCS0	J2 pin 6	->	PCS0	J2 pin 6
GND	J2 pin 14	->	GND	J2 pin 14

FRDM-KL43Z:

Getting Started

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO		->	MISO	
MOSI		->	MOSI	
SCK		->	SCK	
PCS0		->	PCS0	
GND		->	GND	

FRDM-KL46Z:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	J3 pin 3	->	MISO	J3 pin 3
MOSI	J3 pin 5	->	MOSI	J3 pin 5
SCK	J3 pin 7	->	SCK	J3 pin 7
PCS0	J3 pin 9	->	PCS0	J3 pin 9
GND	J3 pin 14	->	GND	J3 pin 14

MRB-KW01:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	J15 pin 20	->	MISO	J15 pin 20
MOSI	J15 pin 19	->	MOSI	J15 pin 19
SCK	J15 pin 18	->	SCK	J15 pin 18
PCS0	J14 pin 16	->	PCS0	J14 pin 16
GND	J15 pin 15	->	GND	J15 pin 15

TWR-KL43Z48M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	Primary Elevator B44	->	MISO	Primary Elevator B44
MOSI	Primary Elevator B45	->	MOSI	Primary Elevator B45

SCK	Primary Elevator B48	->	SCK	Primary Elevator B48
PCS0	Primary Elevator B46	->	PCS0	Primary Elevator B46
GND	Primary Elevator B2	->	GND	Primary Elevator B2

TWR-KL25Z48M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
MISO	Primary Elevator B44	->	MISO	Primary Elevator B44
MOSI	Primary Elevator B45	->	MOSI	Primary Elevator B45
SCK	Primary Elevator B48	->	SCK	Primary Elevator B48
PCSO0	Primary Elevator B46	->	PCSO0	Primary Elevator B46
GND	Primary Elevator B2	->	GND	Primary Elevator B2

TWR-KM34Z75M:

Master Board		Connects To	Slave Board	
Pin Name	Board Location		Pin Name	Board Location
PTG5/MISO	J13 pin 2	->	PTG5/MISO	J13 pin 2
PTG4/MOSI	J15 pin 1	->	PTG4/MOSI	J15 pin 1
PTG3/SCK	J12 pin 1	->	PTG3/SCK	J12 pin 1
PTG2/PCS0	J9 pin 2	->	PTG2/PCS0	J9 pin 2
GND	J25 Pin 26	->	GND	J25 Pin 26

70.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit

Getting Started

- No flow control
3. Download the program to the target board.
 4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

70.4.3 Run the example

70.4.3.1 SPI blocking Master - Slave

Set up the Slave first. The Slave board must be powered up first and then it echoes on the terminal:

```
SPI board-to-board blocking example
This example run on instance 0
Be sure master's SPI0 and slave's SPI0 are connected
Slave example is running...
```

Master sends an array to slave, receives the array back from slave, and compares whether the two buffers are the same. The master board prints to the terminal:

```
SPI board-to-board blocking example
This example runs on instance 0.
Be sure master's SPI0 and slave's SPI0 are connected.

Baud rate in Hz is: 500000

Master transmits:
 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
Master receives:
 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F

SPI master transfer succeed!

Press any key to run again
```

The slave board receives and prints to the terminal:

```
Slave receives:
 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
Slave example is running...
```

70.4.3.2 SPI non-blocking Master - Slave

Set up the Slave first and then the slave board echoes on the terminal:

```
SPI board-to-board non-blocking example
This example runs on instance 0.
Be sure master's SPI0 and slave's SPI0 are connected.
Slave example is running...
```

Master sends an array to slave, receives the array back from the slave, and compares whether the two buffers are the same. The master board prints to the terminal:

```
SPI board-to-board non-blocking example
This example runs on instance 0.
Be sure master's SPI0 and slave's SPI0 are connected
```

```
Baud rate in Hz is: 500000
```

```
Master transmits:
 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
 10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
 20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
 30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
Master receives:
 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
 10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
 20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
 30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
```

```
SPI master transfer succeed!
Press any key to run again
```

The slave board receives and prints to the terminal:

```
Slave receives:
 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
 10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
 20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
 30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
Slave example is running...
```

70.4.3.3 SPI DMA blocking Master - Slave

Set up the Slave first and then the slave board echoes on the terminal:

```
SPI board to board DMA blocking example
This example run on instance 0
Be sure master's SPI0 and slave's SPI0 are connected
Slave example is running...
```

Master sends an array to the slave, receives the array back from the slave, and compares whether the two buffers are the same. The master board prints to the terminal.

```
SPI board-to-board DMA blocking example
This example runs on instance 0.
Be sure master's SPI0 and slave's SPI0 are connected
```

```
Baud rate set to 500000Hz
```

```
Master transmits:
```

Getting Started

```
00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
Master receives:
00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
SPI master transfer succeed!

Press any key to run again
```

The slave board receives and prints to the terminal:

```
Slave receives:
00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
Slave example is running...
```

70.4.3.4 SPI DMA non-blocking Master - Slave

Set up the Slave first and then the slave board echoes on the terminal:

```
SPI board-to-board DMA non-blocking example
This example runs on instance 0.
Be sure master's SPI0 and slave's SPI0 are connected
Slave example is running...
```

Master sends an array to the slave, receives the array back from the slave, and compares whether the two buffers are the same. The master board prints to the terminal:

```
SPI board to board DMA non blocking example
This example runs on instance 0.
Be sure master's SPI0 and slave's SPI0 are connected

Baud rate set to 500000 Hz
Master transmits:
00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
Master receives:
00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
SPI master transfer succeeded!

Press any key to run again.
```

The slave board receives and prints to the terminal:

```
Slave receive:
00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
Slave example is running...
```

70.4.3.5 SPI polling Master - Slave

Set up the slave first and then the slave board echoes to the terminal:

```
SPI board to board polling example
This example run on instance 0
Be sure master's SPI0 and slave's SPI0 are connected
Slave example is running...
```

Master sends an array to the slave, receives the array back from the slave, and compares whether the two buffers are the same. The master board prints to the terminal:

```
SPI board to board polling example
This example run on instance 0
Be sure master's SPI0 and slave's SPI0 are connected

Baud rate in Hz is: 500000

Master transmits:
 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
 10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
 20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
 30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
Master receives:
 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
 10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
 20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
 30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
SPI master transfer succeed!

Press any key to run again
```

The slave board receives and prints on the terminal:

```
Slave receives:
 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
 10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
 20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
 30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
Slave example is running...
```

70.4.3.6 SPI loopback

These instructions are displayed/shown on the terminal window:

```
SPI loopback example
This example runs on instance 0.
Be sure MISO-to-MOSI are connected

Baud rate in Hz is: 500000

Master transmits:
 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
 10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
 20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
 30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
Master receives:
```

Getting Started

```
00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F
10 11 12 13 14 15 16 17 18 19 1A 1B 1C 1D 1E 1F
20 21 22 23 24 25 26 27 28 29 2A 2B 2C 2D 2E 2F
30 31 32 33 34 35 36 37 38 39 3A 3B 3C 3D 3E 3F
SPI master transfer succeed!
```

Press any key to run again

Chapter 71

SPI SDCard Example

71.1 Overview

The SPI SDCard Example application demonstrates the use of SD card driver with SPI. This example doesn't support SD card memory that is greater than 2 GB)

- Detect card inserted
- Check card status: lock or unlock (detect by hardware pin)
- Read and write single block and multi-blocks to SDCard
- Erase blocks in SDCard

71.2 Supported Platforms

These Freescale Tower System modules are supported by the SPI SDCard example.

- TWR-K22F120M
- TWR-K24F120M
- TWR-KV31F120M

71.3 System Requirement

71.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, TWR-MEM board...) for specific device
- Personal Computer

71.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/spi_sdcard/<toolchain>.
- Library dependencies: ksdk_platform_lib

71.4 Getting Started

71.4.1 Hardware settings

The SPI SDCard Example project does not require any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in

Getting Started

default state when running this example. If there is not any built-in SDCard slot on the board, the TWR--MEM Tower System module is required to run this example.

71.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

71.4.3 Run the example

Ensure that the card doesn't contain any important content because the demo erases and overwrites some sectors.

These instructions are displayed/shown on the terminal window:

```
SPI SD Card Demo Start!
BaudRate set to 375000Hz
BaudRate set to 2000000Hz
----- Card Information -----
Card Type: SDSC
Card Capacity: 1.97 GB
----- Card CID -----
Manufacturer ID: 0x2
OEM ID: 0x544D
Product name: SA02G
Product revision: 0.5
Product serial number: 0x2080728A
Manufacturing data: Aug 2010
----- Card CSD -----
CSD Structure: 0x0
taac: 2000.00 us
nsac: 0 clks
tran speed: 25000000.00 kbps
ccc: class 0 2 4 5 7 8 10
max read block length: 1024 Bytes
max write block length: 1024 Bytes
Support partial read
Support crossing physical block boundaries reading is allowed
VDD_R_CURR_MIN: 0x7
VDD_R_CURR_MAX: 0x1
VDD_W_CURR_MIN: 0x7
VDD_W_CURR_MAX: 0x3F
c_size_mult: 7
c_size: 3763
Erase unit size is one or multiple units of 512 bytes
The size of write protected group is 2 blocks
```

```
R2W_Factor: 2
Hard disk-like file system with partition table

Start read/write example...
Single block read/write example passed!
Writing 4096 bytes for 100 times in 2502 ms, at 163 kB/s
Reading 4096 bytes for 100 times in 2164 ms, at 189 kB/s
Multi-block read/write example passed!

SPI SD Card Demo End!
```


Chapter 72

TPM Example

72.1 Overview

The TPM Example project is a demonstration program that uses the KSDK software to generate square pulse PWM to control a LED brightness.

- TPM generate a PWM with increasing duty cycle and then decreasing
- LED is firstly brighter and then dimmer, continuously

72.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the TPM example.

- FRDM-KL02Z
- FRDM-KL03Z
- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL27Z
- FRDM-KL43Z
- FRDM-KL46Z
- FRDM-KW40Z
- TWR-KL43Z48M
- USB-KW40Z

NOTE: The TWR-K65F180M does not have a suitable LED. The PWM signal is connected to the elevator board connector B52.

72.3 System Requirement

72.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

72.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/tpm/<toolchain>.

Getting Started

- Library dependencies: ksdk_platform_lib

72.4 Getting Started

72.4.1 Hardware settings

The TPM Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

72.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

72.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
See the change of LED brightness
```

After that, LED bright is first increasing and then LED becomes dimmer, continuously.

Chapter 73

TSI Example

73.1 Overview

The TSI Example project is a demonstration program that uses the KSDK software to demonstrate how to use touch sensor interface. This example turns on LEDs when the board is in a touch state. Otherwise, LEDs are turned it off.

73.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the TSI example.

- FRDM-KL25Z
- FRDM-KL26Z
- FRDM-KL46Z
- FRDM-KW40Z
- TWR-K65F180M
- TWR-K80F150M

73.3 System Requirement

73.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

73.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/tsi/<toolchain>.
- Library dependencies: ksdk_platform_lib

73.4 Getting Started

73.4.1 Hardware settings

The TSI Example project does not require any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state

Getting Started

when running this example.

73.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

73.4.3 Run the example

These instructions are displayed/shown on the terminal window:

```
Touch Sensing input example  
Touching for turning led on
```

After that, the LED brightness toggles after each touch state change.

Chapter 74

Universal Asynchronous Receiver/Transmitter (UART) Example with other methods

74.1 Overview

This UART example application demonstrates the KSDK Peripheral drivers with different methods.

- Using blocking method
- Using non-blocking method
- Using DMA blocking method
- Using DMA non-blocking method
- Using polling method

Transfer data between the board and the PC. The board transfers and receives characters the UART interface. Type characters from the keyboard and the board receives and then echoes them to the terminal screen. See instructions output to the terminal.

74.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the UART example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KL03Z (*) (eDMA not supported)
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24 (*) (eDMA not supported)
- TWR-K21D50M (*) (eDMA not supported)
- TWR-K21F120M (*) (eDMA not supported)
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M (*) (eDMA not supported)
- TWR-K64F120M
- TWR-K65F180M
- TWR-KL43Z48M (*) (eDMA not supported)
- TWR-KM34Z75M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512 (*) (eDMA not supported)

Getting Started

74.3 System Requirement

74.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal
- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

74.3.2 Software requirements

- The project files are in: `<SDK_Install>/examples/<board>/driver_examples/uart/<use_-case>/<toolchain>`.
- Library dependencies: `ksdk_platform_lib`

74.4 Getting Started

74.4.1 Hardware settings

The UART Example project does not require any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

74.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

74.4.3 Run the example

74.4.3.1 UART blocking

These instructions are displayed/shown on the terminal window:

```
+++++++ UART Send/Receive Blocking Example ++++++
```

Type the characters on the keyboard and the board receives and then echoes them to terminal screen.

Type the characters on the keyboard and the board receives and then echoes them to terminal screen.

74.4.3.2 UART non-blocking

These instructions are displayed/shown on the terminal window:

```
+++++++ UART Send/Receive Non Blocking Example ++++++
```

Type the characters on the keyboard and the board receives and then echoes them to terminal screen.

Type the characters on the keyboard and the board receives and then echoes them to terminal screen.

74.4.3.3 UART DMA blocking

These instructions are displayed/shown on the terminal window:

```
+++++++ UART-DMA Send/Receive Blocking Example ++++++
```

Type the characters on the keyboard and the board receives and then echoes them to terminal screen.

Type the characters on the keyboard and the board receives and then echoes them to terminal screen.

74.4.3.4 UART DMA non-blocking

These instructions are displayed/shown on the terminal window:

```
+++++++ UART-DMA Send/Receive Non Blocking Example ++++++
```

Type characters from keyboard, the board receives and then echoes them to the terminal screen.

Type the characters on the keyboard and the board receives and then echoes them to terminal screen.

Getting Started

74.4.3.5 UART polling

These instructions are displayed/shown on the terminal window:

```
+++++++ UART Send/Receive Polling Example ++++++
```

```
Type the characters on the keyboard and the board receives and then echoes them to terminal screen.
```

Type the characters on the keyboard and the board receives and then echoes them to terminal screen.

Chapter 75

WDOG Example

75.1 Overview

The WDOG Example project is a demonstration program that uses the KSDK software to show a simple application that enables Watchdog, then continuously refreshes the watchdog to prevent CPU reset. Upon SW button push, the Watchdog expires after approximately 2 seconds and the chip resets.

- Combine refresh and reset operation on WDOG timer
- Use a SW to start WDOG. When SW is pressed, WDOG begins to expire.
- Use a LED to indicate reset process. At first, LED is turned on, when SW is pressed, LED start blinking and after resetting LED is turned off. And then, LED is turned on after reset is success.

75.2 Supported Platforms

These Freescale Freedom development platforms and Tower System modules are supported by the WDOG example.

- FRDM-K22F
- FRDM-K64F
- FRDM-KV10Z
- FRDM-KV31F
- FRDM-KW24
- TWR-K21D50M
- TWR-K21F120M
- TWR-K22F120M
- TWR-K24F120M
- TWR-K60D100M
- TWR-K64F120M
- TWR-K65F180M
- TWR-K80F150M
- TWR-KM34Z75M
- TWR-KV10Z32
- TWR-KV11Z75M
- TWR-KV31F120M
- TWR-KW24D512

75.3 System Requirement

75.3.1 Hardware requirements

- J-Link ARM
- P&E Micro Multi-link universal

Getting Started

- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (tower/base board, ...) for specific device
- Personal Computer

75.3.2 Software requirements

- The project files are in: <SDK_Install>/examples/<board>/driver_examples/wdog/<toolchain>.
- Library dependencies: ksdk_platform_lib

75.4 Getting Started

75.4.1 Hardware settings

The WDOG Example project does not call for any special hardware configurations. Although not required, the recommendation is to leave the development board's jumper settings and configurations in default state when running this example.

75.4.2 Prepare the example

1. Connect a USB cable between the PC host and the OpenSDA USB port on the board.
2. Open a serial terminal with these settings:
 - 115200 baud rate
 - 8 data bits
 - No parity
 - One stop bit
 - No flow control
3. Download the program to the target board.
4. Either press the reset button on your board or launch the debugger in your IDE to begin running the example.

75.4.3 Run the example

These instructions are displayed/shown on the terminal window:

WDOG example

```
Press SW to expire watchdog
WDOG reset occurred
Press SW to expire watchdog
WDOG reset occurred
Press SW to expire watchdog
```

After that, user need press the SW (*) button on board and observe a LED toggle for showing that the watchdog is about to expire.

Chapter 76 Revision History

This table summarizes revisions to this document.

Revision history

Revision number	Date	Substantive changes
0	09/2015	Initial release

How to Reach Us:

Home Page:

freescale.com

Web Support:

freescale.com/support

Information in this document is provided solely to enable system and software implementers to use Freescale products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document.

Freescale reserves the right to make changes without further notice to any products herein. Freescale makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including "typicals," must be validated for each customer application by customer's technical experts. Freescale does not convey any license under its patent rights nor the rights of others. Freescale sells products pursuant to standard terms and conditions of sale, which can be found at the following address:

freescale.com/SalesTermsandConditions.

Freescale, the Freescale logo, Kinetis, Processor Expert are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. Tower is a trademark of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners. ARM, ARM Powered logo, Keil, and Cortex are registered trademarks of ARM Limited (or its subsidiaries) in the EU and/or elsewhere. All rights reserved.

© 2015 Freescale Semiconductor, Inc.

